

[Manuals.plus](#) /

› [Briloner](#) /

› BRILONER LED Cordless Dimmable Table Lamp 7448-014 User Manual

Briloner 7448-014

BRILONER LED Cordless Dimmable Table Lamp

Model: 7448-014

1. INTRODUCTION

This manual provides comprehensive instructions for the BRILONER LED Cordless Dimmable Table Lamp, Model 7448-014. This battery-powered, touch-controlled lamp offers warm white illumination (3300K) with adjustable brightness, designed for versatile placement both indoors and outdoors. Please read these instructions carefully before use to ensure proper operation and longevity of your product.



Image 1.1: BRILONER LED Cordless Dimmable Table Lamp in a bedroom setting.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Inspect the lamp for any signs of damage. Retain packaging for future storage or transport.

2.2 Assembly

The lamp consists of a base unit and a glass shade. Place the cylindrical glass shade securely onto the lamp base. Ensure it is seated properly to prevent accidental dislodgement.

2.3 Initial Charging

Before first use, fully charge the lamp. Connect the provided 2-meter USB cable to the charging port on the lamp base

and to a suitable USB power adapter (not included). The charging indicator light will illuminate during charging and turn off or change color when fully charged. A full charge provides up to 5 hours of operation.



Image 2.1: Charging port and included USB cable.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Brightness Adjustment

The lamp features a touch-sensitive control located on the top surface of the base. To operate:

1. **To turn on:** Lightly touch the control area once. The lamp will illuminate at its lowest brightness setting.
2. **To adjust brightness:** Touch the control area repeatedly to cycle through 3 brightness levels.
3. **To turn off:** After cycling through all brightness levels, touch the control area one more time to turn the lamp off.



Image 3.1: Touch control area on the lamp base.

3.2 Battery Life

When fully charged, the integrated rechargeable battery provides up to 5 hours of continuous illumination, depending on the selected brightness level.

4. MAINTENANCE

4.1 Cleaning

To clean the lamp, ensure it is turned off and disconnected from any charging source. Use a soft, dry cloth to wipe the base. For the glass shade, a slightly damp cloth can be used, followed by a dry cloth to prevent water spots. Do not use abrasive cleaners or solvents, as these may damage the finish or electronic components.

4.2 Battery Care

To maximize battery life, avoid fully discharging the lamp frequently. Recharge the lamp when the light output becomes noticeably dim. If storing the lamp for an extended period, ensure it is fully charged before storage and recharge it every 3-6 months to maintain battery health.

5. TROUBLESHOOTING

- **Lamp does not turn on:** Ensure the lamp is charged. Connect it to a USB power source and allow it to charge for at least 30 minutes before attempting to turn it on again. Verify the touch control area is clean and unobstructed.
- **Lamp does not charge:** Check that the USB cable is securely connected to both the lamp and the power adapter. Try using a different USB cable or power adapter to rule out faulty accessories.
- **Light output is dim:** The battery may be low. Recharge the lamp fully.
- **Inconsistent touch response:** Ensure the touch control area is clean and dry. Avoid touching the area with wet hands or gloves.

If the issue persists after attempting these troubleshooting steps, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model Number	7448-014
Brand	Briloner
Dimensions (HxD)	245 x 125 mm (9.65 x 4.92 inches)
Weight	1 kg (2.2 lbs)
Light Source	Integrated LED
Power Consumption	3 Watts
Luminous Flux	350 Lumens
Color Temperature	3300K (Warm White)
Brightness Levels	3 (Touch Dimmable)
Battery Type	Rechargeable (Integrated)
Battery Life	Up to 5 hours (fully charged)
Charging Cable	2-meter USB cable (included)
Shade Material	Glass
Base Material	Metal (Chrome Matte)
Country of Origin	China

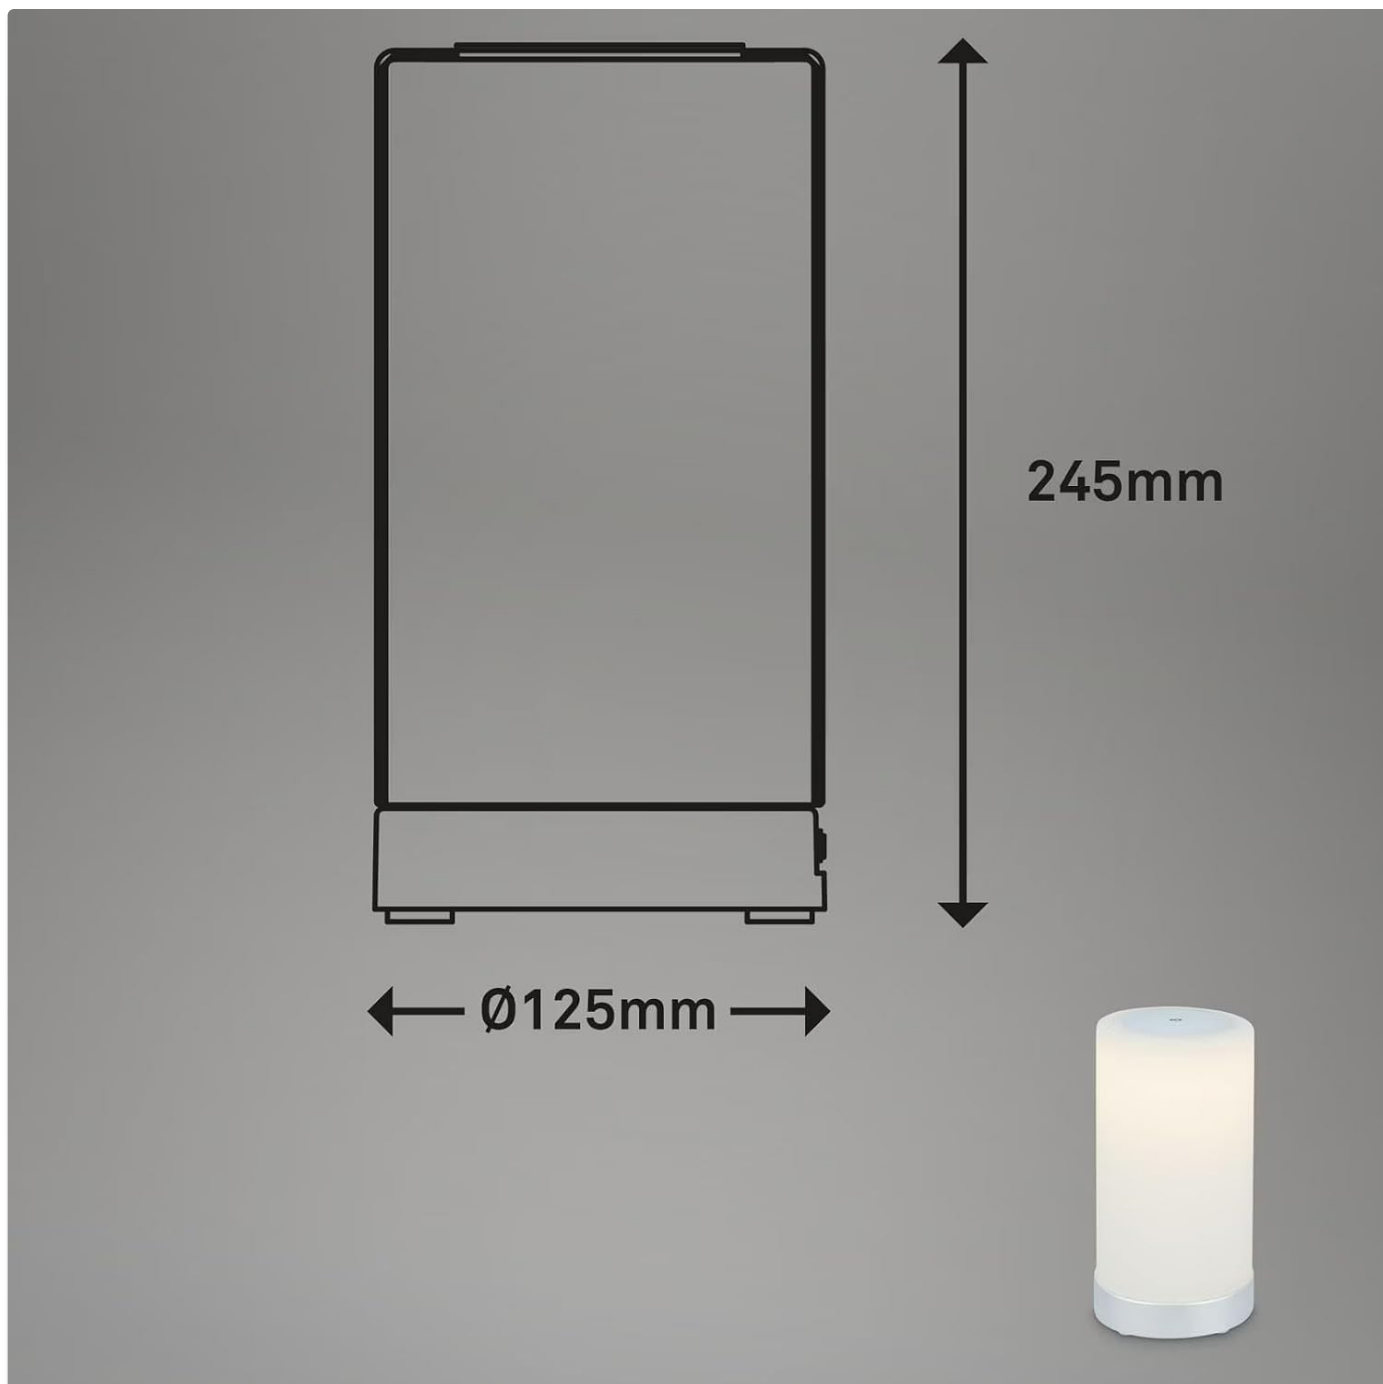


Image 6.1: Product dimensions diagram.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This BRILONER product is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Briloner customer support. Contact details can typically be found on the Briloner official website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BDZL395W>

More documents and user manuals: <https://manuals.plus/>