

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Briloner](#) /

› [BRILONER LED Battery Table Lamp 7447-011 User Manual](#)

Briloner 7447-011

BRILONER LED Battery Table Lamp

MODEL: 7447-011 USER MANUAL

1. Introduction

Thank you for choosing the BRILONER LED Battery Table Lamp, Model 7447-011. This portable and versatile lamp features an integrated rechargeable battery, a 3-step touch dimming function, and emits a warm white light at 3300K. Its wireless design allows for flexible placement in various indoor and outdoor settings. This manual provides essential information for the safe and efficient use of your new lamp.





Image: The BRILONER LED Battery Table Lamp with its fabric shade and matte chrome base.

2. Safety Instructions

Please read these safety instructions carefully before using the lamp and retain them for future reference.

- Do not expose the lamp to extreme temperatures, direct sunlight, or high humidity.
- This lamp is rated IP20, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. Avoid placing it in wet environments.
- Do not attempt to disassemble, repair, or modify the lamp. This may void the warranty and pose a safety risk.
- Use only the provided USB cable for charging.
- Keep the lamp away from children and pets.
- Ensure the lamp is placed on a stable, flat surface to prevent tipping.

3. Package Contents

Verify that all components are present in the package:

- 1 x BRILONER LED Battery Table Lamp (Model 7447-011)
- 1 x USB Charging Cable (2 meters)

4. Setup

1. **Unpack:** Carefully remove the lamp and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the lamp. Connect the provided USB cable to the charging port on the lamp's base and to a suitable USB power source (e.g., computer, USB wall adapter). A full charge typically takes approximately 3 hours.
3. **Placement:** Place the lamp on a stable, dry surface. Its wireless design allows for versatile placement on dining tables, garden tables, balconies, windowsills, or sideboards.

5. Operating Instructions

5.1. Charging the Lamp

The lamp features an integrated rechargeable battery. When the battery is low, the light output may decrease. To charge:

1. Locate the charging port on the base of the lamp. It is typically covered by a small rubber cap.
2. Connect the small jack end of the provided 2-meter USB cable into the lamp's charging port.
3. Connect the USB-A end of the cable to a powered USB port (e.g., a computer, a USB wall adapter, or a power bank).
4. Allow approximately 3 hours for a full charge. A fully charged lamp provides up to 5 hours of operation.



Aufladbar via USB
Rechargeable via USB

Image: The USB charging port on the lamp's base and the included USB charging cable.

5.2. Power On/Off

To activate the lamp:

1. Ensure the lamp is charged.
2. Locate the ON/OFF switch on the underside of the lamp's base and set it to the 'ON' position.
3. To turn the light on, gently touch the touch control area located on the top surface of the lamp shade.
4. To turn the light off, continue touching the control area until the lamp cycles through all brightness levels and then turns off.

5.3. Dimming Function

The lamp features a 3-step touch dimming function, allowing you to adjust the brightness to your preference:

- **1st Touch:** Turns the lamp ON at 25% brightness.
- **2nd Touch:** Increases brightness to 50%.
- **3rd Touch:** Increases brightness to 100%.
- **4th Touch:** Turns the lamp OFF.



Image: Illustration of the 3-step dimming function activated by touching the top of the lamp.



In 3 Stufen dimmen durch einfaches antippen
Dim in 3 levels by simple tap



Image: Close-up view of the touch control panel located on the top surface of the lamp.

6. Maintenance

- Cleaning:** Disconnect the lamp from any charging source. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the lamp for an extended period, charge it to about 50% and recharge every few months.
- Shade Care:** The fabric shade can be gently dusted. Avoid getting it wet.

7. Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is discharged. ON/OFF switch is in 'OFF' position.	Charge the lamp fully. Ensure the ON/OFF switch on the base is set to 'ON'.

Problem	Possible Cause	Solution
Lamp does not charge.	USB cable not properly connected. USB power source is not active. Damaged USB cable or charging port.	Ensure the USB cable is securely connected to both the lamp and the power source. Try a different USB port or power adapter. Contact customer support if you suspect damage.
Dimming function not working.	Touch control area not properly engaged. Lamp malfunction.	Ensure you are touching the designated area on the top of the lamp shade. Try turning the lamp off and on again. If the issue persists, contact customer support.

8. Specifications

- Model Number:** 7447-011
- Dimensions (HxD):** 300 mm x 125 mm (Shade diameter: 150 mm)
- Light Source:** Integrated LED
- Color Temperature:** 3300K (Warm White)
- Luminosity:** 350 Lumens
- Power Consumption:** 3 Watts
- Battery Life:** Up to 5 hours (fully charged)
- Charging Time:** Approximately 3 hours
- Charging Interface:** USB (via included 2-meter cable)
- Material:** Metal base, fabric shade
- Protection Class:** IP20

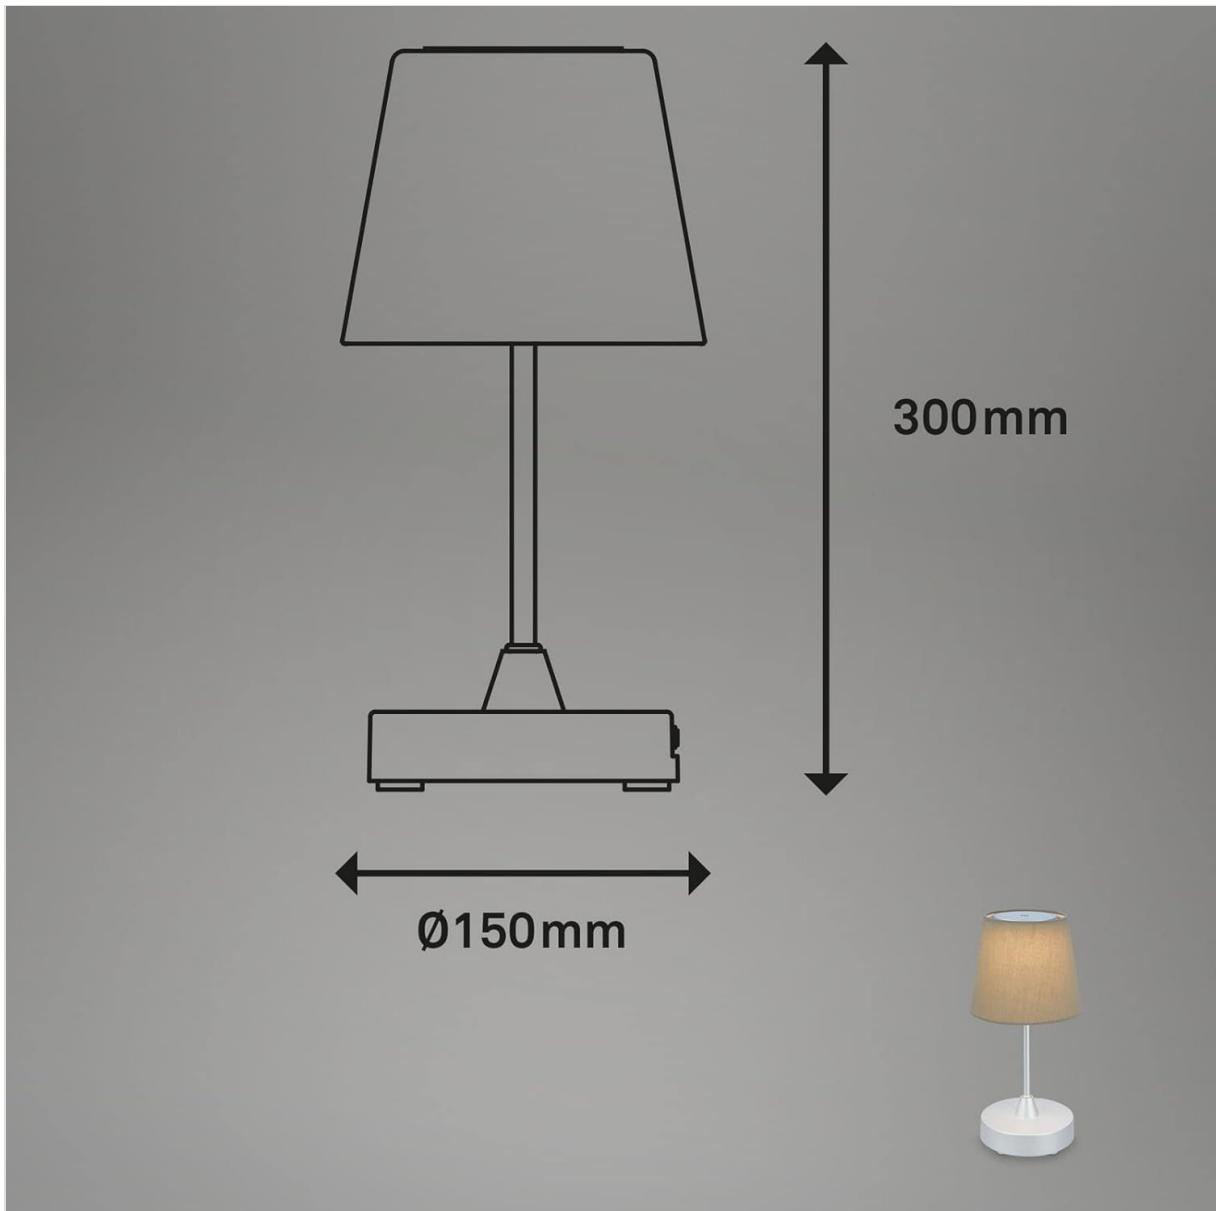


Image: Diagram illustrating the dimensions of the BRILONER LED Battery Table Lamp.

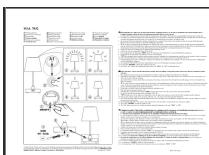
9. Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. You may also visit the official Briloner website for further assistance.

Briloner Website: www.briloner.com

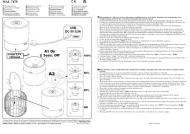
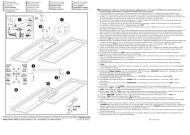
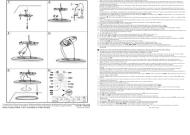
© 2023 Briloner. All rights reserved.

Related Documents - 7447-011



[MAL 7032 LED Outdoor Lamp - Mounting and Safety Instructions](#)

Comprehensive mounting instructions and safety guidelines for the Briloner MAL 7032 LED outdoor lamp. Learn how to assemble and safely use this IP44 rated, dimmable outdoor lamp.

	<p><u>Briloner MAL 7479 LED Rechargeable Table Lamp - Safety and Operating Instructions</u></p> <p>Detailed safety instructions, operating guide, and specifications for the Briloner MAL 7479 LED rechargeable table lamp. Includes information on usage, maintenance, disposal, and features like IP44 rating and USB charging.</p>
	<p><u>Briloner MAL 3754 LED Light Fixture: Installation, Operation, and Safety Guide</u></p> <p>Detailed user manual for the Briloner MAL 3754 LED light fixture, covering installation, safety precautions, remote control functions, troubleshooting, and compliance information.</p>
	<p><u>Briloner MAL 769401x LED Lamp Installation and Safety Guide</u></p> <p>Installation and safety guide for the Briloner MAL 769401x LED lamp, detailing mounting steps, remote control functions, and essential safety precautions for indoor use.</p>
	<p><u>Briloner MAL 3701 LED Ceiling Light - Installation and User Guide</u></p> <p>Comprehensive guide for installing and operating the Briloner MAL 3701 LED ceiling light. Learn about features like adjustable color temperature (3000K-6500K), dimming, timer, night light, and memory function, controlled via remote.</p>
	<p><u>MAL 3362-116 LED Ceiling Light with Motion Detector - Installation Guide</u></p> <p>Installation and safety instructions for the Briloner MAL 3362-116 LED ceiling light with integrated motion detector. Features IP44 rating, adjustable sensitivity, time delay, and lux level for indoor use.</p>