

[Manuals.plus](#) /

› [Ergobaby](#) /

› Ergobaby Evolve 3-in-1 Bouncer User Manual

Ergobaby EVLBNCLTGRYNA

Ergobaby Evolve 3-in-1 Bouncer User Manual

Model: EVLBNCLTGRYNA

Brand: Ergobaby

INTRODUCTION

The Ergobaby Evolve 3-in-1 Bouncer is designed to adapt to your child's growth, serving as a cozy newborn lounger, a relaxing infant bouncer, and a functional toddler chair. This manual provides essential information for the safe and proper use, assembly, and maintenance of your bouncer.



The Ergobaby Evolve 3-in-1 Bouncer, shown in light grey, is designed to provide a comfortable and secure space for infants and toddlers.

SAFETY INFORMATION

- Always use the harness system to secure your child in the bouncer.
- Never leave your child unattended in the bouncer.
- Do not use the bouncer on elevated surfaces. Always place it on the floor.
- Discontinue use of the newborn insert once your child can sit up unassisted.
- For low birthweight babies and children with medical conditions, consult a healthcare professional before using the product.
- Ensure the bouncer is on a stable, flat surface before placing your child in it.

COMPONENTS

The Ergobaby Evolve 3-in-1 Bouncer includes the main bouncer frame, the fabric seat with integrated harness, and a removable newborn insert.




This diagram points out key features of the bouncer, including the supportive newborn insert, two-zone fabric, easy height adjustments, and its design to help prevent flat head syndrome. It also notes that it's designed with a pediatric orthopedist, is machine washable, and comes with the ErgoPromise Lifetime Guarantee.

SETUP

The Ergobaby Evolve Bouncer is designed for easy setup. Simply unfold the frame and ensure it clicks securely into place. Attach the fabric seat to the frame according to the instructions provided in the full user manual. The newborn insert can be easily placed or removed as needed.

Fits Perfectly into Your Life

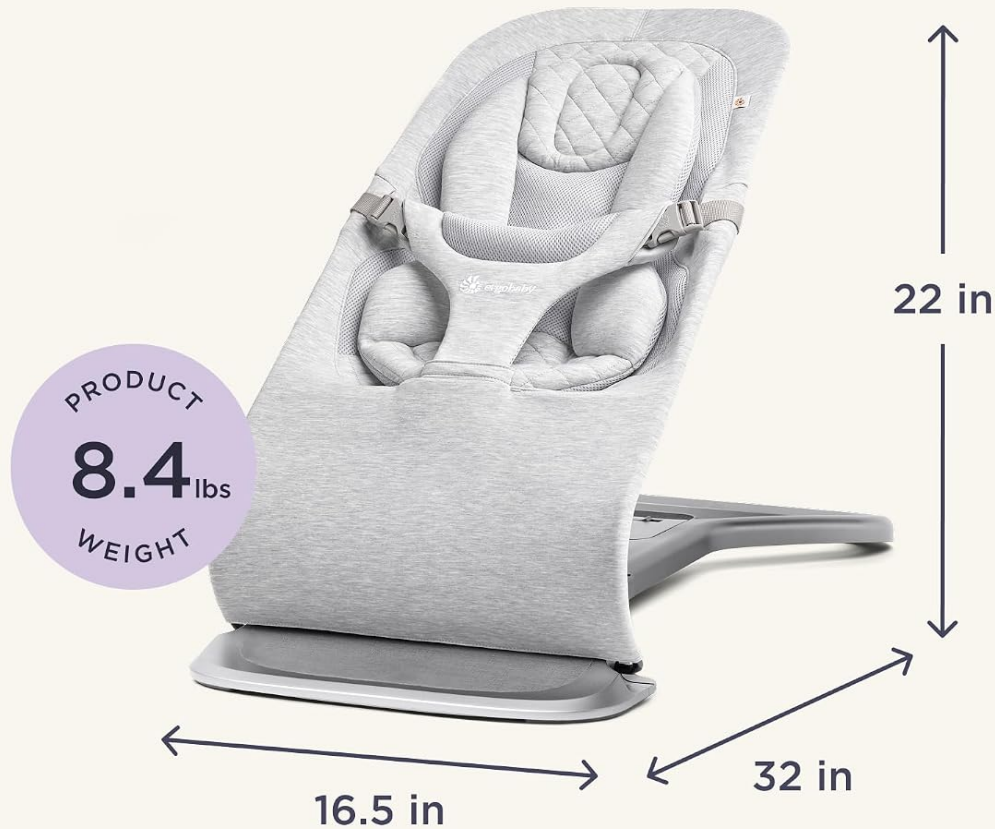

Weight Range: 5.5 lbs - 29lbs
Age Range: Newborn - Toddler

The bouncer is designed to fold flat, making it easy to transport and store, as demonstrated by a person holding the compact unit.

OPERATING INSTRUCTIONS

Adjusting Height Positions

The bouncer features three adjustable heights to accommodate your child's development. Use the step pedal located at the base to easily switch between positions:

- **Lowest Position:** Ideal for newborns, providing full support with the included newborn insert.
- **Middle Position:** Allows infants to gently rock themselves, promoting self-soothing.
- **Highest Position:** Perfect for curious toddlers, transforming into a comfortable seat for reading or play.



Soft Knit + Breathable Mesh

The Ergobaby Evolve Bouncer adapts to three stages: Newborn (with insert for full support), Infant (allowing gentle self-rocking), and Toddler (as a comfortable seat).

Harness System

The clip-in adjustable harness ensures your child's safety and stability. Always secure the harness snugly around your child when they are in the bouncer.




A newborn baby is shown comfortably nestled in the bouncer, demonstrating the supportive newborn insert that provides head-to-hip support.

MAINTENANCE

Cleaning Instructions

The fabric seat cover is machine washable for easy cleaning. Remove the cover from the frame before washing. Follow the care instructions on the label. For minor spills, wipe down with a damp cloth.

Loaded with Features

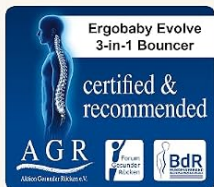

A detailed view of the bouncer's fabric, showcasing the combination of soft knit material for comfort and breathable mesh for optimal airflow.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bouncer not rocking smoothly	Uneven surface; debris under base.	Ensure bouncer is on a flat, level surface. Check for and remove any obstructions under the base.
Difficulty adjusting height	Mechanism not fully disengaged/engaged.	Press the foot pedal firmly and ensure the seat is lifted or lowered completely until it locks into the desired position.
Fabric cover difficult to remove/attach	Incorrect attachment points.	Refer to the full user manual for detailed instructions on removing and attaching the fabric cover. Ensure all loops and clips are correctly aligned.

SPECIFICATIONS

Product Dimensions: 32 x 16.5 x 22 inches

Item Model Number: EVLBNCLTGRYNA

Maximum Weight Recommendation: 29 Pounds (13 kg)

Material Type: Plastic, Polyester

Material Composition: 100% Polyester (Mesh), 79% Polyester / 17% Rayon / 4% Spandex (Ponte Knit), 100% Cotton (Twill)

Care Instructions: Machine Washable

Additional Features: Ergonomic, Height Adjustable, Multiple Positions, Portable

Batteries Required: No

Item Weight: 8.4 pounds

Color: Light Grey

Three Modes to Grow



Newborn



Infant



Toddler

Parents.
**BEST
FOR BABY**
2025

TM

This image illustrates the compact dimensions of the Ergobaby Evolve Bouncer, highlighting its suitability for various living spaces. It measures 32 inches long, 16.5 inches wide, and 22 inches high, with a weight range of 5.5 lbs to 29 lbs, suitable for newborns to toddlers.

WARRANTY & SUPPORT

The Ergobaby Evolve 3-in-1 Bouncer is covered by the [ErgoPromise Lifetime Guarantee](#). For detailed warranty information and support, please refer to the official Ergobaby website or the full user manual.

For a comprehensive guide and additional details, please download the official [User Manual \(PDF\)](#).

© 2024 Ergobaby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question