

Easytry14813

# Instruction Manual

## GENERIC REPLACEMENT REMOTE CONTROL

Model: Easytry14813

### INTRODUCTION

---

This manual provides instructions for the Generic replacement remote control, model Easytry14813. This remote is designed to operate various AC air conditioner units, including specific Whirlpool DG11F1-03(WLP) and NEC RWC series models. Please note that as a replacement unit, some advanced functions of your original remote may not be supported. This remote operates using infrared technology.

### SETUP: BATTERY INSTALLATION

---

The remote control requires AAA batteries for operation. Batteries are not included with the remote. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Image: Back of the remote control with the battery compartment open, illustrating where to insert AAA batteries.*



*Image: Back of the remote control with the battery compartment cover securely closed after battery installation.*

Once batteries are installed, the remote is ready for use. No additional programming is typically required.

## **OPERATING INSTRUCTIONS**

---

Point the remote control directly at the infrared receiver on your air conditioner unit. Ensure there are no obstructions between the remote and the unit.



Image: Front view of the remote control, highlighting the button layout.

### Button Functions:

- **Power:** Turns the air conditioner unit ON or OFF.
- **Mode:** Cycles through available operating modes (e.g., Cool, Fan, Dry, Heat, Auto).
- **Fan Speed:** Adjusts the fan speed (e.g., High, Mid, Low, Auto).
- **Temp/Time (+):** Increases temperature setting or timer duration.
- **Temp/Time (-):** Decreases temperature setting or timer duration.
- **Power Saver:** Activates or deactivates power-saving mode, if supported by the AC unit.
- **Timer:** Sets or cancels the timer function for automatic ON/OFF operation.

**Important Note:** This replacement remote may not support all advanced features or specific functions present on your original air conditioner remote. Specifically, this remote cannot change temperature units between Celsius and Fahrenheit.

### MAINTENANCE

---

- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace all batteries at the same time with new ones of the same type. Do not mix old and new batteries or different types of batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

### TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none"> <li>• Dead or incorrectly installed batteries.</li> <li>• Obstruction between remote and AC unit.</li> <li>• Remote is too far from the AC unit.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries with new AAA batteries, ensuring correct polarity.</li> <li>• Remove any objects blocking the line of sight to the AC unit's infrared receiver.</li> <li>• Move closer to the AC unit.</li> </ul>
Some functions do not work.	<ul style="list-style-type: none"> <li>• This is a replacement remote.</li> <li>• Specific functions may not be supported.</li> </ul>	<ul style="list-style-type: none"> <li>• Confirm if the function was explicitly listed in the operating instructions.</li> <li>• Understand that replacement remotes may have limited functionality compared to original equipment.</li> <li>• Note that Celsius/Fahrenheit conversion is not supported.</li> </ul>

## SPECIFICATIONS

---

- **Brand:** Generic
- **Model:** Easytry14813
- **Compatible Devices:** AC Air Conditioner units (Whirlpool DG11F1-03(WLP), NEC RWC-2117, RWC-3217, RWC-4717, RWC-2518, RWC-2517)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Cannot change temperature display from Celsius to Fahrenheit.

## WARRANTY INFORMATION

---

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation or contact the seller for specific warranty terms and duration.

## CUSTOMER SUPPORT

---

For technical assistance, troubleshooting, or inquiries regarding this product, please contact the seller or the manufacturer directly through the platform where the purchase was made. Provide your order number and product model (Easytry14813) for faster service.