

[Manuals.plus](#) /

> [UPBRIGHT](#) /

> UpBright 9V AC/DC Adapter Instruction Manual for Wockoder Turntables

UPBRIGHT UpBright 9V AC/DC Adapter

UpBright 9V AC/DC Adapter Instruction Manual

For Wockoder KD-3010, KD-3010BL, KD-3011, KD-3011BL, KD-7001, KD-7001BL Turntables

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your UpBright 9V AC/DC Adapter. This power supply is designed to provide reliable power to compatible Wockoder Wireless Portable Briefcase Turntable Vinyl Sound Suitcase Record Players, including models KD-3010, KD-3010BL, KD-3011, KD-3011BL, KD-7001, and KD-7001BL. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Use only with devices that require a 9V DC input and a current draw of 1.5A or less. Exceeding these specifications can damage the adapter or the connected device.
- Ensure the adapter's plug type matches your wall outlet.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or repair the adapter. Refer all servicing to qualified personnel.
- Keep out of reach of children.

3. SETUP AND CONNECTION

Follow these steps to properly connect your UpBright 9V AC/DC Adapter to your compatible Wockoder turntable:

1. **Verify Compatibility:** Confirm that your Wockoder turntable model (e.g., KD-3010, KD-3010BL, KD-3011, KD-3011BL, KD-7001, KD-7001BL) requires a 9V DC power input. Check your turntable's original manual or specifications.
2. **Inspect the Adapter:** Before connecting, visually inspect the adapter for any signs of damage to the casing or cable. Do not use if damaged.
3. **Connect to Device:** Locate the DC input port on your Wockoder turntable. Carefully insert the barrel connector of the UpBright adapter into this port. Ensure a snug fit.
4. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard 100-240VAC 50/60Hz wall outlet.

5. **Power On:** Once connected, you can power on your Wockoder turntable according to its operating instructions.



Image 1: The UpBright 9V AC/DC Adapter, showing the US-style wall plug and the barrel connector for the device.



Image 2: Another view of the UpBright 9V AC/DC Adapter, highlighting its compact design.

4. OPERATING INSTRUCTIONS

The UpBright 9V AC/DC Adapter operates automatically once connected to a power source and a compatible device. It provides a stable 9V DC output to power your Wockoder turntable.

- Ensure the adapter is firmly plugged into both the wall outlet and the turntable.
- The adapter is designed for continuous use within its specified voltage and current limits.
- It features OVP (Over Voltage output Protection), OCP (Over Current output Protection), and SCP (Short Circuit

output Protection) to safeguard both the adapter and your connected device.

5. CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your UpBright AC/DC Adapter, follow these maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:** Do not pull on the cable to disconnect the adapter from the wall or device. Always grasp the plug or connector directly. Avoid placing heavy objects on the cable or bending it sharply.

6. TROUBLESHOOTING

If you experience issues with your UpBright 9V AC/DC Adapter, refer to the following common problems and solutions:


Problem	Possible Cause	Solution
Device not powering on.	Adapter not fully plugged in. Wall outlet is not active. Device requires different voltage/current. Damaged adapter or cable.	Ensure both ends of the adapter are securely connected. Test the wall outlet with another device. Verify your device's power requirements. This adapter is 9V DC, 1.5A. Inspect the adapter for visible damage. If damaged, discontinue use and replace.
Adapter feels unusually hot.	Overloaded (device drawing too much current). Poor ventilation.	Ensure the connected device's current draw does not exceed 1.5A. Ensure the adapter is in a well-ventilated area, not covered. If overheating persists, discontinue use.
Intermittent power to device.	Loose connection. Damaged cable or connector.	Check all connections for tightness. Inspect the cable and barrel connector for bends or breaks.

If troubleshooting steps do not resolve the issue, please contact UpBright customer support.

7. PRODUCT SPECIFICATIONS

- **Input Voltage:** 100-240VAC, 50/60Hz (Worldwide compatible)
- **Output Voltage:** 9V DC
- **Output Current:** 1.5A (1500mA)
- **Connector Type:** Barrel Connector
- **Protection Features:** OVP (Over Voltage output Protection), OCP (Over Current output Protection), SCP (Short Circuit output Protection)
- **Product Dimensions:** Approximately 4 x 3 x 2 inches (L x W x H)
- **Item Weight:** Approximately 4 ounces
- **Manufacturer:** UpBright

Come With A Suitable Outlet Adapter (Only One) to Fit
Your Country/Area For International Order

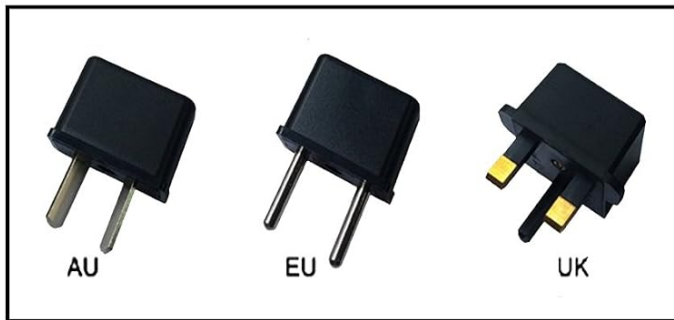

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Image 3: Example of international outlet adapters that may be included with the product for international orders, alongside a representation of the UpBright Limited Warranty Certificate.

8. WARRANTY AND SUPPORT

Your UpBright 9V AC/DC Adapter comes with a limited warranty. Please refer to the warranty certificate included with your product for specific terms and conditions. Generally, UpBright offers:

- **Refund Policy:** 30 days refund period.
- **Exchange Policy:** 24 months exchange period.

For technical support, warranty claims, or any questions regarding your UpBright product, please contact UpBright customer service through the retailer where the product was purchased or visit the official UpBright store page for contact information.

Online Store: [UPBRIGHT Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BF4RSLPB>

More documents and user manuals: <https://manuals.plus/>