

[Manuals.plus](#) /

› [whall](#) /

› WHALL Air Fryer, 5.5QT Air Fryer Oven with LED Digital Touchscreen, 12-in-1 Cooking Functions Air fryers, Dishwasher-Safe Basket, Stainless Steel/BS User Manual

whall NSE1201

WHALL Air Fryer Oven User Manual

Model: NSE1201

Brand: WHALL

INTRODUCTION

Welcome to the WHALL Air Fryer Oven user manual. This guide provides essential information for the safe and efficient operation of your new appliance. The WHALL 5.5QT Air Fryer Oven with LED Digital Touchscreen offers 12-in-1 cooking functions, allowing you to air fry, bake, roast, dehydrate, and more with ease. Please read this manual thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

For your safety and to prevent damage to the appliance, always adhere to the following guidelines:

- Always read all instructions before operating the appliance.
- Do not immerse the appliance's main body, cord, or plug in water or other liquids.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances, to allow for proper air circulation.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep children and pets away from the appliance during operation.
- Do not block any ventilation openings.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when removing the basket or trays, as hot steam and air may escape.

PRODUCT OVERVIEW

The WHALL Air Fryer Oven (Model NSE1201) is designed for versatile and healthy cooking. Its sleek stainless steel exterior complements any kitchen decor, while the intuitive digital controls make operation simple.




Front view of the WHALL Air Fryer Oven, showcasing its LED digital touchscreen and stainless steel finish.

Key Features:

- **12-in-1 Cooking Functions:** This air fryer offers a wide range of cooking options, including air frying, baking, roasting, and dehydrating, with dedicated presets for various food types.

8+4 Cooking presets

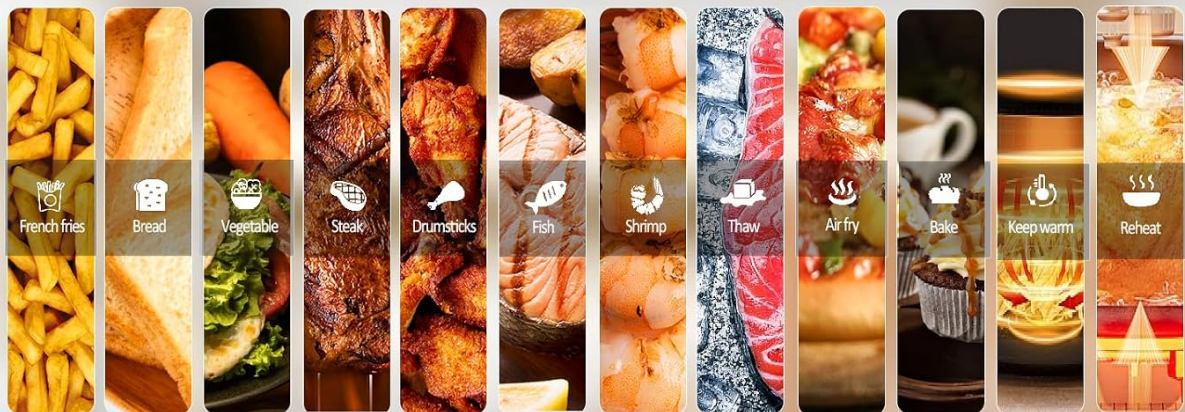

The digital control panel displaying 8+4 cooking presets for various dishes like fries, bread, vegetables, steak, drumsticks, fish, shrimp, and more.

- **360° Rapid Air Circulation Technology:** Ensures even cooking and crispy results in minutes by circulating hot air around your food.

360° Rapid air circulation technology

Cook foods in a few minutes



Diagram illustrating the 360° rapid air circulation technology within the air fryer, highlighting its efficiency in cooking.

- **Adjustable Temperature and Time:** Easily set your desired temperature and time using the intuitive digital controls.

Quickly set temperature&time

Adjust the temperature&time
for your desires



A hand adjusting the digital knob on the control panel to quickly set temperature and time for cooking.

- **Large 5.5 Quart Basket:** The spacious non-stick, dishwasher-safe basket is ideal for preparing family-sized portions.

Larger 5.5 Quart Basket

Big enough for you,
your family, and friends too



An illustration showing the large 5.5 quart capacity of the air fryer basket, emphasizing its suitability for family use.

- **Crisp and Tender Results:** Achieve oil-free or oil-less results, promoting healthier cooking without compromising on taste or texture.

Crisp and tender results

Oil-free or Oil-less than conventional deep fryer is the healthy priority



A plate of crispy air-fried food, including fries and chicken, demonstrating the healthy and delicious results.

- **Fully Certified:** ETL Listed, non-stick coating, automatic shutoff, and stainless steel construction ensure peace of mind and durability.

Fully Certified

Cook with peace of mind because the Air Fryer is fully compliant with food marketing standards for BPA and PEOA free cooking



The air fryer displaying various certification logos and features like non-stick coating, automatic shutoff, and stainless steel material.

SETUP

1. **Unpack:** Carefully remove all components and packaging materials from the box. Ensure all accessories are present.
2. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 4 inches) around the appliance for proper ventilation.
3. **Clean Accessories:** Before first use, wash the air fry basket, grill tray, and drip tray with warm, soapy water. Rinse thoroughly and dry completely.
4. **Insert Trays:** Slide the drip tray into the lowest slot of the air fryer. Then, insert the air fry basket or grill tray into the desired cooking slot.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Your browser does not support the video tag.

Video demonstrating the unboxing and setup of the WHALL Air Fryer Oven, including the placement of the drip tray, air fry basket, and grill tray. (Creator: Hollywood Wil)

OPERATING INSTRUCTIONS

1. **Power On:** Plug the appliance into a power outlet. The digital display will illuminate.
2. **Select Function:** Use the digital touchscreen to select one of the 12 preset cooking functions (e.g., Fries, Steak, Fish, Pizza). The display will show the default temperature and time for the selected preset.
3. **Adjust Settings (Optional):** If desired, use the temperature and time adjustment buttons to customize the cooking settings.
4. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The appliance will start preheating if required by the selected function.
5. **Monitor Progress:** Use the light button to illuminate the interior of the oven and check on your food without opening the door.
6. **Shake/Flip Food:** For best results, especially with items like fries or chicken wings, open the door and shake or flip the food halfway through the cooking time. The appliance will pause automatically when the door is opened. Close the door to resume cooking.
7. **Completion:** The appliance will beep when the cooking cycle is complete. Carefully remove the cooked food using heat-resistant tongs or oven mitts.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your WHALL Air Fryer Oven.

- **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** The non-stick air fry basket, grill tray, and drip tray are dishwasher safe. For stubborn residue, soak them in warm, soapy water before washing.
- **Main Unit:** Wipe the exterior and interior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surfaces.
- **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue.
- **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your WHALL Air Fryer Oven, refer to the common problems and solutions below:

- **Appliance not turning on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the power button on the digital display has been pressed.
- **Food not cooking evenly:**
 - Avoid overloading the air fry basket. Cook in smaller batches if necessary.
 - Shake or flip food items halfway through the cooking cycle to ensure even browning.
 - Verify that the correct temperature and time settings are selected for the food type.
- **White smoke coming from the appliance:**
 - This may be caused by grease from previous cooking. Clean the drip tray and air fry basket thoroughly after each use.
 - Ensure there is no excess oil or fat on the food being cooked.
- **Error codes on display:**

- If an error code appears, unplug the appliance, wait a few minutes, and plug it back in. If the error persists, consult the comprehensive user manual (PDF) for specific error code explanations and solutions.

SPECIFICATIONS

Feature	Detail
Brand	whall
Model Name	NSE1201
Color	stainless steel
Capacity	12 Quarts
Output Wattage	1700 Watts
Control Method	Touch
Has Nonstick Coating	Yes
Inner Material	Stainless Steel
Outer Material	Stainless Steel
Min Temperature Setting	90 Degrees Fahrenheit
Max Temperature Setting	90 Degrees Fahrenheit
Is Dishwasher Safe	Yes
Product Dimensions	11 x 13 x 12 inches
Item Weight	16.61 pounds
UPC	810118481604
ASIN	B0BF4TCX6J

WARRANTY AND SUPPORT

Your WHALL Air Fryer Oven comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official WHALL website.

For customer support, technical assistance, or to inquire about replacement parts, please visit the [WHALL Store on Amazon](#) or contact their customer service directly.

A PDF version of the user manual is also available for download: [User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question