



Manuals.plus /

› OSTBA /

› OSTBA Meat Slicer Instruction Manual

## OSTBA SL-517

# OSTBA Meat Slicer Instruction Manual

Model: SL-517

## INTRODUCTION

Thank you for choosing the OSTBA Electric Deli Food Slicer. This appliance is designed for efficient and precise slicing of various foods such as cold cuts, cheese, and bread. Featuring removable stainless steel blades and adjustable thickness settings, it offers convenience and ease of use for home kitchens. Please read this manual thoroughly before operation to ensure safe and optimal performance.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before using the slicer.
- Always unplug the appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, and utensils away from the blade during operation to prevent injury.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always use the food pusher to guide food. Never use your hands directly.
- Ensure the appliance is placed on a stable, flat, and dry surface before operation.

## PRODUCT COMPONENTS


Familiarize yourself with the key components of your OSTBA Meat Slicer:

- **Serrated Stainless Steel Blade:** The primary cutting component, designed for durability and sharpness. It is removable for easy cleaning.

- **Food Carriage:** The platform where food is placed for slicing.
- **BPA-Free Food Pusher:** Used to hold food securely against the blade and protect your fingers during slicing.
- **Adjustable Thickness Knob:** Allows precise control over slice thickness, from thin deli cuts to thicker portions.
- **ON/OFF Switch:** For powering the machine on and off.
- **Anti-Slip Suction Feet:** Located on the base, these rubber feet ensure the slicer remains stable on your countertop during operation.
- **150W Pure Copper Motor:** Provides sufficient power for fast and efficient slicing.




Figure 1: Overview of the OSTBA Electric Meat Slicer.

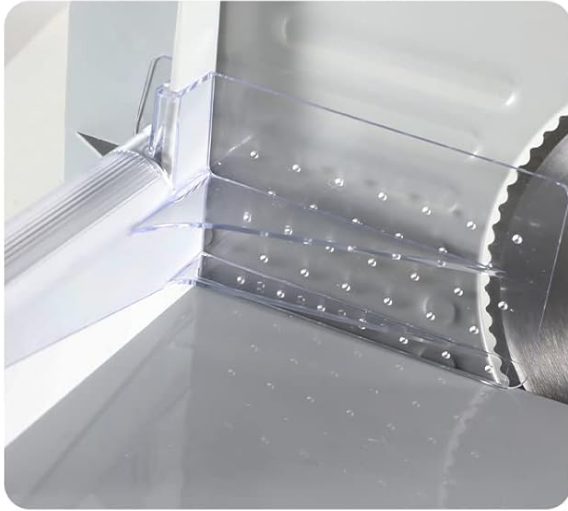

- 01** **BPA-Free Food Pusher**  
Hold the food to be cut evenly and protect your fingers



- 02** **ON/OFF Switch**  
Turn on and off the machine by a simple press.

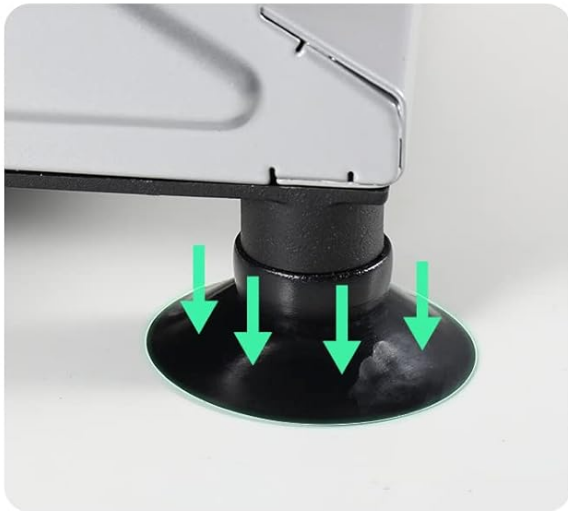

- 03** **Anti-Slip Suction Feet**  
4 Rubber feet keeps the slicer sitting stably on your kitchen countertop



- 04** **150W Motor**  
150W Pure copper motor, sufficient power slicing fast.

Figure 2: Detailed view of key components including the BPA-Free Food Pusher, ON/OFF Switch, Anti-Slip Suction Feet, and 150W Motor.

## SETUP

- 1. Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Placement:** Place the slicer on a clean, dry, and stable countertop. Ensure the anti-slip suction feet are firmly gripping the surface to prevent movement during operation.
- 3. Blade Installation (if removed):** If the blade is not already installed, align the serrated stainless steel blade with the motor shaft and secure it according to the instructions in the cleaning section. Ensure it is locked firmly in place.
- 4. Food Pusher Attachment:** Attach the BPA-Free Food Pusher to the food carriage. It should slide smoothly along the guide.
- 5. Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

- 1. Prepare Food:** Ensure the food item you wish to slice is appropriately sized to fit on the food carriage. For best results with meat, slightly chill it before slicing.



# Removable and Easy to Clean

Smart Design Elements - give you greater safety & control, efficient.



Figure 4: Examples of food items that can be sliced with the serrated blade.

## MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your slicer. Always unplug the slicer before cleaning.

1. **Blade Removal:** To remove the blade, locate the black knob in the center of the blade. Turn it counter-clockwise to loosen and carefully remove the blade. Handle with extreme caution as the blade is very sharp.
2. **Food Carriage Removal:** The food carriage is also removable for thorough cleaning. Slide it off the guide rails.
3. **Cleaning the Blade:** The stainless steel blade is dishwasher safe. Alternatively, it can be hand-washed with warm, soapy water and a soft cloth. Rinse thoroughly and dry immediately to prevent water spots.
4. **Cleaning the Unit:** Wipe down the main unit, food carriage, and food pusher with a damp cloth and mild detergent. Do not immerse the motor base in water. Ensure all parts are completely dry before reassembly or storage.
5. **Reassembly:** Reattach the food carriage and carefully re-install the blade by aligning it and turning the black knob clockwise until secure.

# Easy to Clean



**Dishwasher Safe**



**Hand washing**

Figure 5: Cleaning options for the removable blade: Dishwasher Safe and Hand Washing.

# Meat Slicer

Allows you to slice like a pro



Figure 6: Smart design elements for greater safety and control, and efficient cleaning.

## TROUBLESHOOTING

If you encounter issues with your slicer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slicer does not turn on.	Not plugged in; power switch off; power outage.	Ensure the power cord is securely plugged into a working outlet. Check the ON/OFF switch. Verify power supply.
Food is not slicing evenly.	Incorrect thickness setting; food not firm enough; blade not sharp.	Adjust the thickness knob. Ensure food is slightly chilled for firmer consistency. Clean the blade thoroughly.
Slicer is making unusual noise.	Blade not properly installed; food obstruction.	Unplug the slicer and check if the blade is securely installed. Remove any food debris that might be obstructing the blade.
Slicer moves on countertop.	Suction feet not engaged or surface is wet/uneven.	Ensure the countertop is clean and dry. Press down firmly on the slicer to engage the suction feet.

If the problem persists after trying these solutions, please contact OSTBA customer support for assistance.

## SPECIFICATIONS

Feature	Detail
Brand	OSTBA
Model Number	SL-517
Material	Stainless Steel
Color	Silver
Special Feature	Interchangeable Blades
Recommended Uses	Cheese, Meat
Blade Material	Stainless Steel
Blade Shape	Round
Operation Mode	Automatic
Product Dimensions	11.7 x 7.8 x 10.2 inches
Item Weight	7.6 pounds
Power	150W
Date First Available	September 13, 2022

## WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official OSTBA website. If you require technical support or have questions about your slicer, please contact OSTBA customer service.

Visit the official OSTBA Store: [OSTBA Store](#)