

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal SV8110 Express Power Steam Generator User Manual

Tefal SV8110

Tefal Express Power Steam Generator User Manual

MODEL: SV8110

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal Express Power steam generator. Please read it thoroughly before first use and keep it for future reference.

1. PRODUCT OVERVIEW

The Tefal Express Power steam generator is designed to make ironing effortless and effective. It features powerful steam output, a large water tank, and a unique scale collector for long-lasting performance.



Figure 1.1: Front view of the Tefal Express Power Steam Generator, showcasing its compact design and integrated iron.

Key Features:

- **Super Powerful Steam:** Continuous steam output of 120 g/minute and 6.3 bar pump pressure for fast ironing results.
- **Powerful Steam Boost:** 420 g/minute steam boost to tackle even the most stubborn creases.
- **No-Setting Technology:** Ensures the perfect combination of steam and temperature for safe ironing on all fabric types without risk of burning.
- **Removable Scale Collector:** Maintains optimal performance and ensures long-lasting steam power.
- **XL Water Tank:** Large 1.8 L water tank allows for extended ironing sessions without frequent refills.
- **Repairability:** 15-year repairability guarantee, supported by 6500 repair centers worldwide.

2. SETUP

2.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or stickers from the appliance.
3. Ensure all parts are present: steam generator base, iron, and power cord.

2.2 Filling the Water Tank

The large 1.8 L water tank is designed for easy refilling, even during use.



Figure 2.1: Detaching the water tank for refilling. The tank is transparent, allowing easy monitoring of the water level.

1. Remove the water tank from the base unit.
2. Fill the tank with tap water up to the 'MAX' level indicator. Do not use distilled or demineralized water as it can affect steam performance.
3. Replace the water tank securely into the base unit.

2.3 Initial Use

1. Place the steam generator on a stable, heat-resistant surface.
2. Plug the power cord into a grounded electrical outlet.
3. Press the On/Off button. The indicator light will illuminate.

4. Allow the appliance to heat up. This usually takes a few minutes, indicated by the steam ready light.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off and Steam Settings

The control panel allows you to select different steam modes for optimal ironing.



Figure 3.1: Control panel showing power button, mode selection (Eco, Normal, Max), and Anti-Calc indicator.

- **Power Button:** Press to turn the unit on or off.
- **Mode Button:** Cycle through steam modes:
 - **Eco Mode:** For delicate fabrics and energy saving.
 - **Normal Mode:** Standard steam for everyday ironing.
 - **Max Mode:** Maximum steam output for thick fabrics and stubborn creases.
- **Steam Trigger:** Press the trigger under the iron handle to release steam. For a continuous steam boost, press the trigger twice quickly.

3.2 Ironing Techniques

The iron's Durilium Autoclean soleplate glides smoothly over fabrics.

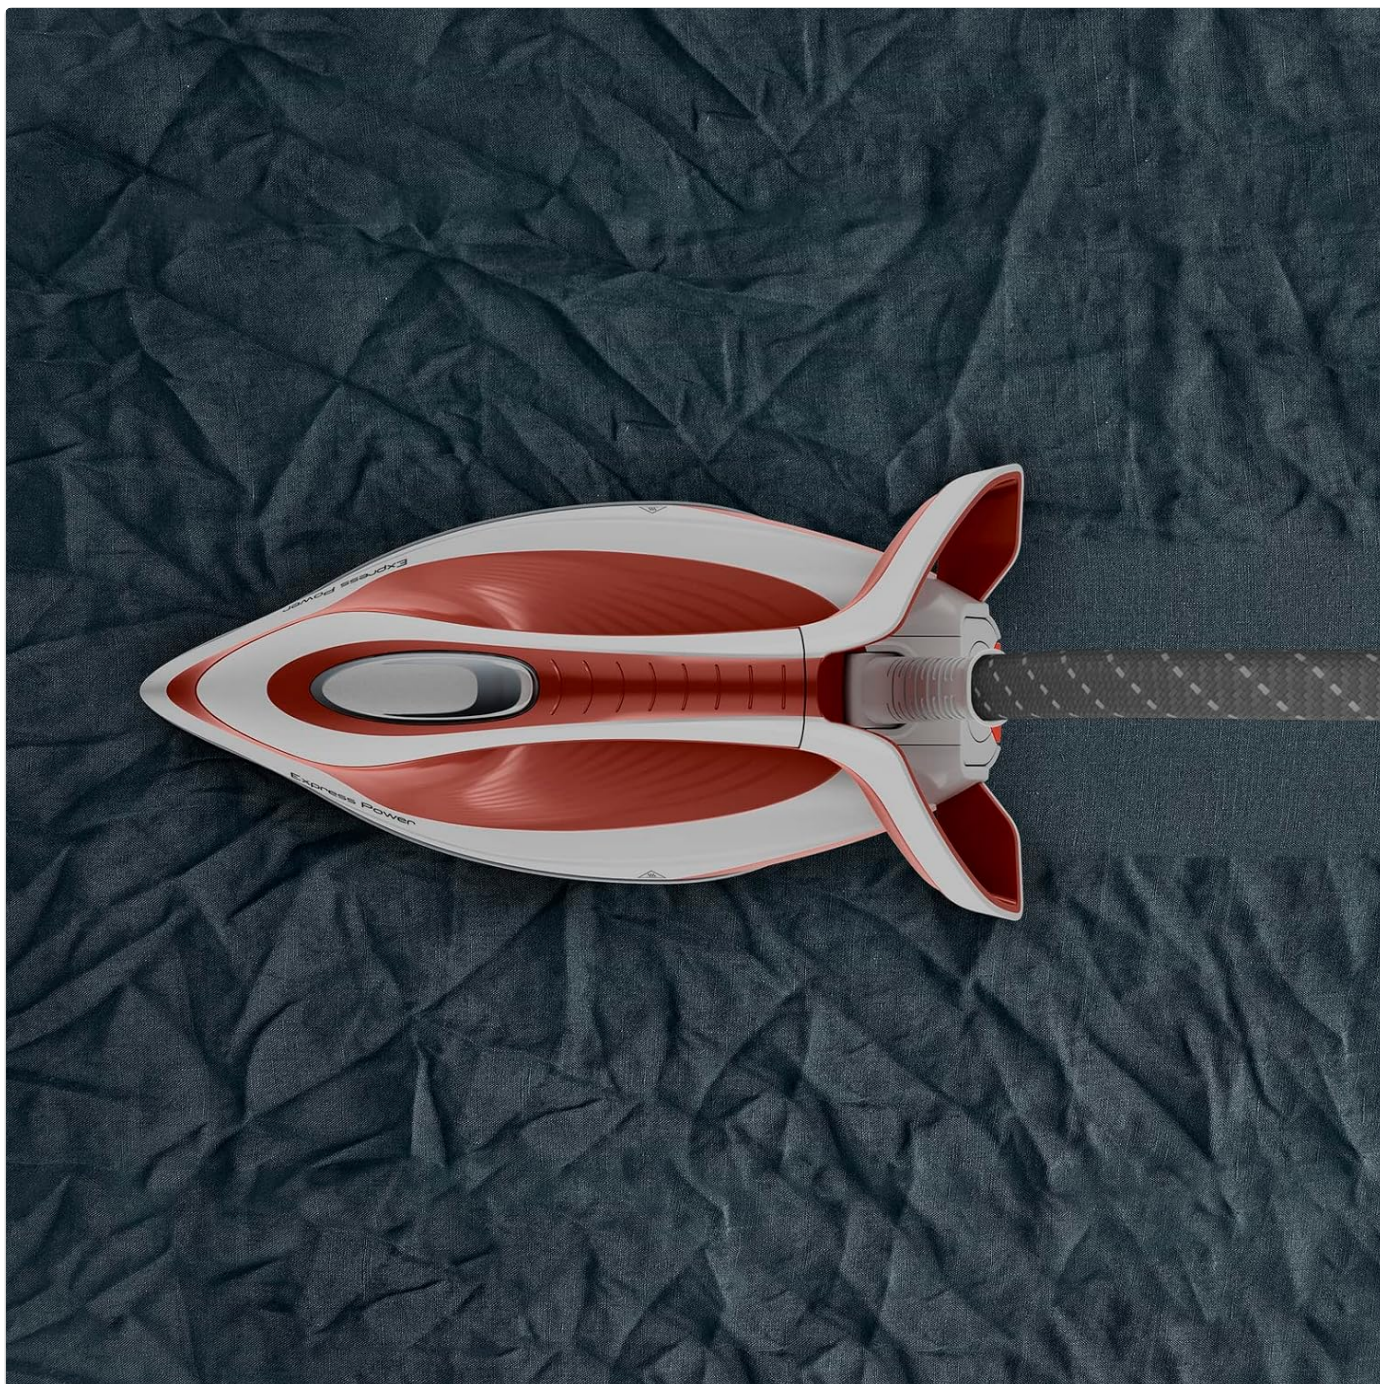


Figure 3.2: The iron's soleplate design ensures even steam distribution and smooth gliding.

- **Horizontal Ironing:** Place the garment on an ironing board. Move the iron smoothly over the fabric, pressing the steam trigger as needed.
- **Vertical Steaming:** For curtains, suits, or delicate items, hold the iron vertically a few centimeters away from the fabric and press the steam trigger.



Figure 3.3: Demonstrating vertical steaming for quick wrinkle removal on hanging clothes.

4. MAINTENANCE

4.1 Cleaning the Soleplate

The Durilium Autoclean soleplate is designed for easy maintenance.

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth. Do not use abrasive cleaners or metallic scouring pads.

4.2 Descaling (Calc Collector)

The removable calc collector traps limescale particles, ensuring consistent steam performance. The 'Anti-Calc' indicator light on the control panel will illuminate when it's time to clean the collector.



Figure 4.1: Location of the removable calc collector at the rear of the steam generator base.

1. Ensure the appliance is unplugged and completely cool.
2. Locate the calc collector at the rear of the base unit.
3. Turn the collector counter-clockwise to unlock and pull it out.
4. Rinse the collector under running water to remove any limescale.
5. Reinsert the collector and turn clockwise to lock it into place.



Figure 4.2: The calc collector after removal, showing accumulated limescale that needs to be rinsed away.

4.3 Storage

- Empty the water tank after each use.
- Wrap the steam hose and power cord neatly.
- Store the appliance in a dry, safe place, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your steam generator, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam output	Water tank empty; appliance not heated up; steam trigger not pressed.	Refill water tank; wait for 'steam ready' light; press steam trigger.
Water leaking from soleplate	Temperature too low for steam; iron held horizontally for too long without steam.	Ensure iron is fully heated; use steam only when moving the iron.
'Anti-Calc' light illuminated	Calc collector needs cleaning.	Clean the calc collector as described in Section 4.2.
Appliance not turning on	Not plugged in; power outlet issue.	Check power cord connection; test outlet with another device.

6. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	Tefal
Model Number	SV8110
Power	2800 Watts
Voltage	230 Volts
Water Tank Capacity	1.8 Litres
Continuous Steam Output	120 g/minute
Steam Boost	420 g/minute
Pump Pressure	6.3 Bars
Product Dimensions (L x W x H)	36 x 21 x 26 cm
Item Weight	3.88 Kilograms
Soleplate Material	Aluminium (Durilium Autoclean)
Automatic Shut-off	Yes
Country of Origin	France

7. WARRANTY AND SUPPORT

Tefal is committed to product quality and customer satisfaction.

7.1 Repairability

This product benefits from a **15-year repairability guarantee**. This commitment ensures that spare parts are available for 15 years at a fair cost, with fast delivery through 6500 repair centers worldwide. This initiative is part of Tefal's dedication to protecting the environment and reducing waste.

7.2 Customer Support

For any questions, technical assistance, or to locate a repair center, please visit the official Tefal website or contact their customer service department. Refer to the contact information provided with your purchase or on the Tefal brand website.

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BF5CZBJQ>

More documents and user manuals: <https://manuals.plus/>