

Canon CP1500

Canon Selphy CP1500 Wireless Compact Photo Printer Instruction Manual

Model: CP1500 | Brand: Canon

1. INTRODUCTION

The Canon SELPHY CP1500 is a wireless compact photo printer designed for convenient photo printing at home or on the go. It supports various connectivity options including AirPrint, Wi-Fi, the SELPHY Layout app, the Canon PRINT app, camera memory cards, and USB. This printer produces durable, water-resistant photos in multiple sizes, from 4x6 inches to mini label stickers, designed to last up to 100 years.

2. WHAT'S IN THE BOX

- SELPHY CP1500 Compact Photo Printer
- Paper Cassette (Postcard size)
- Trial Standard Paper Pack (Postcard size)
- Trial Ink Cassette (Postcard size)
- Compact Power Adapter and AC Cable



Image: The Canon Selphy CP1500 printer shown with its essential accessories, including the power adapter, paper cassette, and initial paper and ink supplies.

3. SETUP

3.1 Power Connection

Connect the compact power adapter to the printer and then plug it into a power outlet. The printer will power on, and the display will activate.

3.2 Loading Paper Cassette

Open the paper cassette and load the photo paper with the glossy side facing up. Insert the loaded paper cassette into the printer's paper slot until it clicks into place.



Image: A hand demonstrates inserting the paper cassette into the front slot of the Canon Selphy CP1500 printer.

3.3 Inserting Ink Cassette

Open the ink cassette cover on the side of the printer. Insert the trial ink cassette into the designated slot until it locks securely. Close the cover.



Image: The side of the Canon Selphy CP1500 printer showing the open compartment for inserting the ink cassette.

3.4 Connecting to Devices

The SELPHY CP1500 offers multiple ways to connect:

- **Wi-Fi:** Use the printer's on-screen menu to connect to your local Wi-Fi network.
- **SELPHY Layout App:** Download the official SELPHY Layout app from your smartphone's app store. Follow the in-app instructions to connect your device to the printer via Wi-Fi.
- **Memory Card:** Insert a compatible camera memory card into the printer's SD card slot.
- **USB:** Connect a USB flash drive or a compatible camera directly to the printer's USB port.



Image: The Canon Selphy CP1500 printer is shown with multiple devices, including a smartphone, a digital camera, and a laptop, highlighting its versatile connectivity options via Wi-Fi, memory card, and USB.

4. OPERATING INSTRUCTIONS

4.1 Printing Photos

Once connected, select your desired photos from your device or memory card using the printer's display or the SELPHY Layout app. You can preview, edit, and apply filters before printing.



Image: A hand is shown retrieving a freshly printed photo from the Canon Selphy CP1500 printer, with several other printed photos scattered nearby, demonstrating the ease of photo output.

4.2 Print Options and Customization

The SELPHY CP1500 allows for various print customizations:

- **Print Sizes:** Choose from 4x6 inches, 2.1x2.1 inches square, or mini label stickers.
- **Finishes:** Select between glossy, semi-gloss, or satin finishes for your prints.
- **Editing:** Utilize the built-in 3.5-inch display to view, edit, and add filter effects like sepia or black and white.



Image: The Canon Selphy CP1500 is featured alongside examples of its three available print finishes: glossy, semi-gloss, and satin, allowing users to choose their preferred photo texture.

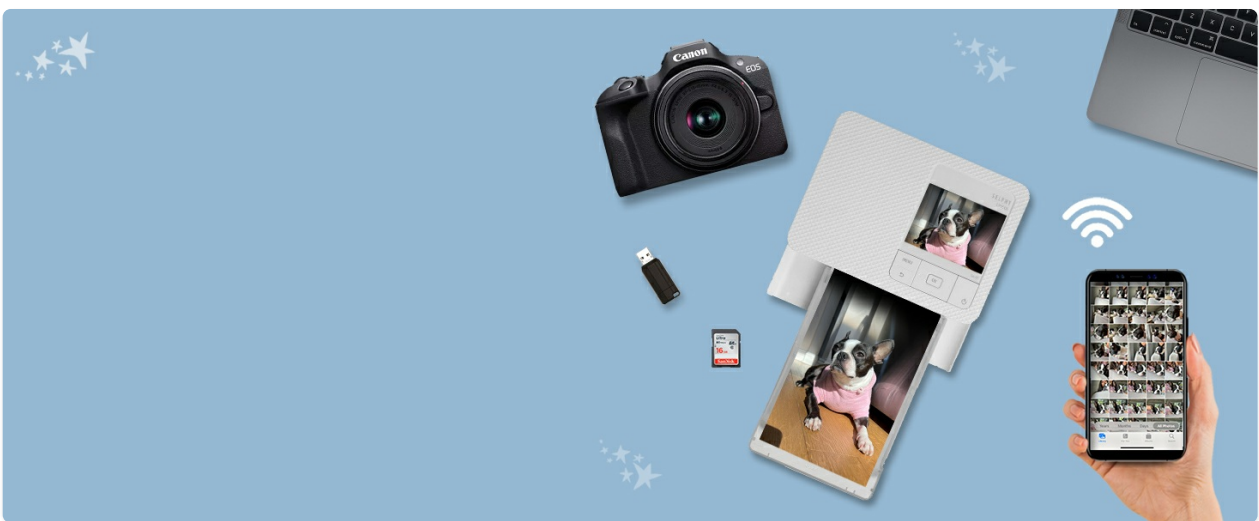


Image: This visual highlights the diverse print sizes offered by the Canon Selphy CP1500, including standard 4x6 inches, square 2.1x2.1 inches, and mini stickers, catering to various creative needs.

4.3 Product Overview Video

Your browser does not support the video tag.

Video: A comprehensive product overview of the Canon Selphy CP1500, demonstrating its features and ease of use.

5. MAINTENANCE

5.1 Replacing Ink and Paper

When the ink or paper runs out, replace them with genuine Canon SELPHY ink and paper sets. These are typically sold together to ensure compatibility and optimal print quality. Refer to the 'Loading Paper Cassette' and 'Inserting Ink Cassette' sections for detailed instructions.

5.2 Cleaning the Printer

Periodically clean the exterior of the printer with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. For internal cleaning, consult the detailed instructions in the full user manual or Canon's official support website.

6. TROUBLESHOOTING

- **Printer Not Responding:** Ensure the power adapter is securely connected and the printer is turned on. Check Wi-Fi or USB connections.
- **Poor Print Quality:** Verify that the ink cassette is correctly installed and has sufficient ink. Ensure the paper is loaded correctly and is not creased or damaged.
- **Paper Jams:** Carefully remove any jammed paper following the instructions in the full user manual. Ensure you are using the correct paper size and type.
- **Connectivity Issues:** Restart both the printer and your connecting device. Re-establish the Wi-Fi or Bluetooth connection through the printer's menu or the SELPHY Layout app.

7. SPECIFICATIONS

Feature	Specification
Product Dimensions	5.2"D x 7.2"W x 2.3"H
Connectivity Technology	Wi-Fi
Printing Technology	Dye Sublimation
Maximum Media Size	4 x 6 inch
Maximum Color Print Resolution	300 x 300 Dots Per Inch
Compatible Devices	Camera, PC, Smartphones
Item Weight	3.48 pounds (1.58 Kilograms)
Model Number	5539C001
First Available Date	September 21, 2022

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Canon SELPHY CP1500 comes with a **Limited Warranty**. For specific terms and conditions, please refer to the warranty card included in your product packaging or visit the official Canon support website.

8.2 Customer Support

For further assistance, technical support, or to download the latest drivers and software, please visit the official Canon support website or contact Canon customer service.