

[Manuals.plus](#) /

› [Wohome](#) /

› Wohome S100 2.1ch Sound Bar User Manual

Wohome S100

Wohome S100 2.1ch Sound Bar User Manual

Model: S100

1. INTRODUCTION

Thank you for purchasing the Wohome S100 2.1ch Sound Bar. This manual provides essential information for setting up, operating, and maintaining your sound bar. Please read it thoroughly before use to ensure proper functionality and to maximize your audio experience.

The Wohome S100 is designed to enhance your television's audio with powerful sound, featuring a built-in subwoofer and multiple connectivity options. It offers 6 levels of voice enhancement and various sound modes to suit different content types.

2. SAFETY INFORMATION

- Do not expose the sound bar to rain, moisture, or extreme temperatures.
- Ensure proper ventilation around the unit to prevent overheating.
- Do not open the casing; refer all servicing to qualified personnel.
- Use only the provided power adapter.
- Keep out of reach of children.
- Disconnect from power during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:



1 * Power Adapter



1 * 3.5mm to 3.5mm Audio Cable



1 * Optical Cable



1 * Remote Control



1 * Manual



2 * Mount Screws



1 * Wall Mount Hole Locator Labels

Image: Contents of the Wohome S100 Sound Bar package, showing the soundbar, power adapter, 3.5mm to 3.5mm audio cable, optical cable, remote control, user manual, two mount screws, and wall mount hole locator labels.

- Wohome S100 Sound Bar
- Power Adapter
- 3.5mm to 3.5mm Audio Cable
- Optical Cable
- Remote Control (2x AAA batteries not included)
- User Manual
- Wall Mount Screws (2)
- Wall Mount Hole Locator Labels

4. PRODUCT OVERVIEW

4.1 Sound Bar Components



Image: The Wohome S100 Sound Bar in black, shown with its remote control. The sound bar features a minimalist design with a mesh grille and an LED display showing 'bt' for Bluetooth mode. A control panel is visible on the right side.

The Wohome S100 Sound Bar features a compact design with integrated controls and an LED display. It includes two full-range speakers and a built-in subwoofer for enhanced bass.

 


Image: An exploded view of the Wohome S100 Sound Bar, revealing its internal components. Two full-range speakers and a central built-in subwoofer are visible, highlighting the 2.1 channel audio architecture.

4.2 Rear Panel Connections

COMPATIBLE WITH ALL YOUR DEVICES

Such as smart TV, 4K & traditional TV, computer, projector, phone, tablet and so on



Bluetooth 5.3



Optical



AUX



USB



Image: The rear panel of the Wohome S100 Sound Bar, detailing the available input ports. From left to right, these include the DC power input, Optical audio input, USB port, and AUX input. Mounting points are also visible.

- **DC IN:** Power input port.
- **OPTICAL:** Optical digital audio input.
- **USB:** USB port for playing audio from a U disk or firmware updates.
- **AUX:** 3.5mm auxiliary audio input.

4.3 Remote Control



GREAT FOR GAME AND LIVESTREAM

6 LEVELS

voice enhancement and night mode, suitable for all users, especially for the elderly and the hearing impaired



Image: The remote control for the Wohome S100 Sound Bar, highlighting buttons for power, volume adjustment, input selection, various sound modes (Music, Movie, News), and dedicated buttons for voice enhancement levels (V0-V6) and a night mode switch.

The included remote control allows full command over the sound bar's functions, including power, volume, input selection, sound modes, and voice enhancement levels.

5. SETUP

5.1 Placement Options

PLACE ON THE CABINET



MOUNT ON THE WALL



Image: Demonstrates two common placement methods for the Wohome S100 Sound Bar. The left image shows the sound bar placed horizontally on a TV cabinet. The right image shows the sound bar securely mounted on the wall beneath a television.

- **On a Cabinet:** Place the sound bar horizontally on a stable surface directly in front of your TV.
- **Wall Mount:** Use the provided screws and locator labels to mount the sound bar on the wall below your TV. Ensure the wall can support the weight of the sound bar.

5.2 Connecting to Your TV or Device

The Wohome S100 offers multiple connection methods:



Image: A visual representation of the Wohome S100 Sound Bar's versatile connectivity. Icons for Bluetooth 5.3, Optical, AUX, and USB are displayed, indicating compatibility with a wide range of devices including smart TVs, computers, projectors, phones, and tablets.

- **Optical Connection (Recommended for TVs):**

1. Remove protective caps from both ends of the optical cable.
2. Connect one end to the OPTICAL port on the sound bar and the other to your TV's Optical Digital Audio Out

port.

3. On your TV, navigate to **Settings > Sound > Sound Output** and select **Optical** or **External Speaker**.
4. Change the TV's audio format setting to **PCM / Stereo Sound** (usually found under **Settings > Sound > Expert Settings > Digital Audio Output Format**).
5. **Important:** Disable Dolby and DTS on your TV and any streaming apps (Netflix, Amazon Prime Video, HBO, Hulu, YouTube, etc.) to avoid silent or noisy output.

- **AUX Connection:** Connect the provided 3.5mm audio cable from the sound bar's AUX port to your device's 3.5mm audio output.
- **USB Connection:** Insert a USB flash drive (U disk) into the USB port to play audio files. This port is also used for firmware updates and cannot supply power to the sound bar.
- **Bluetooth Connection:**
 1. Power on the sound bar and select Bluetooth mode (indicated by 'bt' on the LED display).
 2. Enable Bluetooth on your device (smartphone, tablet, etc.) and search for 'S100'.
 3. Select 'S100' to pair. Once connected, the 'bt' indicator will stop flashing.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button on the sound bar or remote control to turn the unit on or off.

6.2 Input Selection

Press the 'Input' button on the remote or the 'Mode' button on the sound bar to cycle through available input sources (Optical, AUX, USB, Bluetooth).

6.3 Volume Control

Use the '+' and '-' buttons on the sound bar or remote control to adjust the master volume.

6.4 Sound Modes

ENRICH YOUR SOUND EXPERIENCE



Music



Movie



News



Image: The Wohome S100 Sound Bar positioned below a television, illustrating its three distinct sound modes. The TV screen is divided into three sections, each depicting content optimized for 'Music', 'Movie', and 'News' modes, demonstrating how the sound bar enriches the audio experience for various media.

Press the dedicated buttons on the remote control to select from the following sound modes:

- **Music Mode:** Optimized for powerful deep bass and rich musical reproduction.
- **Movie Mode:** Provides a 3D surround sound experience for cinematic content.
- **News Mode:** Enhances dialogue clarity for news broadcasts and spoken content.

6.5 Voice Enhancement (V0-V6)

The sound bar features 6 levels of voice enhancement to improve dialogue clarity, especially useful for users with hearing impairment or when watching content with complex audio mixes.



Image: The remote control for the Wohome S100 Sound Bar, with specific buttons highlighted for 'V0-V6' indicating 6 levels of voice enhancement, and a 'Night' button for activating night mode, which reduces volume by 15%.

Use the 'V0-V6' buttons on the remote to select your desired voice enhancement level.

6.6 Night Mode

Press the 'Night' button on the remote control to activate Night Mode, which reduces the overall volume by 15% for quieter listening without disturbing others.

6.7 Smart LED Display



Image: A detailed view of the Smart LED Display on the Wohome S100 Sound Bar, clearly showing the 'bt' indicator, signifying that the sound bar is currently in Bluetooth mode.

The front LED display shows the current input mode (e.g., 'bt' for Bluetooth, 'OP' for Optical, 'AU' for AUX, 'US' for USB) and volume level. The display can be turned off via the remote control and will temporarily brighten when a button is pressed.

7. MAINTENANCE

- Clean the sound bar with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Keep the ventilation openings clear of dust and debris.
- Store in a cool, dry place when not in use for extended periods.

8. TROUBLESHOOTING

If you encounter issues, please refer to the following common problems and solutions:

Problem	Solution
No sound or low volume	◦ Ensure the sound bar is powered on and the correct input source is selected. ◦ Increase the volume on both the sound bar and your connected device/TV. ◦ For Optical connection: Verify TV audio output is set to Optical/External Speaker and audio format is PCM. Disable Dolby/DTS on TV and streaming apps. ◦ Check all cable connections are secure.

Problem	Solution
Remote control not working	◦ Ensure batteries are correctly inserted and not depleted (requires 2x AAA). ◦ Point the remote directly at the sound bar's sensor. ◦ Remove any obstacles between the remote and the sound bar.
Bluetooth pairing issues	◦ Ensure the sound bar is in Bluetooth mode ('bt' flashing). ◦ Disable Bluetooth on other nearby devices that might be trying to connect. ◦ Forget 'S100' from your device's Bluetooth list and try pairing again.
Static or distorted sound	◦ Check cable connections for looseness or damage. ◦ Reduce the volume if distortion occurs at high levels. ◦ Ensure Dolby/DTS is disabled for Optical connections. ◦ Move the sound bar away from other electronic devices that may cause interference.

If the issue persists, please contact Wohome customer support for assistance.

9. SPECIFICATIONS

Feature	Detail
Model	S100
Speaker Type	2.1 Channel Surround Sound with Built-in Subwoofer
Speaker Size	16 Inches
Speaker Maximum Output Power	200 Watts
Connectivity Technology	Bluetooth, Auxiliary (3.5mm), USB, Optical (wired, wireless)
Audio Output Mode	Surround
Special Feature	Bass Boost, 6 Levels Voice Enhancement
Control Method	Remote, On-unit buttons
Power Source	Corded Electric
Product Dimensions	9.14 x 40.64 x 7.37 cm; 1.78 kg
Mounting Type	Wall Mount, Tabletop
Color	Black

10. WARRANTY AND SUPPORT

Wohome products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included in your package or contact Wohome directly via the email address provided in the product documentation. Our support team is available to assist with any questions or issues you may have.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BF8G4JZ7>

More documents and user manuals: <https://manuals.plus/>