

[Manuals.plus](#) /

› [SUPERJARE](#) /

› SUPERJARE Boho TV Stand (Model EU8704T) Instruction Manual

SUPERJARE EU8704T

SUPERJARE Boho TV Stand (Model EU8704T) Instruction Manual

For 53.9-inch Natural Rattan TV Console, Suitable for TVs up to 65 inches

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the assembly, operation, and maintenance of your SUPERJARE Boho TV Stand, Model EU8704T. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation of the product.



Image 1.1: The SUPERJARE Boho TV Stand, Model EU8704T, in a typical living room setup, supporting a television.

2. SAFETY INFORMATION

Adherence to the following safety guidelines is crucial for preventing injury and damage to the product.

- Exercise caution around sharp edges during assembly and handling.
- Do not exceed the maximum weight limit of 66 lbs (30 kg) for the TV stand. Overloading can lead to instability and collapse.
- Keep all small parts and hardware away from children to prevent choking hazards.
- Follow all assembly instructions carefully and in the specified order to ensure structural integrity.
- Ensure the TV stand is placed on a level and stable surface to prevent tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- P2 Particleboard panels (various sizes for top, bottom, sides, shelves, and cabinet doors)
- Solid wood feet (6 pieces)
- Adjustable feet (2 pieces, pre-attached to some solid wood feet or separate)
- Rattan-decorated cabinet doors (2 pieces)

- Assembly hardware (screws, dowels, cam locks, hinges, magnetic catches, etc.)
- Illustrated assembly instructions
- Necessary assembly tools (e.g., Allen wrench, screwdriver)

4. ASSEMBLY INSTRUCTIONS

The SUPERJARE Boho TV Stand is designed for straightforward assembly. Detailed, illustrated instructions and all necessary tools are included in the package. It is recommended to have two people for assembly, though it can be completed by one individual.

1. **Unpack and Identify Parts:** Carefully unbox all components and lay them out on a clean, soft surface to prevent scratches. Refer to the parts list in the included instruction manual to identify each piece.
2. **Attach Solid Wood Feet:** Secure the six solid wood feet to the base of the TV stand using the provided hardware. Ensure the two adjustable feet are positioned correctly to allow for leveling.



Image 4.1: Detail of the solid wood legs, providing 6.7 inches of clearance for cleaning.

Sturdy particle board

- ❶ **Anti-scratch**
- ❷ **Waterproof**

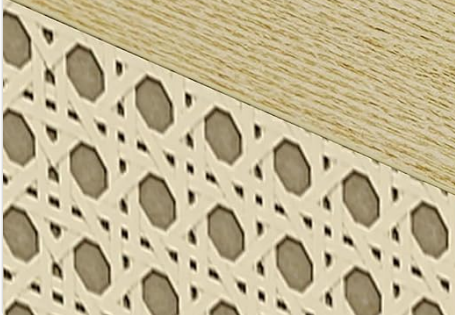


Image 4.2: Adjustable feet allow for stability on uneven floor surfaces.

3. **Assemble Main Frame:** Follow the step-by-step diagrams in the included manual to connect the side panels, bottom panel, and central divider using the specified hardware.
4. **Install Adjustable Shelf:** The central open shelf features a 3-level height adjustment. Insert the shelf supports into the desired holes before placing the shelf.

.....

Adjustable Open Shelf



Image 4.3: The adjustable open shelf provides flexible storage for various item heights.

5. **Attach Cabinet Doors:** Mount the two rattan-decorated cabinet doors using the provided hinges. Ensure they open and close smoothly. Adjust hinges if necessary for proper alignment.
6. **Final Checks:** Once assembled, gently shake the unit to ensure all connections are secure and the stand is stable. Adjust the leveling feet if the stand wobbles.

5. OPERATING INSTRUCTIONS

The SUPERJARE Boho TV Stand is designed to accommodate televisions up to 65 inches and offers practical storage solutions.

- **TV Placement:** Place your television centrally on the top surface of the stand. Ensure the TV base fits within the dimensions of the stand and does not overhang excessively. The stand is suitable for TVs up to 55, 60, or 65 inches.

For TV up to 65"

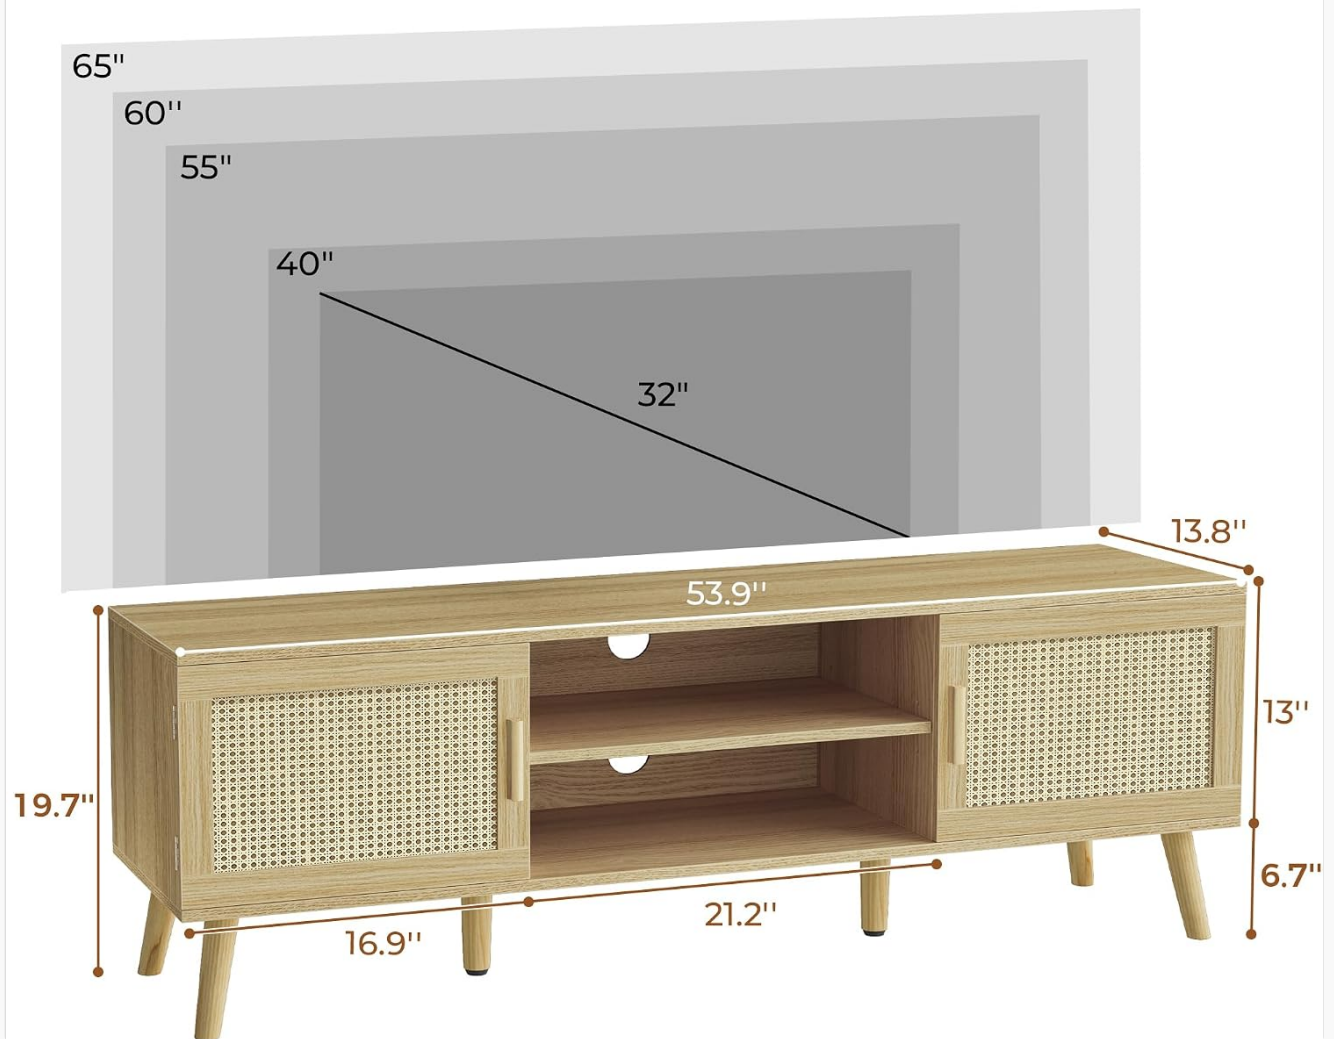


Image 5.1: Dimensions of the TV stand and its compatibility with various TV sizes.

- **Storage Cabinets:** Utilize the two large cabinets with rattan-decorated doors to store items you wish to keep out of sight. The doors feature magnetic catches for secure closure.
- **Adjustable Open Shelf:** The middle open shelf can be adjusted to three different heights to accommodate various media devices, books, or decorative items.
- **Cable Management:** Four cord holes are strategically placed on the back panel to help organize and route cables from your electronic devices, maintaining a tidy appearance.



Image 5.2: The four cable holes facilitate organized wire management for electronic devices.

6. MAINTENANCE

To maintain the appearance and longevity of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent moisture damage to the particleboard.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Wobbling Stand:** If the stand is unstable, ensure it is placed on a level surface. Adjust the two adjustable feet on the

bottom of the stand until it is stable.

- **Misaligned Doors:** If cabinet doors do not close properly or are misaligned, adjust the hinges. Most hinges allow for minor adjustments using a screwdriver.
- **Missing Parts:** If you discover missing parts during assembly, double-check the packaging. If parts are genuinely missing, contact SUPERJARE customer support with your model number and a description of the missing components.
- **Difficulty Assembling:** Review the included illustrated instructions carefully. Ensure all steps are followed in order and the correct hardware is used for each step. Do not force components together.

8. SPECIFICATIONS

Feature	Detail
Model Number	EU8704T
Dimensions (L x W x H)	53.9 x 15.7 x 19.7 inches
Item Weight	39.2 pounds
Material	P2 Particleboard, Solid Wood Feet
Color	Natural
Number of Cabinets	2
Special Features	Adjustable Open Shelf, Rattan Cabinet Doors, 4 Cord Holes, Adjustable Feet
Max TV Size Supported	Up to 65 inches
Product Care	Wipe with Damp Cloth

9. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your SUPERJARE Boho TV Stand, please contact SUPERJARE customer support. Refer to your purchase documentation for specific warranty details. Always provide your model number (EU8704T) when contacting support for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question