

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AOSKY](#) /

› [AOSKY Cordless Blackout Roller Shades Instruction Manual - Model BK-RB-G2572](#)

## AOSKY BK-RB-G2572

# AOSKY Cordless Blackout Roller Shades Instruction Manual

Model: BK-RB-G2572

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your AOSKY Cordless Blackout Roller Shades. These shades are designed to block 100% of sunlight and UV rays, offering room darkening and thermal insulation. The cordless design enhances safety and ease of use.

## PRODUCT OVERVIEW

---

The AOSKY Cordless Blackout Roller Shades feature a robust spring-loaded mechanism for smooth operation. Constructed from 100% polyester with a reinforced thermal insulated coating, they are soft, smooth, wear-resistant, and easy to clean. The thermal backing helps regulate room temperature, contributing to energy efficiency.



Image: AOSKY Cordless Blackout Roller Shades in various colors.

# 100% Blackout

## FABRIC COMPOSITION

Fabric Layer  
Shading

Black Coating  
Anti-UV

Color Coating  
Thermal Insulation

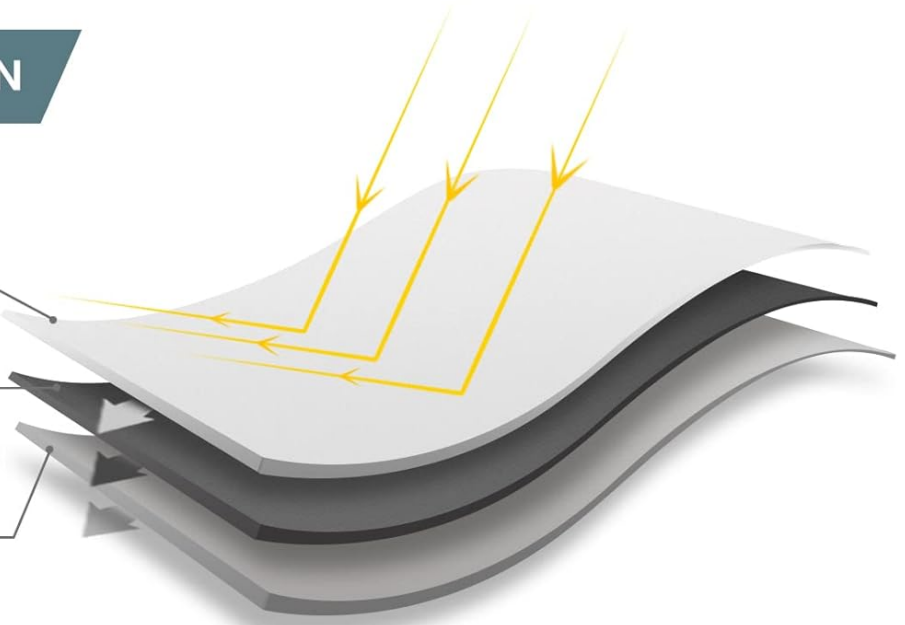 


Image: Fabric composition illustrating 100% blackout capability with UV protection and thermal insulation layers.

## PACKAGE CONTENTS

- 1 x Roller Blind
- 1 x Set of Mounting Accessories (including installation screws and metal brackets)
- 1 x Installation Instructions (paper copy)

*Note: If any accessories are missing or you encounter issues, please contact customer support for assistance.*

## CHOOSING THE RIGHT SIZE

Accurate measurement is crucial for proper fit and function. Consider whether you prefer an inside mount (within the window frame) or an outside mount (covering the window frame).

### Outside Mount

- **Shade Width:** Should be 4 inches wider than the window's total width (or more) to ensure full coverage and


minimize light gaps.

- **Shade Height:** The shade height can adjust from 0" to 72", accommodating most standard window heights.
- No specific requirement for window depth.

### Inside Mount

- **Order Width:** Should be the exact window width (or 0-1 inch less) to fit within the frame.
- **Shade Height:** The shade height can adjust from 0" to 72", accommodating most standard window heights.
- A minimum of 2 inches of frame depth is required for installation.
- The fabric width will be approximately 1 inch narrower than the total shade width.

## Example choose a 23" shade

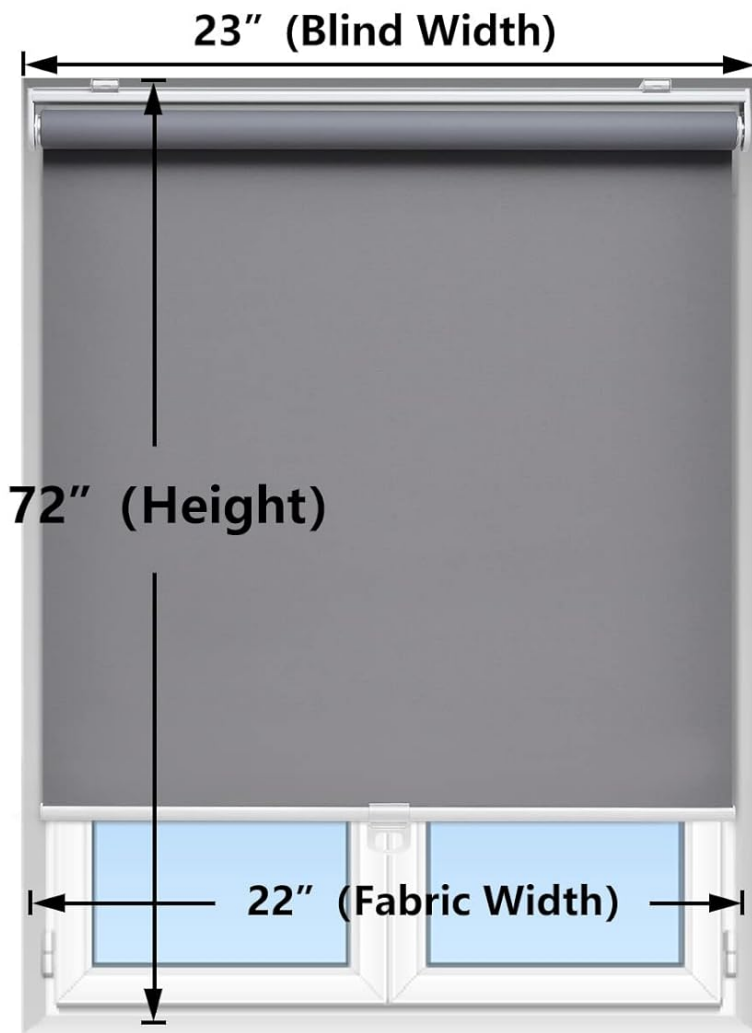


**Fabric Width=Blind Width-1 inch**

Blind Width	Fabric Width	Height
23"	22"	72"
.....	.....	
47"	46"	
48"	47"	

Note: Tiny light gap will exist on each side.  
please choose outside mount for 100% blackout.

## OUTSIDE MOUNT

- Shade Width = Window width + 4" or more
- Shade Height : Works for window less than 72" high
- NO requirement for window depth.

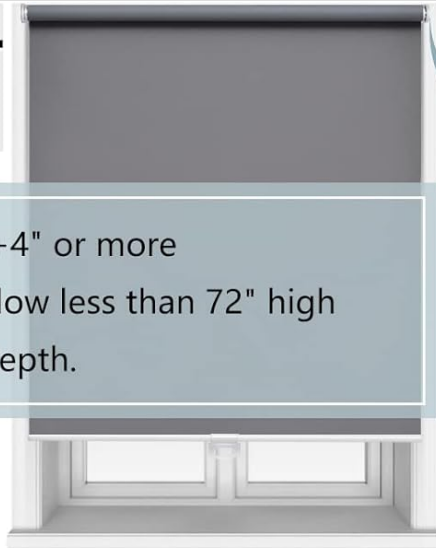


Window frame contact surface



**Note:** Tiny light gap will exist on each side. Please choose outside mount for 100% blackout.

## INSIDE MOUNT

- Order Width = Exact window width (or 0-1 inch less)
- Shade Height: Works for window less than 72" high
- Fabric Width: 1 inch shorter than the order width Window depth > 2"

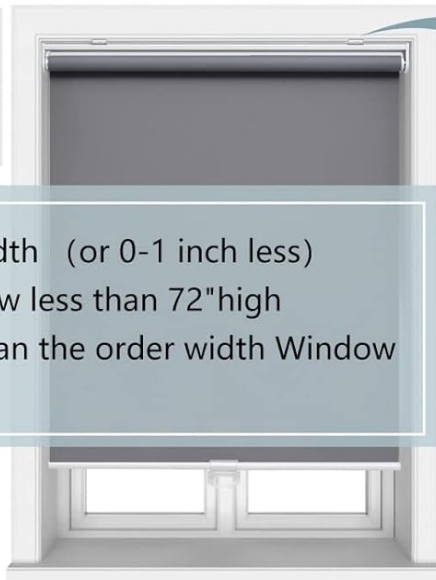

Window frame contact surface



Image: Visual guide for outside and inside mount installations, including measurement considerations.

## INSTALLATION

The product comes with an installation package including screws and metal brackets. For a visual guide, refer to the installation video provided by the manufacturer (if available).

### General Steps:

1. **Prepare Tools:** Gather necessary tools such as a drill, screwdriver, and measuring tape.
2. **Mark Bracket Positions:** Based on your chosen mount type (inside or outside), mark the positions for the metal brackets. Ensure the brackets are level and spaced correctly to support the shade.
3. **Drill Pilot Holes:** Drill pilot holes at the marked positions.
4. **Secure Brackets:** Attach the metal brackets securely using the provided screws.
5. **Mount the Shade:** Carefully align the roller shade with the installed brackets and snap it into place.
6. **Test Operation:** Gently pull the shade down and up to ensure smooth operation and proper installation.

*Note: The width of the product includes the size of the mounting bracket. A minimum of 2 inches of frame depth is required for inside mount installations.*

## OPERATION

---

Your AOSKY Cordless Roller Shades feature a user-friendly spring system for effortless control.

### Raising and Lowering the Shade:

- To lower the shade, gently pull down on the bottom bar or the cordless handle.
- To raise the shade, gently pull down on the bottom bar or handle and then release. The shade will retract automatically.
- The shade can be stopped smoothly at any desired position by simply releasing the bottom bar or handle.

### Adjusting Rebound Position and Speed:

The shades allow for adjustment of both the rebound speed and the stopping position.

- **Adjusting Rebound Speed:** Open the right side cover of the roller mechanism. Adjust the screw clockwise to slow down the rebound speed, or counterclockwise to increase it.
- **Adjusting Rebound Position:** Open the left side cover of the roller mechanism. Adjust the screw counterclockwise to set the desired stopping position for the shade when it retracts.

# PRODUCT DETAILS



Waterproof Same-Color Back

 


Cordless Handle Keep Children Safe



Open the left end cap

Rote location Regulator

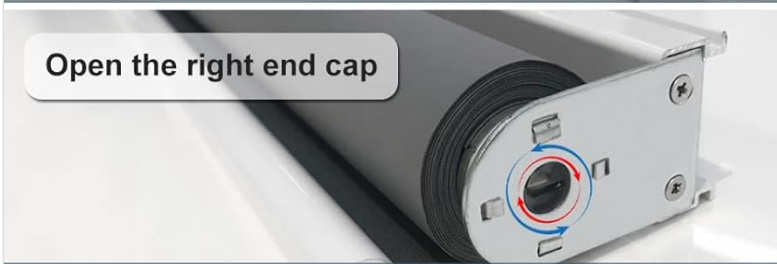

Open the right end cap

Rote Speed Regulator



Sturdy Texture Fabric and Hardware

Image: Detailed view of the cordless handle and adjustment mechanisms for speed and position.

## MAINTENANCE

To maintain the appearance and functionality of your roller shades, follow these simple care instructions:

- **Cleaning:** Spot clean only. Use a soft, damp cloth with mild soap and water to gently wipe any soiled areas. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the shades with a soft cloth or a vacuum cleaner with a brush attachment.
- **Mechanism Care:** Keep the spring mechanism free from dust and debris to ensure smooth operation.

## TROUBLESHOOTING

If you encounter any issues with your AOSKY Cordless Roller Shades, please refer to the following common solutions or contact customer support.

Problem	Possible Solution
Shade does not retract smoothly.	Check for any obstructions in the mechanism. Adjust the rebound speed (refer to "Adjusting Rebound Position and Speed" section).
Shade does not stay at desired position.	Adjust the rebound position (refer to "Adjusting Rebound Position and Speed" section).
Light gaps around the edges.	Ensure correct measurements were taken for your chosen mount type. For 100% blackout, an outside mount is recommended to fully cover the window frame.
Missing parts or damaged components.	Contact AOSKY customer support immediately for assistance.

## SPECIFICATIONS

Feature	Detail
Brand	AOSKY
Model Number	BK-RB-G2572
Material	100% Polyester
Product Dimensions (Current Model)	25"W x 72"H
Color (Current Model)	Grey
Opacity	Blackout (100% sunlight and UV block)
Operation Mode	Automatic (Cordless Spring System)
Special Feature	UV Protection, Thermal Insulation
Closure Type	Cordless
Mounting Type	Outside Mount (also supports Inside Mount)
Product Care	Spot Clean Only
Item Weight	2.49 pounds

## SUPPORT & WARRANTY

For any questions, concerns, or assistance with your AOSKY Cordless Roller Shades, please contact AOSKY customer support. While specific warranty details are not provided in this manual, the manufacturer is committed to providing satisfactory solutions for any product-related issues.

Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.

