

## PoKat AMZ-T1080AW-TU

# PoKat Farmhouse 3-Way Dimmable Touch Ceramic Table Lamp (Model AMZ-T1080AW-TU) Instruction Manual

Model: AMZ-T1080AW-TU | Brand: PoKat

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your PoKat Farmhouse 3-Way Dimmable Touch Ceramic Table Lamp, Model AMZ-T1080AW-TU. Please read this manual thoroughly before assembly and operation, and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please follow these guidelines:

- Ensure the power supply is disconnected before assembly, disassembly, or cleaning.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact qualified service personnel.
- Avoid placing the lamp in unstable locations or near water.
- Use only the specified bulb type and wattage. The lamp is designed for 3-way dimmable LED bulbs.
- Do not attempt to modify the lamp's electrical components.
- Keep the lamp away from flammable materials.
- The USB charging ports are for charging electronic devices only. Do not use them for other purposes or exceed their rated output.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package. If any parts are missing or damaged, contact customer support.

- Ceramic Lamp Base (x2)
- Fabric Lampshade (x2)

- Harp and Finial (x2 sets)
- 3-Way Dimmable LED Bulb (x2)
- Instruction Manual (this document)



Figure 3.1: Overview of the PoKat Farmhouse Table Lamp set, showing two lamps, their integrated USB charging ports, and the included LED bulbs.

## 4. SETUP INSTRUCTIONS

Follow these steps to assemble your table lamp:

1. Carefully unpack all components from the packaging.
2. Attach the harp to the saddle on the lamp base. The harp is the U-shaped metal frame.
3. Place the lampshade onto the harp. Ensure it sits evenly.
4. Secure the lampshade by screwing the finial onto the top of the harp. Tighten gently until snug.
5. Insert the included 3-way dimmable LED bulb into the lamp socket. Turn clockwise until secure.
6. Plug the lamp's power cord into a standard electrical outlet.



Figure 4.1: An assembled lamp, illustrating the touch control area on the base and the functionality of the USB charging ports with connected smartphones.

## 5. OPERATING INSTRUCTIONS

### 5.1. Touch Control and 3-Way Dimming

The lamp features a touch-sensitive base for easy operation and 3-way dimming functionality. To operate:

- **First Touch:** Turns the lamp ON to Low brightness.
- **Second Touch:** Adjusts the brightness to Medium.
- **Third Touch:** Adjusts the brightness to High.
- **Fourth Touch:** Turns the lamp OFF.

Ensure you are using a compatible 3-way dimmable LED bulb for this feature to function correctly. The included bulbs are compatible.



Figure 5.1: Visual representation of the three brightness levels (Low, Medium, High) achievable with the lamp's touch dimming feature.

## 5.2. USB Charging Ports

Each lamp is equipped with two USB charging ports located on the base. These ports provide convenient charging for your electronic devices, such as smartphones and tablets, even when the lamp is turned off, as long as the lamp is plugged into a power outlet.

- Connect your device's USB charging cable to one of the lamp's USB ports.
- Ensure the lamp is plugged into a wall outlet for the USB ports to function.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Disconnect the power before cleaning. Wipe the lamp base with a soft, dry cloth. Do not use abrasive cleaners or solvents. The lampshade can be gently dusted.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use only 3-way dimmable LED bulbs of appropriate wattage.
- **Cord Care:** Periodically inspect the power cord for any signs of damage. Do not bend or pull the cord excessively.

## 7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none"><li>◦ Lamp not plugged in.</li><li>◦ Bulb loose or faulty.</li><li>◦ Power outlet not working.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure the power cord is securely plugged into a live outlet.</li><li>◦ Tighten or replace the bulb.</li><li>◦ Test the outlet with another device.</li></ul>
3-Way dimming not working.	<ul style="list-style-type: none"><li>◦ Non-dimmable bulb installed.</li><li>◦ Bulb faulty.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure a 3-way dimmable LED bulb is installed.</li><li>◦ Replace the bulb with a new, compatible 3-way dimmable LED bulb.</li></ul>
USB ports not charging.	<ul style="list-style-type: none"><li>◦ Lamp not plugged into power.</li><li>◦ Device cable faulty.</li><li>◦ Device not compatible.</li></ul>	<ul style="list-style-type: none"><li>◦ Confirm the lamp is plugged into a live wall outlet.</li><li>◦ Try a different USB charging cable.</li><li>◦ Ensure your device is compatible with standard USB charging.</li></ul>

## 8. SPECIFICATIONS

Feature	Detail
Model Number	AMZ-T1080AW-TU
Brand	PoKat
Dimensions (L x W x H)	25.4 x 25.4 x 50.8 cm (10 x 10 x 20 inches)
Weight	1.81 kg (4 pounds) per lamp
Switch Type	Touch Control
Dimming	3-Way Dimmable (Low, Medium, High)
USB Ports	2 per lamp (for charging electronic devices)
Bulb Type	E26 Base, 3-Way Dimmable LED (2 bulbs included)
Room Type	Living Room, Bedroom



Figure 8.1: Detailed dimensions of the PoKat table lamp, indicating a total height of 20 inches, a lampshade width of 10 inches, and a base width of 5 inches.

## 9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty details and support inquiries.

