

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

**Cecotec 8435484033152**

# **Cecotec Cecofry Full Inox 5500 Pro Air Fryer User Manual**

Model: 8435484033152

## **INTRODUCTION**

---

Welcome to the user manual for your new Cecotec Cecofry Full Inox 5500 Pro Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, utilizing hot air circulation for crispy and delicious results with minimal to no oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Cecotec Cecofry Full Inox 5500 Pro Air Fryer, showcasing its sleek design and the pull-out basket filled with cooked vegetables.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the main parts of your Cecofry Air Fryer.



Image: Front view of the Cecotec Cecofry Full Inox 5500 Pro Air Fryer, highlighting the digital touch panel and the handle of the cooking basket.

- **Main Unit:** Houses the heating element and fan.
- **Cooking Basket:** Removable basket for holding food.
- **Crisper Tray/Rack:** Sits inside the cooking basket to allow air circulation around food.
- **Digital Touch Control Panel:** For setting temperature, time, and selecting cooking modes.
- **Handle:** For safely pulling out and inserting the cooking basket.
- **Air Outlet Vents:** Located at the back of the unit for hot air exhaust.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials from the air fryer.
2. **Cleaning:** Before first use, clean the cooking basket and crisper tray with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and above the appliance, to allow for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate. Ensure the area is well-ventilated.

## OPERATING INSTRUCTIONS

---

### Basic Operation

1. **Prepare Food:** Place your ingredients in the cooking basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the cooking basket back into the main unit until it clicks into place.
3. **Power On:** Touch the power icon on the digital control panel to turn on the appliance.
4. **Set Temperature and Time:**
  - Use the temperature control icons (up/down arrows) to adjust the temperature from 80°C to 200°C.
  - Use the time control icons (up/down arrows) to set the cooking time from 0 to 60 minutes.



Image: A hand adjusting settings on the digital touch control panel, showing the temperature and time display.

5. **Select Preset Mode (Optional):** The air fryer features 8 pre-configured modes for common foods. Touch the corresponding icon on the panel to select a preset. This will automatically set the optimal temperature and time.
6. **Start Cooking:** Press the start/pause button (often the power icon again or a dedicated play icon) to begin the



cooking process.

7. **Shake/Flip Food:** For some recipes, especially fries or smaller items, it is recommended to shake or flip the food halfway through cooking to ensure even crisping. The appliance may beep to remind you. Carefully pull out the basket, shake, and reinsert. The cooking will resume automatically.
8. **Finish Cooking:** Once the timer reaches zero, the air fryer will beep and automatically shut off. Carefully pull out the basket and transfer the cooked food to a plate.

## Cooking Tips

- For extra crispiness, lightly brush or spray food with a small amount of oil.
- Smaller food items usually require a shorter cooking time than larger items.
- Preheating the air fryer for 3-5 minutes can improve cooking results.
- You can use the air fryer to reheat food. Set the temperature to 150°C (300°F) for about 10 minutes.



Image: The air fryer basket being pulled out, showing perfectly cooked, crispy fries ready to be served.

## CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Tray:** The cooking basket and crisper tray are non-stick coated and can be cleaned with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher safe.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Do not use abrasive cleaners or steel wool.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure the appliance is clean and dry before storing. Store it in a cool, dry place.



Icon: Represents easy cleaning and maintenance.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking basket is fully inserted and clicked into place.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly brush or spray food with a small amount of oil. Increase temperature or cooking time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food being cooked.	Clean the basket and interior thoroughly after each use. For high-fat foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Appliance smells during first use.	Manufacturing residue burning off.	This is normal. Run the air fryer empty for 10-15 minutes at 200°C in a well-ventilated area before first use.

## TECHNICAL SPECIFICATIONS

**Brand:** Cecotec

**Model Number:** 8435484033152 (03315)

**Color:** Inox

**Dimensions (L x W x H):** 37.5 x 31.5 x 33.5 cm

**Capacity:** 5.5 Litres

**Power:** 1700 Watts

**Voltage:** 220-240 Volts (AC)

**Material:** Stainless Steel

**Temperature Control:** 80°C to 200°C

**Timer:** 0 to 60 minutes

**Item Weight:** 4 Kilograms

**Country of Origin:** Spain

## WARRANTY INFORMATION

Cecotec products are manufactured to the highest quality standards. This product is covered by a manufacturer's

warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and how to make a claim. Keep your proof of purchase for warranty validation.

**Spare Parts Availability:** 10 Years

## CUSTOMER SUPPORT

For any questions, technical assistance, or service requests regarding your Cecotec Cecofry Full Inox 5500 Pro Air Fryer, please contact Cecotec customer support. You can find contact information on the official Cecotec website or on the product packaging.

Visit the official Cecotec website for more information:[www.cecotec.com](http://www.cecotec.com)


© 2024 Cecotec. All rights reserved.

Documents - Cecotec – 8435484033152



[\[pdf\]](#) Accessories Catalog

Catalogue Cecofry Air Fryer 2023 CECOTEC EN cdn cecotec cloud s3 amazonaws media IFA2023 ||| CECOFRY AIR FRYERS Fried, but healthier Enjoy your favourite recipes in the healthiest and quickest ... MPOSITION: Air fryer Basket Instruction manual 27 x 35 x 30.5 cm 4.1 kg 220/240V 50/60Hz 1700 W **8435484033152** Box 18435484033159 Master 03315 28 27 x 35 x 30.5 cm 4.1 kg 220/240V 50/60Hz 1700... lang:en **score:17** filesize: 12.36 M page\_count: 27 document date: 2023-02-21

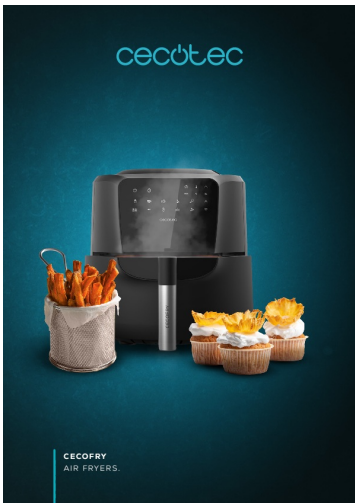

[\[pdf\]](#) Accessories

Catálogo Freidoras Dietéticas 2023 ENcdn cecotec cloud s3 amazonaws media IFA2023 EN ||| CECOFRY AIR FRYERS. The New Frito, the revolution is back. The Cecotec air fryers, which have chan ... Instruction manual 37.5 x 31.5 x 33.5 cm 4.85 kg 27 x 35 x 30.5 cm 4.1 kg 220/240V 50/60 Hz 1700 W **8435484033152** Box 18435484033159 Master 03315 50 39.3 x 28.2 x 31.6 4.5 kg 8435484049641 Box ... lang:en **score:13** filesize: 28.02 M page\_count: 49 document date: 2023-08-21