

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KEY SMART](#) /

› [KeySmart SafeTul - Foldable 4-in-1 Multi-Tool Instruction Manual](#)

KEY SMART KS919-BRS

KeySmart SafeTul - Foldable 4-in-1 Multi-Tool Instruction Manual

Model: KS919-BRS

INTRODUCTION

The KeySmart SafeTul is a compact, foldable 4-in-1 multi-tool designed to assist in daily tasks while minimizing direct contact with public surfaces. This manual provides detailed instructions for the proper use, care, and maintenance of your SafeTul.


PRODUCT OVERVIEW AND FEATURES

The KeySmart SafeTul integrates four essential functions into a single, durable brass tool:

- **Door Opener:** A hook designed to open various door handles without direct hand contact.
- **Button Pusher:** A tip for pressing buttons on ATMs, elevators, and keypads.
- **Touchscreen Stylus:** The tip can also function as a stylus for capacitive touchscreens.
- **Bottle Opener:** An integrated opener for beverage bottles.



Figure 1: The KeySmart SafeTul Foldable 4-in-1 Multi-Tool in its compact, folded state.

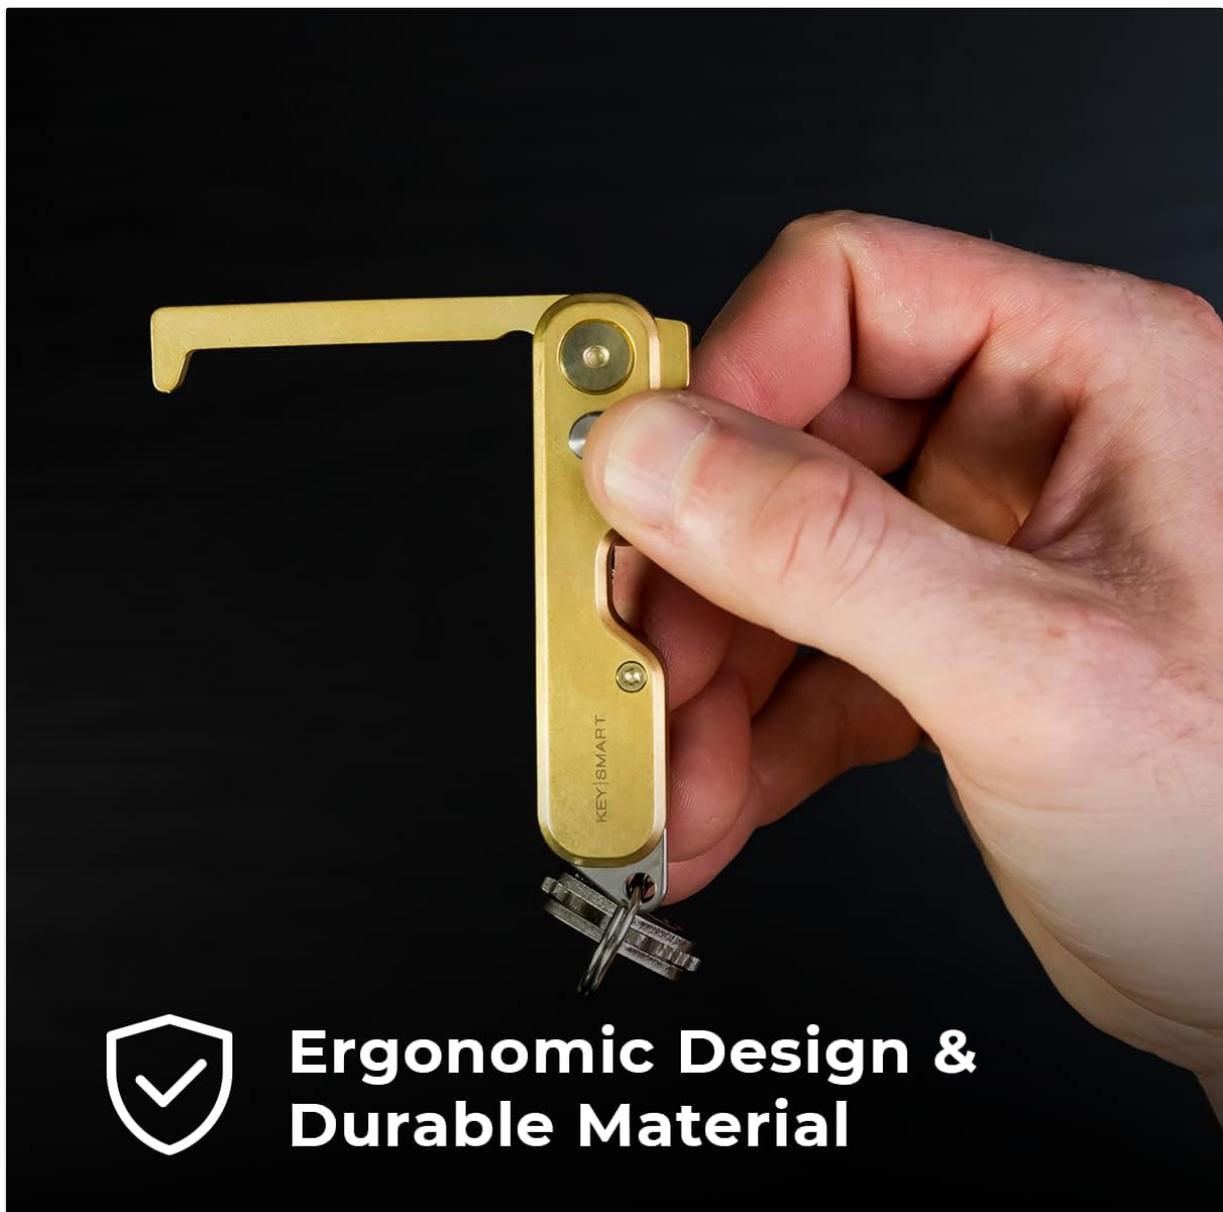

Ergonomic Design & Durable Material

Figure 2: A hand holding the KeySmart SafeTul, highlighting its ergonomic design and durable brass construction.

SETUP

The KeySmart SafeTul comes pre-assembled and ready for use. To integrate it with your existing keys or keychain:

1. Locate the keyring hole at the base of the SafeTul.
2. Attach your existing keyring or a small carabiner through this hole.
3. Ensure the SafeTul is securely fastened to prevent accidental loss.

OPERATING INSTRUCTIONS

Using the Door Opener



Figure 3: Demonstrating the use of the SafeTul to open a door handle without direct contact.

To open a door handle:

1. Unfold the SafeTul to extend the hook mechanism.
2. Hook the extended arm around the door handle.
3. Pull or push the door open using the SafeTul, avoiding direct contact with the handle.

Using the Button Pusher and Touchscreen Stylus

The tip of the SafeTul is designed for both button pressing and touchscreen interaction.

- **Button Pressing:** Use the rounded tip to press buttons on keypads, elevators, or other public interfaces.
- **Touchscreen Interaction:** The brass material of the tip is conductive and can be used to interact with capacitive touchscreens, such as those found on payment terminals or public information kiosks. Apply gentle pressure.

Using the Bottle Opener

The SafeTul includes an integrated bottle opener.

1. Locate the bottle opener notch on the side of the tool.
2. Position the notch under the bottle cap.
3. Leverage the SafeTul upwards to remove the cap.



Figure 4: The SafeTul showcasing its various functions alongside other accessories.

MAINTENANCE

To ensure the longevity and hygiene of your KeySmart SafeTul:

- **Cleaning:** Wipe the tool regularly with a soft, damp cloth. For disinfection, use an alcohol-based wipe or sanitizer. Ensure the tool is dry before storing.
- **Material Care:** The SafeTul is made of brass, which may naturally tarnish over time. This is a normal characteristic of brass and does not affect functionality. To restore its shine, use a brass cleaner according to the product's instructions.
- **Joints:** Periodically check the pivot points for any looseness. If the screws appear loose, gently tighten them with an appropriate small screwdriver to maintain the tool's integrity. Avoid over-tightening.

TROUBLESHOOTING

- **Tool feels loose:** Check the screws at the pivot points. If loose, carefully tighten them with a small screwdriver.
- **Difficulty opening doors:** Ensure the hook is fully extended and properly engaged with the door handle. The tool is designed for standard door handles and may not be suitable for all types, such as round

doorknobs.

- **Stylus not responding:** While the brass tip is conductive, some touchscreens may require a specific type of stylus or firmer contact. Ensure the screen is clean and try again.

SPECIFICATIONS

Model Number	KS919-BRS
Material	Brass
Color	Gold
Dimensions (L x W x H)	3.37 x 0.67 x 0.55 inches
Folded Size	2.5 inches
Item Weight	4.1 ounces (0.12 Kilograms)
Included Components	4-in-1 No Touch Door Opener Keychain, Button Pusher, Touchscreen Stylus, Bottle Opener
UPC	810024051762

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official KEY SMART website or contact their customer service directly. Keep your purchase receipt as proof of purchase.