

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WEN](#) /

› [WEN DT1516 16-Inch 15-Amp 2-in-1 Electric Dethatcher and Scarifier User Manual](#)

WEN DT1516

WEN DT1516 16-Inch 15-Amp 2-in-1 Electric Dethatcher and Scarifier User Manual

Model: DT1516

INTRODUCTION

This manual provides essential information for the safe and effective operation, assembly, and maintenance of your WEN DT1516 16-Inch 15-Amp 2-in-1 Electric Dethatcher and Scarifier. Please read all instructions carefully before use to ensure proper function and to prevent injury or damage.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of injury, keep hands and feet clear of rotating blades. Always wear appropriate protective gear, including eye protection, hearing protection, and sturdy footwear, when operating this equipment. Before starting, thoroughly inspect the work area for any rocks, debris, or other objects that could be thrown by the blades or cause damage to the machine. Ensure the power cord is clear of the working path to prevent accidental cutting or entanglement. Disconnect the power supply before performing any adjustments, maintenance, or when the machine is unattended.

SETUP AND ASSEMBLY

The WEN DT1516 requires minimal assembly. Follow these steps to prepare your unit for operation:

- Handle Assembly:** Attach the upper handle to the lower handle using the provided hardware. Ensure all connections are secure. The handle height is adjustable for user comfort.
- Blade Installation:** Your unit comes with two interchangeable heads: a 20-blade scarifying head and a 24-steel-tine dethatching head. Select the appropriate head for your task. Use the included Allen key to securely attach the desired head to the rotor shaft. Refer to the 'Interchangeable Heads' image for visual guidance.
- Collection Bag Attachment:** Securely attach the detachable collection bag to the rear of the unit. Ensure it is properly seated to collect thatch and debris effectively.
- Power Connection:** Connect the dethatcher to a suitable power outlet using a heavy-duty outdoor extension cord (12-gauge is recommended for optimal performance). Ensure the extension cord is in good condition and

rated for outdoor use.



Figure 1: WEN DT1516 Electric Dethatcher and Scarifier with collection bag attached, ready for use.



Figure 2: The interchangeable 20-blade scarifying head for aeration and the 24-tine steel dethatcher head for thatch removal.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your dethatcher/scarifier:

- 1. Adjusting Depth:** Use the 5-position height adjustment lever to select the desired working depth. Settings range from +1/4 inch (for light dethatching) to -1/2 inch (for aggressive scarifying). Refer to the '5-Position Height Adjustment' image for details.
- 2. Starting the Unit:** The unit features a 2-step safe start mechanism. First, press the safety lock button, then pull the switch handle towards you to engage the motor. Release the safety lock button while keeping the switch handle pulled to maintain operation.
- 3. Operation:** Push the unit across your lawn in overlapping passes. The 16-inch working width allows for efficient coverage. For dethatching, use the tines to gently rake up dead grass. For scarifying, the blades will penetrate the soil to aerate and remove deeper thatch.

4. **Collection Bag:** Monitor the collection bag and empty it frequently to maintain optimal performance and prevent clogging.
5. **Overload Protection:** The unit is equipped with overload protection that automatically stops the motor if the blades encounter hard objects like rocks or concrete. This prevents damage to the motor and blades. If this occurs, disconnect power, clear the obstruction, and restart the unit.



Figure 3: The 5-position height adjustment lever allows precise control over working depth.



2-STEP SAFE START

**PULL SWITCH
HANDLE**

**PRESS SAFETY
LOCK BUTTON**

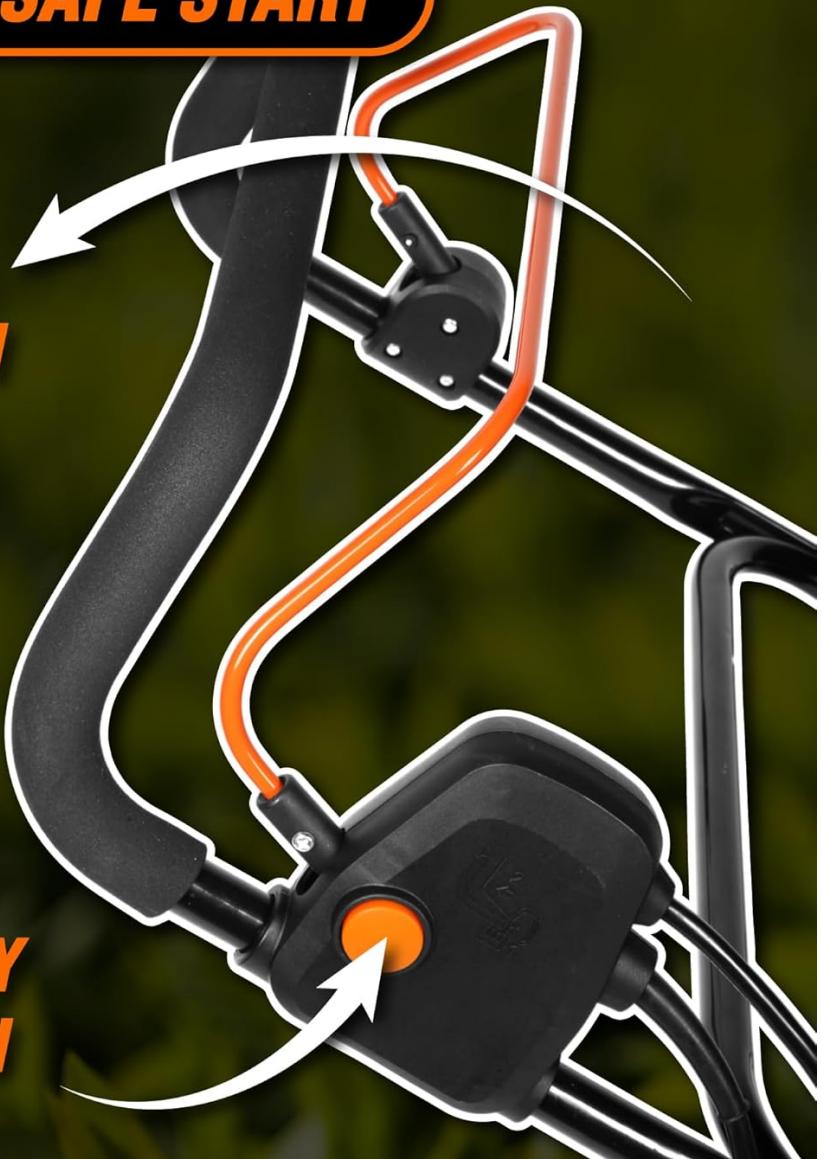


Figure 4: The 2-step safe start mechanism ensures accidental activation is prevented.

DETACHABLE COLLECTION BAG

**14.5 GALLONS
(55L)**



Figure 5: The detachable 14.5-gallon (55L) collection bag for gathering thatch and debris.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your WEN DT1516.

- Cleaning:** After each use, disconnect the power and clean the unit thoroughly. Remove any accumulated grass, thatch, or debris from the housing, blades, and wheels. Use a brush or cloth; avoid using water directly on electrical components.
- Blade Inspection:** Periodically inspect the dethatching tines and scarifying blades for wear, damage, or dullness. Worn or damaged blades should be replaced promptly to maintain effectiveness and safety. Replacement parts are available through WEN customer service.
- Storage:** Store the dethatcher/scarfifier in a dry, secure location, away from moisture and extreme temperatures. The handle can be folded down for compact storage.

TROUBLESHOOTING

This section addresses common issues you might encounter with your WEN DT1516.

Problem	Possible Cause	Solution
Unit does not start	Power cord not connected; Safety lock button not pressed; Circuit breaker tripped; Overload protection activated.	Ensure power cord is securely plugged in. Follow 2-step safe start procedure. Check household circuit breaker. If overload protection activated, clear obstruction and restart.
Poor dethatching/scarifying performance	Incorrect depth setting; Worn or damaged blades/tines; Collection bag full.	Adjust depth setting to a lower position. Inspect and replace blades/tines if necessary. Empty collection bag frequently.
Motor stops during operation	Overload protection activated due to obstruction (e.g., rock, thick thatch).	Disconnect power, clear the obstruction from the blades, and restart the unit. Reduce working depth if thatch is excessively thick.

If you encounter issues not listed here or require further assistance, please contact WEN customer service.

SPECIFICATIONS

Feature	Detail
Model Number	DT1516
Power Source	AC Electric
Motor	15 Amp
No-Load Speed	Up to 3300 RPM
Working Width	16 Inches
Height Adjustment	5 Positions (+1/4" to -1/2")
Scarifying Head	20 Blades
Dethatching Head	24 Steel Tines
Collection Bag Capacity	14.5 Gallons (55 Liters)
Item Weight	1 Pounds (Note: This weight seems unusually low for the product type and may be a data entry error. Refer to product packaging for accurate weight.)

Feature	Detail
Product Dimensions	40.94 x 23.62 x 40.94 inches
Material	Alloy Steel (blades/tines)

WARRANTY AND SUPPORT

The WEN DT1516 Electric Dethatcher and Scarifier is backed by a **two-year warranty**. This warranty covers defects in material and workmanship under normal use. For warranty claims, technical assistance, or to order replacement parts, please contact WEN customer service. A stocked inventory of replacement parts is available to ensure continued product support.

For more information or to explore other WEN products, visit the official [WEN Store](#).

Related Documents - DT1516

	<p>WEN DT1516 16-Inch Dethatcher & Scarifier Instruction Manual</p> <p>This manual provides comprehensive instructions for the WEN DT1516 16-Inch Dethatcher & Scarifier, covering safety guidelines, assembly, operation, maintenance, troubleshooting, and parts lists.</p>
	<p>WEN 15-Inch Dethatcher & Scarifier Model DT1315 Instruction Manual</p> <p>This manual provides essential safety information, assembly instructions, operation guidelines, and maintenance procedures for the WEN 15-Inch Dethatcher & Scarifier, Model DT1315. Learn how to safely use and maintain your WEN dethatcher and scarifier for optimal performance.</p>
	<p>WEN 20V MAX Brushless 15-Inch Lawn Mower (Models 20835, 20835BT) - Instruction Manual</p> <p>Comprehensive instruction manual for the WEN 20V MAX Brushless 15-Inch Lawn Mower (Models 20835, 20835BT), covering safety, operation, maintenance, and specifications. Learn how to safely assemble, use, and care for your WEN lawn mower.</p>



[WEN MSA1621 Scroll Saw Stand: Assembly, Safety, and Operation Manual](#)

Comprehensive instruction manual for the WEN MSA1621 Scroll Saw Stand, covering safety guidelines, unpacking, assembly instructions, mounting procedures, parts list, and warranty information. Designed for woodworking enthusiasts.



[WEN 4017 16-Inch Electric Chainsaw Instruction Manual](#)

Comprehensive instruction manual for the WEN 4017 16-inch electric chainsaw, covering safety, operation, maintenance, troubleshooting, and parts. Learn how to safely use and maintain your WEN chainsaw.

User Manual of Product 1:
WEN 3921 16 in. Two Direction Variable Speed Scroll Saw
with Work Light
User Manual of Product 2:
WEN 6502T 4.3-Amp 4 x 36 in. Belt and 8 in. Disc Sander with
Carrying Case

[WEN 3921 Scroll Saw & 6502T Belt & Disc Sander User Manuals](#)

Comprehensive user manuals for WEN 3921 Scroll Saw and WEN 6502T Belt & Disc Sander, covering safety, operation, maintenance, and specifications for woodworking enthusiasts.