

MAKYTWOW M-CL-B2

MAKYTWOW Candle Warmer Lamp (Model M-CL-B2) User Manual

Brand: MAKYTWOW | Model: M-CL-B2

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your MAKYTWOW Candle Warmer Lamp. This device offers a flameless method to enjoy scented candles by melting the wax with a halogen bulb, reducing fire hazards associated with traditional open-flame candles. It features adjustable brightness, a timer function, and an adjustable height to accommodate various candle sizes.

IMPORTANT SAFETY INSTRUCTIONS

- Do not light the candle wick when the lamp is in operation. The lamp is designed for flameless wax melting.
- Operate the candle warmer lamp on a stable, heat-resistant surface.
- Keep the lamp away from flammable materials, curtains, and other combustible items.
- Allow the bulb and lamp shade to cool completely before handling or cleaning. Hot surfaces can cause burns.
- Ensure the power cord is not damaged or pinched. Do not operate if the cord or plug is damaged.
- Keep out of reach of children and pets.
- Use only the specified GU10 110V-130V 35W halogen bulbs.
- Unplug the device when not in use or before cleaning.

PRODUCT FEATURES

PRODUCT DETAILS



Figure 1: Product Components. The lamp includes a clear glass shade, two GU10 halogen bulbs, an adjustable height mechanism, and a stable black base.



Figure 2: Adjustable Height. The lamp's height can be adjusted to suit various candle sizes, ensuring optimal melting and fragrance diffusion. Maintain approximately 2cm distance from the lampshade for best results.

- **Flameless Operation:** Melts candle wax using a halogen bulb, eliminating the need for an open flame and reducing soot.
- **Dimmable Light:** Adjust the brightness of the halogen bulb to control the wax melting speed and fragrance intensity.
- **Integrated Timer:** Features 2-hour, 4-hour, and 8-hour timer settings for automatic shut-off.
- **Adjustable Height:** The lamp's arm can be raised or lowered to accommodate different candle heights, ensuring efficient wax melting.
- **Durable Construction:** Made with a metal base and stand, and a clear glass lampshade.
- **Included Bulbs:** Comes with two GU10 35W halogen bulbs.

SETUP

1. **Unpack Components:** Carefully remove all items from the packaging. Verify that all parts are present: lamp base, adjustable arm with lampshade, and two GU10 halogen bulbs.

2. **Insert Bulb:** Gently twist one of the provided GU10 halogen bulbs into the socket located inside the glass lampshade. Ensure it is securely fastened.
3. **Place on Stable Surface:** Position the candle warmer lamp on a flat, stable, and heat-resistant surface, away from any flammable materials.
4. **Place Candle:** Place your desired scented candle (without lighting the wick) onto the center of the lamp's base.
5. **Adjust Height:** Loosen the adjustment knob on the lamp's vertical arm. Adjust the height of the lampshade so that the bulb is approximately 2cm (0.8 inches) above the candle's wax surface. Tighten the knob to secure the height.
6. **Connect Power:** Plug the power cord into a standard electrical outlet (110V-130V).

Your browser does not support the video tag.

Video 1: MAKYTWOW Candle Warmer Lamp Overview. This video demonstrates the lamp's components and initial setup, including placing a candle and adjusting the height.

OPERATING INSTRUCTIONS

The MAKYTWOW Candle Warmer Lamp is controlled via an inline switch on the power cord.



Figure 3: Inline Control Panel. The control panel allows for power, dimmer, and timer adjustments.

1. **Power On/Off:** Press the power button (usually indicated by a circle with a vertical line) to turn the lamp on or off.
2. **Adjust Brightness (Dimmer):** Use the '+' and '-' buttons to increase or decrease the brightness of the halogen bulb. Higher brightness results in faster wax melting and stronger fragrance release.
3. **Set Timer:** Press the timer button (usually indicated by a clock icon) to cycle through the available timer settings: 2 hours (2H), 4 hours (4H), and 8 hours (8H). The lamp will automatically turn off after the selected duration.

Your browser does not support the video tag.

Video 2: Dimmer and Timer Functionality. This video illustrates how to use the dimmer and timer features on the MAKYTWOW Candle Warmer Lamp.

MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged and completely cool before cleaning. Wipe the metal base and arm with a soft, dry cloth. The glass lampshade can be gently wiped with a damp cloth and then dried. Do not use abrasive cleaners or immerse any part of the lamp in water.
- **Bulb Replacement:** If the bulb burns out, ensure the lamp is unplugged and cool. Carefully twist out the old GU10 bulb and replace it with a new GU10 110V-130V 35W halogen bulb.
- **Wick Trimming:** Although the wick is not lit, it may absorb wax over time. If the wick becomes excessively long, you may trim it with scissors to maintain a neat appearance.
- **Wax Disposal:** After extended use, the top layer of wax may lose its fragrance. Allow the wax to cool and solidify, then gently scrape off the top layer to expose fresh, fragrant wax. Dispose of the old wax properly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose bulb, faulty bulb.	Check power connection. Ensure bulb is securely twisted in. Replace bulb if necessary.
Candle wax not melting or fragrance is weak.	Bulb too far from candle, low dimmer setting, old wax layer.	Adjust lamp height closer to the candle (approx. 2cm). Increase dimmer setting. Scrape off and dispose of the top layer of wax.
Lamp turns off unexpectedly.	Timer activated.	Check timer setting. If not desired, turn off the timer function.

SPECIFICATIONS

Feature	Detail
Model Number	M-CL-B2
Product Dimensions	11"D x 7"W x 8"H
Item Weight	2.98 Pounds
Material	Glass, Metal
Color	Black
Light Source Type	Halogen
Bulb Base	GU10
Wattage	50 watts

Feature	Detail
Voltage	130 Volts
Control Method	Inline Remote (Dimmer, Timer)
Timer Settings	2H, 4H, 8H

WARRANTY & SUPPORT

MAKYTWOW is committed to customer satisfaction. If you encounter any issues or have questions regarding your Candle Warmer Lamp, please contact our customer support team. Refer to your purchase documentation for specific warranty details.

For further assistance, visit the official MAKYTWOW store:[MAKYTWOW Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question