

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PLAY](#) /

› [PLAY Kids Air Fryer Instruction Manual](#)

PLAY 3618

PLAY Kids Air Fryer Instruction Manual

Model: 3618

PRODUCT OVERVIEW

The PLAY Kids Air Fryer is a realistic pretend kitchen appliance designed for children aged 24 months to 12 years. It features interactive lights, sounds, and a working timer, providing an engaging play experience. The included play food items, such as chicken nuggets and fries, change color to simulate cooking, enhancing imaginative play.



Image: The PLAY Kids Air Fryer, showcasing its vibrant red and blue design, along with the included play chicken nuggets and fries. The air fryer features a clear basket to view the food.

WHAT'S INCLUDED

- 1 x Toy Air Fryer
- 2 x Play Chicken Nuggets (color-changing)
- 6 x Play French Fries (color-changing)



Image: A visual representation of the toy air fryer and its accompanying play food items, highlighting the complete set.

SETUP

- Unboxing:** Carefully remove all components from the packaging. Ensure all included items are present as listed in the "What's Included" section.
- Battery Installation:** Locate the battery compartment, typically on the underside or rear of the unit. Insert the required batteries (not included) following the polarity indicators (+/-). Securely close the battery compartment.
- Placement:** Place the air fryer toy on a stable, flat surface.

OPERATING INSTRUCTIONS

- Load Food:** Pull out the clear basket from the front of the air fryer. Place the desired play chicken nuggets or fries into the basket.

Perfect for Your Kids Kitchen Playset



Image: A child demonstrates how to load play food into the air fryer's removable basket, preparing for pretend cooking.

2. **Insert Basket:** Slide the basket back into the air fryer until it clicks securely into place.
3. **Select Cooking Function:** The air fryer features various buttons on its control panel, representing different food types (e.g., chicken, fries, fish). While these buttons may not alter the cooking process, they are designed for interactive play.

5 TIME SETTING

Different Food, Different Time Display




Image: Close-up of the air fryer's control panel, showing icons for different food settings and a digital timer display.

4. **Start Cooking:** Press the power button (usually indicated by a universal power symbol) to activate the air fryer. You will hear realistic cooking sounds and see lights illuminate inside the basket, simulating the cooking process. The digital display will show a countdown timer.

PRETEND PLAY AIR FRYER



Light effect

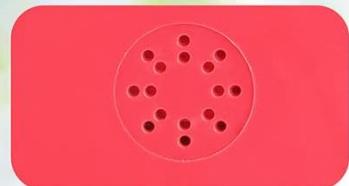

Sound effect



Simulation fry color changing



Easy to open

Image: The air fryer in operation, demonstrating the light and sound effects that mimic real air frying. The play food is visible inside the basket.

5. **Color Change Feature:** During the "cooking" cycle, the play food items will gradually change color, indicating they are "done." This visual effect adds to the realism of the play experience.

COLOR CHANGING FOOD

FOOD COLOR WILL CHANGE AFTER FRYING LIKE REAL FOOD AFTER FRYING



Image: A side-by-side comparison showing the play food before and after its color-changing effect, simulating the cooking process.

6. **Cooking Complete:** Once the timer reaches zero, the air fryer will emit a completion sound, signaling that the pretend food is ready.
7. **Serve:** Carefully remove the basket and serve the "cooked" food for imaginative play.

MAINTENANCE

- **Cleaning:** The air fryer and play food can be wiped clean with a damp cloth. Do not immerse the electronic unit in water.
- **Storage:** Store the toy and its accessories in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** If lights dim or sounds become faint, it's time to replace the batteries. Refer to the "Setup" section for battery installation instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or lights/sounds are weak.	Low or dead batteries. Incorrect battery installation.	Replace batteries with new ones, ensuring correct polarity.
Play food does not change color.	Insufficient light exposure during "cooking" cycle.	Ensure the air fryer is operating with its internal lights active during the cooking cycle. The color change is a light-activated feature.
Basket is difficult to insert or remove.	Misalignment or obstruction.	Ensure the basket is aligned correctly with the tracks. Do not force it. Check for any foreign objects.

SPECIFICATIONS

- Model Number:** 3618
- Product Dimensions:** 7.09 x 5.12 x 9.45 inches
- Item Weight:** 1.26 pounds
- Recommended Age:** 24 months - 12 years
- Material:** Durable Plastic
- Country of Origin:** China

WARRANTY AND SUPPORT

PLAY is committed to providing high-quality toys. For any questions regarding product operation, maintenance, or potential issues, please contact PLAY customer support. While specific warranty details are not provided in this manual, general support can often be found through the brand's official channels or the retailer where the product was purchased. For more information about PLAY products and support, please visit the official PLAY Store:[PLAY Store on Amazon](#)