

manuals.plus /

- › [Panasonic](#) /
- › [Panasonic Digital Cordless FAX KX-PD750DL-N User Manual](#)

Panasonic KX-PD750DL

Panasonic Digital Cordless FAX KX-PD750DL-N User Manual

Model: KX-PD750DL | Brand: Panasonic

[Introduction](#) [Safety Information](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the Panasonic Digital Cordless FAX KX-PD750DL-N. This advanced device integrates a digital cordless telephone with a fax machine, offering a range of features designed for convenience and security. Key functionalities include an integrated temperature and humidity alarm, robust nuisance call prevention and consultation features, and a "View Before Printing" function for faxes, which helps conserve paper and ink.



Main unit and cordless handset of the Panasonic KX-PD750DL-N Digital Cordless FAX.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources or in direct sunlight.
- Use only the power adapter and batteries supplied with the unit.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.
- Keep the unit out of reach of children.
- Ensure proper ventilation around the unit.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed in the packing list are present. Retain the packaging for future transport or storage.

3.2 Connecting the Main Unit

1. Connect the power adapter to the main unit and then to a power outlet.
2. Connect the telephone line cord to the main unit and then to your telephone wall jack.

3.3 Handset Setup

1. Insert the supplied rechargeable battery into the cordless handset.
2. Place the handset on the charging cradle. Allow it to charge for at least 7 hours before initial use.

受信したファクスの内容を画面で確認 見てから印刷



紙とインクフィルムを
無駄にしません。



The cordless handset and main unit, illustrating the cordless design for flexible placement.

3.4 Initial Settings

Follow the on-screen prompts on the main unit's LCD to set the date, time, and other basic preferences. Refer to the detailed comparison table for feature differences between models.

迷惑電話防止機能で 「攻めの防犯」を

防犯アドバイザー
佐々木 成三

推薦!



Comparison table highlighting features like LCD size, cordless handset, temperature/humidity alarm, view before printing, and nuisance call consultation across different models.

4. OPERATING INSTRUCTIONS

4.1 Making and Receiving Calls

- **To make a call:** Lift the handset or press the speakerphone button, then dial the number.
- **To receive a call:** Lift the handset or press the speakerphone button when the phone rings.
- The main unit features an incoming call notification LED. During a call, it lights up blue. For warning information, it flashes red.

停電でもあんしん 簡易停電通話



※光回線などをご利用の方は、親機が接続されているアダプターなどの通信機器が停電時に動作しないため、通話できません。
※親機本体用の電池パックは付属されていません。簡易停電通話を使う場合は、別売品(KX-FAN57)をお買い求めください。

The main unit and handset displaying the LED notification feature, with blue light for calls and red for warnings.

4.2 Fax Functionality: View Before Printing

The KX-PD750DL-N allows you to receive faxes into memory and view them on the large 4.7-inch LCD screen before printing. This feature helps you decide which faxes are necessary to print, thereby saving paper and ink film.

1. When a fax is received, it will be stored in the unit's memory.
2. Navigate to the "View Before Printing" option on the LCD screen.
3. Review the fax content. You can zoom in or rotate the view.
4. Select to print only the necessary pages or delete unwanted faxes.

熱中症警戒や乾燥警戒をお知らせ 温度・湿度アラーム

温度や湿度が高くなったとき



(ポーン♪)

「熱中症にご注意ください。適切な温度と湿度に調節してください。」



湿度が40%未満になると



(ポーン♪)

「乾燥にご注意ください。適切な湿度に調節してください。」



※設置場所や使用環境によっては温度、湿度を正常に検知できないことがあります。日常生活でのめやすとしてご使用ください。

The large LCD screen displaying a received fax, with options to view and select for printing, demonstrating the "View Before Printing" function.

4.3 Nuisance Call Prevention and Consultation

This unit is equipped with advanced features to combat nuisance calls:

- **Nuisance Prevention Function:** Before the phone rings, the unit plays a warning message to the caller. This function is active for calls from numbers not registered in the phonebook, provided Caller ID service is enabled.
- **Nuisance Call Consultation Function:** If you receive a suspicious call, you can record the conversation. During the call, you can play back the recorded conversation to a third party (e.g., family member or police) for immediate consultation. Note: This function is not available on the cordless handset. During playback, the other party's voice is audible, but your voice is not transmitted to them.

あやしいと思ったら第三者に相談 「迷惑電話相談」機能



録音した通話を第三者との通話中に再生して聞いてもらうことができます。

※子機の通話では、迷惑電話相談の機能は使えません。

※録音の再生中は電話の相手の声は聞こえますが、自分の声は相手に聞こえません。

An illustration depicting the "Nuisance Prevention" function, aiming to deter fraudulent calls before they connect.

コードがないから、すっきり・ラクラク 受話器コードレス



An illustration showing a user consulting with family or police about a suspicious call using the "Nuisance Call Consultation" feature.

Your browser does not support the video tag.

Video: A security advisor discusses the importance of proactive crime prevention and the rising trend of special fraud, emphasizing the need for protective measures like the Panasonic KX-PD750DL-N's features.

4.4 Temperature and Humidity Alarm

The main unit is equipped with a sensor that detects ambient temperature and humidity. It can alert you to conditions that may lead to heatstroke or excessive dryness. This feature is intended as a daily life guide and is not for medical, nursing, childcare, or professional use. It cannot prevent heatstroke or dryness.

- When temperature or humidity exceeds preset thresholds, the unit will provide voice alerts, display warnings on the LCD, and flash the incoming call notification LED in red.
- You can configure the unit to automatically call a pre-registered family member's mobile phone when heatstroke warning conditions are detected.
- This function needs to be activated and configured after purchase.

家族の携帯電話に電話をかけて通知 熱中症警戒の通知



※熱中症警戒の通知を設定してください。温度・湿度アラームの設定に関わらず、設定に従って働きます。また電話回線などを利用するため、通信環境や使用状況、ネットワーク障害などにより、適切に通知できないことがあります。本機能を使用することによる損害の発生などについて、当社の故意、過失により生じた場合を除き、パナソニックは責任を負いかねますので、あらかじめご了承ください。

An illustration showing the main unit displaying temperature and humidity warnings, with accompanying voice alerts for heatstroke and dryness.

大きな文字で見やすい 選べる待機画面

4種類から選択可能

12:45 24.6°C
50%

10月20日 (木)

時刻・日付・温度・湿度

12:45

10月20日 (木)

時刻・日付

12:45

24.6°C | 50%

時刻・温度・湿度

24.6°C | 50%

温度・湿度

An illustration demonstrating how the unit can automatically notify a family member's mobile phone when heatstroke warning conditions are detected.

4.5 Other Features

- **Selectable Standby Screen:** Choose from four types of standby screen displays, including time, date, temperature, and humidity.
- **Simple Power Outage Call:** In the event of a power outage, the main unit can still make and receive calls for a limited time, provided a compatible battery pack (sold separately, KX-FAN57) is installed. This function is not available if using optical lines or communication devices that do not operate during power outages.
- **User-Friendly Keypad:** The keypad is designed for ease of use, featuring clearly labeled buttons for various functions.

着信を光ってお知らせ 着信お知らせLED(親機)



通話中は青色点灯、
着信中は青色点滅で
お知らせ!



警戒情報は
赤色の点灯・点滅で
お知らせ!

Four examples of selectable standby screen displays on the main unit, showing various combinations of time, date, temperature, and humidity.

着信に気づきやすい 「着信お知らせLED」



A close-up view of the main unit's keypad, highlighting its user-friendly design and clearly labeled buttons.

使いやすさに配慮したパネルデザイン



A list detailing the basic functions available on the Panasonic KX-PD750DL-N, including call recording, call rejection, voice change, and phonebook features.

5. MAINTENANCE

5.1 Cleaning the Unit

To maintain optimal performance and appearance, regularly clean your unit.

- Wipe the exterior of the main unit and handset with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and mild soap, then wipe dry immediately.
- Do not use abrasive cleaners, benzene, thinner, or any other chemical solvents, as they may damage the surface.
- Clean the LCD screen with a soft, lint-free cloth.

5.2 Replacing Consumables

Refer to the specific instructions in the full product manual for details on replacing fax paper and ink film. Use only genuine Panasonic replacement parts to ensure proper operation and avoid damage.

6. TROUBLESHOOTING

If you experience issues with your Panasonic KX-PD750DL-N, please refer to the following common troubleshooting steps before contacting support.

Problem	Possible Cause	Solution
No dial tone	Telephone line not connected properly.	Check the telephone line connection to the unit and wall jack.
Handset not charging	Handset not placed correctly on the cradle; battery depleted or faulty.	Ensure the handset is seated correctly. Check battery condition and replace if necessary.
Cannot send/receive faxes	No fax paper/ink film; telephone line issue; incorrect settings.	Check paper and ink film. Verify telephone line connection. Review fax settings.
Temperature/Humidity alarm not working	Feature not activated or incorrectly configured.	Access the unit's menu to activate and configure the alarm settings.

7. SPECIFICATIONS

Feature	Detail
Model Number	KX-PD750DL-N
Brand Name	Panasonic
Color	Champagne Gold
Product Dimensions	21.3 x 31.8 x 8.8 cm
Item Weight	3.55 kg
Batteries Included	Yes

Feature	Detail
Batteries Required	Yes
Compatible Devices	Mobile phone (for notification features)
First Available Date	2022/09/14

8. WARRANTY & SUPPORT

8.1 Warranty Information

This Panasonic product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, service, or further inquiries, please contact Panasonic customer support. Contact details can be found on the official Panasonic website or in your product documentation.

Online resources, including FAQs and additional manuals, may also be available on the Panasonic support website.