

XMRM-006

Generic XMRM-006 Remote Control User Manual

For Xiaomi MI Box S and MI TV Stick

INTRODUCTION

This manual provides comprehensive instructions for the Generic XMRM-006 Remote Control. It is designed to be compatible with Xiaomi MI Box S (MDZ-22-AB) and Xiaomi MI TV Stick (MDZ-24-AA) devices, offering full functionality including voice control.



Image: The XMRM-006 remote control shown alongside a Xiaomi MI TV Stick and a Xiaomi MI Box S, indicating compatibility.

SETUP

1. Battery Installation

The remote control requires two AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the cover back into place until it clicks securely.



Image: View of the remote control with the battery cover removed, illustrating the correct orientation for inserting AA batteries.

2. Pairing the Remote Control (Bluetooth)

For full functionality, including voice control, the remote must be paired with your Xiaomi MI Box S or MI TV Stick via Bluetooth. If the remote does not respond immediately after battery installation, follow these pairing steps:

1. Ensure your Xiaomi device is powered on and you are on the home screen.
2. Hold the remote control close to your Xiaomi device (within 20 cm).
3. Simultaneously press and hold the **Home** button (circle icon) and the **Back** button (arrow icon) for approximately 5-10 seconds.
4. Release the buttons when you see a pairing confirmation message on your TV screen.
5. If pairing is successful, the remote control will be ready for use.
6. If pairing fails, repeat the steps. You may need to navigate to the Bluetooth settings on your Xiaomi device to manually add a new device.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal use of your remote control.

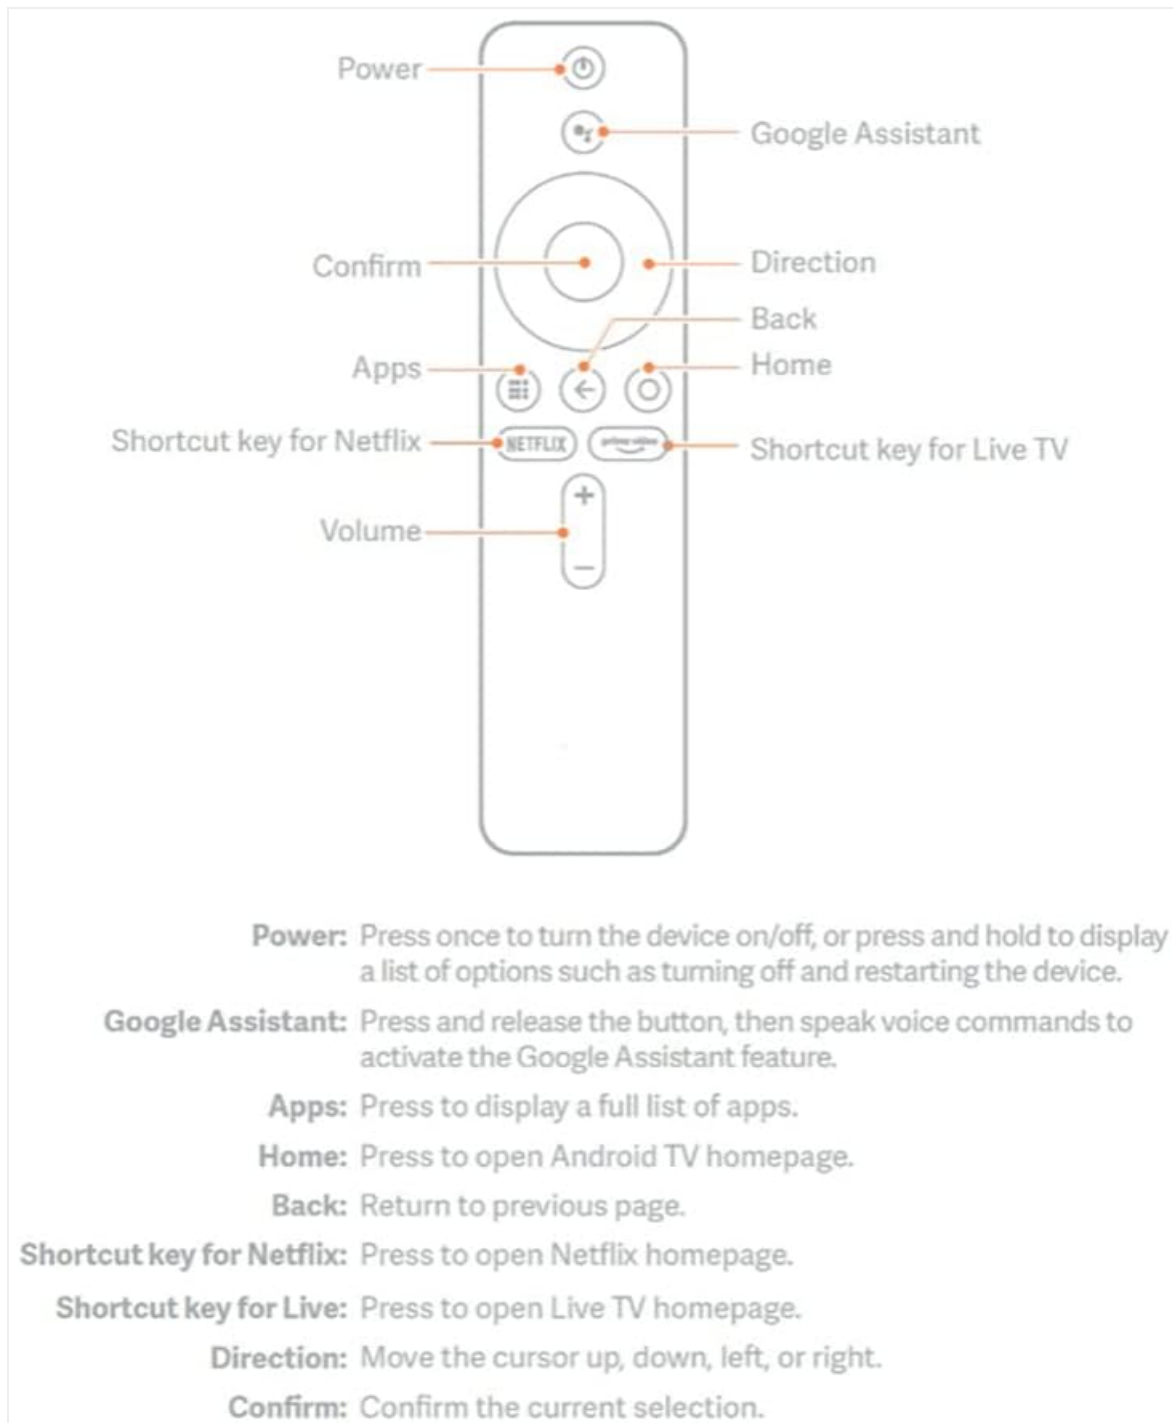


Image: A detailed diagram illustrating each button on the XMRM-006 remote control and its corresponding function.

Button Functions:

- **Power:** Press once to turn the device on/off, or press and hold to display a list of options such as turning off and restarting the device.
- **Google Assistant:** Press and release this button, then speak voice commands to activate the Google Assistant feature.
- **Directional Pad (Up, Down, Left, Right):** Move the cursor or selection up, down, left, or right.
- **Confirm (Center Button):** Confirm the current selection or action.

- **Back:** Return to the previous page or menu.
- **Home:** Press to open the Android TV homepage.
- **Apps:** Press to display a full list of installed applications.
- **Shortcut key for Netflix:** Press to open the Netflix application directly.
- **Shortcut key for Live TV:** Press to open the Live TV homepage directly.
- **Volume (+/-):** Adjust the volume level.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, heat sources, or excessive moisture.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> • Check if the batteries are correctly installed and have sufficient charge. Replace if necessary. • Ensure there are no obstructions between the remote and your Xiaomi device. • Re-pair the remote control with your Xiaomi device (refer to "Pairing the Remote Control" section).
Voice control is not working.	<ul style="list-style-type: none"> • Ensure the remote is properly paired via Bluetooth. Voice control requires a Bluetooth connection. • Check your Xiaomi device's internet connection. Voice commands often require internet access. • Verify that Google Assistant is enabled in your Xiaomi device's settings.
Remote range is poor.	<ul style="list-style-type: none"> • Replace the batteries with new ones. • Ensure there are no strong electromagnetic interferences nearby. • Keep the remote within the recommended operating range (up to 10 meters).
Specific buttons are not working.	<ul style="list-style-type: none"> • Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris. • If only specific buttons fail, it might indicate a hardware issue. Consider replacing the remote.

SPECIFICATIONS

- **Model:** XMRRM-006
- **Brand:** Generic
- **Compatible Devices:** Xiaomi MI Box S (MDZ-22-AB), Xiaomi MI TV Stick (MDZ-24-AA)
- **Connectivity Technology:** Bluetooth (for voice control and full functionality), Infrared (for basic functions, if applicable)
- **Special Features:** Voice Search
- **Battery Type:** 2 x AA (Alkaline recommended)
- **Maximum Range:** Up to 10 meters (33 feet)
- **Color:** Black
- **Manufacturer:** Arfigo

WARRANTY AND SUPPORT

This product is sold by a third-party manufacturer. For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly through the platform where the product was acquired.

Keep your purchase receipt or order number handy when contacting support.