

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Falebare](#) /

› [Falebare 6S Bluetooth Headphones User Manual](#)

Falebare 6S

Falebare 6S Bluetooth Headphones User Manual

Model: 6S | Brand: Falebare

1. INTRODUCTION

Thank you for choosing the Falebare 6S Bluetooth Over-Ear Headphones. These headphones are designed to provide a superior audio experience with high-fidelity stereo sound, deep bass, and crystal-clear treble. With advanced features like 6 EQ modes, 40 hours of playtime, and a comfortable foldable design, they are perfect for various uses, including travel, work, and daily listening. This manual will guide you through the setup, operation, and maintenance of your new headphones.

2. SAFETY INFORMATION

- **Volume Levels:** To prevent hearing damage, avoid listening at high volume levels for extended periods.
- **Driving/Cycling:** Do not use headphones while driving, cycling, or in situations where you need to hear ambient sounds.
- **Water Resistance:** The headphones are water resistant, but not waterproof. Avoid submerging them in water or exposing them to heavy rain.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals or abrasive materials.
- **Comfort:** It is recommended to remove the headphones every 1-2 hours to allow your ears to relax and ensure a pleasant listening experience.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Falebare 6S Bluetooth Over-Ear Headphones
- 3.5mm Audio Cable

- USB Type-C Charging Cable
- User Manual (this document)



Image: The Falebare 6S headphones, 3.5mm audio cable, USB charging cable, and user manual as typically found in the product packaging.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Falebare 6S headphones:



Image: A detailed diagram highlighting the location and function of each button and port on the Falebare 6S headphones, including power, playback controls, volume, EQ/mode button, TF card slot, and charging port.

Control Functions:

- **Power ON/OFF:** Located on the right earcup. Long press to power on or off.
- **Play/Pause/Call Control:** Central button on the right earcup. Press once to play/pause music or answer/end calls. Long press to reject calls.
- **Previous/Volume-:** Button on the right earcup. Press once for previous track, long press to decrease volume.
- **Next/Volume+:** Button on the right earcup. Press once for next track, long press to increase volume.
- **Equalizer/Bluetooth/FM/TF (M Button):** Button on the right earcup. Press to cycle through EQ modes. Long press for 3 seconds to enter Bluetooth pairing mode.
- **TF Card Slot:** Located on the right earcup for inserting a TF (MicroSD) card (up to 32GB, not included).
- **Charging Port:** USB Type-C port on the right earcup for charging.
- **3.5mm Audio Jack:** For wired connection.

5. SETUP

5.1. Charging the Headphones

Before first use, fully charge your headphones. A full charge takes approximately 2.5 hours.

1. Connect the USB Type-C charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power adapter (e.g., wall charger, computer USB port).
3. The LED indicator will show charging status (refer to product for specific light behavior, typically red while

charging, off when full).

 


Image: The Falebare 6S headphones being charged via a Type-C cable, illustrating the fast charging capability to reach 100% in 2.5 hours.

5.2. Power On/Off

- **To Power On:** Long press the Power ON/OFF button until the LED indicator lights up and you hear a power-on prompt.
- **To Power Off:** Long press the Power ON/OFF button until the LED indicator turns off and you hear a power-off prompt.

5.3. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device (smartphone, tablet, PC).

1. Ensure the headphones are powered off.
2. Long press the Power ON/OFF button until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "6S" or "Falebare 6S" from the list of found devices.
5. Once connected, the LED indicator will typically show a solid blue light or flash slowly.



Image: The Falebare 6S headphones positioned near a smartphone, demonstrating their Bluetooth 5.3 connectivity and Hi-Fi stereo audio capabilities.

5.4. Wired Connection (Aux Mode)

You can use the headphones in wired mode even if the battery is depleted.

1. Connect one end of the included 3.5mm audio cable to the audio jack on the headphones.

2. Connect the other end of the cable to the 3.5mm audio output of your device.
3. The headphones will automatically switch to wired mode. Note that button controls on the headphones may be limited in wired mode, and playback will be controlled by your connected device.



Image: A visual representation of the Falebare 6S headphones, highlighting the flexibility of both wireless Bluetooth and wired 3.5mm audio cable connections, ensuring uninterrupted listening.

6. OPERATING INSTRUCTIONS

6.1. Basic Music Controls

- **Play/Pause:** Press the central Play/Pause button once.
- **Volume Up:** Long press the "Next/Volume+" button.
- **Volume Down:** Long press the "Previous/Volume-" button.
- **Next Track:** Press the "Next/Volume+" button once.
- **Previous Track:** Press the "Previous/Volume-" button once.

6.2. Call Control

- **Answer/End Call:** Press the central Play/Pause button once during an incoming call.
- **Reject Call:** Long press the central Play/Pause button during an incoming call.
- **Redial Last Number:** Double-press the central Play/Pause button.

6.3. EQ Modes

The Falebare 6S headphones feature 6 distinct EQ modes to customize your listening experience.

- Press the "Equalizer/Bluetooth/FM/TF" (M) button to cycle through the following modes:
 - **Bass:** Enhanced low frequencies.
 - **Jazz:** Optimized for jazz music.
 - **Voice:** Clearer vocals, ideal for podcasts or audiobooks.
 - **Rock:** Punchy sound for rock music.
 - **Pop:** Balanced sound for pop music.
 - **Classic:** Rich, full sound for classical music.



Image: A visual representation of the six distinct EQ modes available on the Falebare 6S headphones, each tailored for different music genres or audio types, such as Classic, Pop, Rock, Vocal, Jazz, and Bass.

6.4. FM Radio / TF Card Mode

The headphones support FM radio and playback from a TF (MicroSD) card.

- **TF Card Playback:** Insert a TF card (up to 32GB, not included) with MP3 audio files into the TF card slot. The headphones will automatically switch to TF card mode and begin playback.
- **FM Radio:** Press the "Equalizer/Bluetooth/FM/TF" (M) button to switch to FM radio mode. Use the "Next/Volume+" and "Previous/Volume-" buttons to scan for stations.

7. MAINTENANCE

7.1. Cleaning

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or spray directly onto the headphones.

- Clean the ear cushions gently with a damp cloth if necessary, and allow them to air dry completely before use.

7.2. Storage

The Falebare 6S headphones feature a foldable design for easy storage and portability.

- Fold the earcups inward to minimize their size.
- Store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on top of the headphones.

 


Image: The Falebare 6S headphones shown in their folded configuration, highlighting the space-saving and portable design feature.

8. TROUBLESHOOTING

If you encounter any issues with your headphones, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------|---|---|
| Headphones do not power on. | Low battery. | Charge the headphones fully. |
| Cannot pair with device. | Headphones not in pairing mode; Bluetooth off on device; device too far. | Ensure headphones are in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move device closer to headphones (within 33 feet). |
| No sound or low volume. | Volume too low on headphones or device; incorrect audio source; headphones not connected. | Increase volume on both headphones and device. Ensure headphones are properly connected via Bluetooth or 3.5mm cable. Check if the correct audio output is selected on your device. |
| Sound cuts in and out. | Interference; device too far; low battery. | Move closer to your device. Avoid strong electromagnetic interference. Charge the headphones. |
| Wired mode not working. | Cable not fully inserted; faulty cable. | Ensure the 3.5mm audio cable is fully inserted into both the headphones and the device. Try a different 3.5mm audio cable if available. |

9. SPECIFICATIONS

| Feature | Detail |
|------------|----------------------------------|
| Model Name | Headphones Wireless Bluetooth 6S |

| Feature | Detail |
|-----------------------------------|--|
| Connectivity Technology | Wireless (Bluetooth), Wired (3.5mm Jack) |
| Wireless Communication Technology | Bluetooth |
| Battery Life | Up to 40 Hours |
| Charging Time | Approx. 2.5 Hours |
| Frequency Range | 20 Hz to 20,000 Hz |
| Headphones Jack | 3.5 mm Jack |
| Material | Faux Leather, Leather |
| Item Weight | 10.8 ounces |
| Package Dimensions | 6.54 x 4.69 x 3.43 inches |
| Control Type | Volume Control |
| Control Method | Touch, Voice (via built-in microphone) |
| Ear Placement | Over Ear |
| Noise Control | Passive Noise Cancellation |

10. WARRANTY AND SUPPORT

Falebare products are designed for quality and reliability. For any product-related inquiries, technical support, or warranty information, please contact Falebare customer service or visit the official Falebare store.

You can visit the Falebare Store for more information and support: [Falebare Store on Amazon](#)