

vidaXL 48498

vidaXL White Party Tent User Manual

Model: 48498 | Brand: vidaXL

1. PRODUCT OVERVIEW

The vidaXL White Party Tent is designed to provide a spacious and comfortable outdoor shelter for various events such as parties, weddings, and garden gatherings. Constructed with a durable iron frame and UV- and water-resistant polyethylene material, this tent offers reliable protection from the elements while enhancing your outdoor space.

- **Rainfall Ready:** The canopy is made from water-resistant materials, suitable for light rain. For heavy rainfall, treating the canopy with a waterproof spray is recommended.
- **Sturdy Construction:** Features a robust heavy-duty iron frame for stability and longevity.
- **Spacious Design:** Measures 13.1' x 13.1' x 9' (L x W x H), providing ample space for guests and activities.
- **Effortless Assembly:** Designed for easy setup with all necessary mounting materials included.
- **Weather Resistant:** Crafted from UV- and water-resistant polyethylene for outdoor use in various weather conditions.



Image of the assembled vidaXL White Party Tent, showcasing its spacious design and white polyethylene canopy.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use of the party tent.

- **California Proposition 65 Warning:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.
- **Weather Conditions:** While the tent is water-resistant, it is not designed for extreme weather conditions such as strong winds, heavy snow, or torrential rain. In such conditions, disassemble the tent to prevent damage or injury.
- **Anchoring:** Always ensure the tent is securely anchored to the ground using all provided ropes and stakes to prevent it from being lifted by wind.
- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- **Assembly:** Assemble the tent on a flat, level surface. Ensure all connections are secure before use. Adult supervision is recommended during assembly.
- **Maintenance:** Regularly inspect the tent for any signs of wear or damage. Do not use if any components are broken or missing.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged:

- PE Canopy (Polyethylene Tent Cover)
- Iron Frame Components (Poles, Connectors)
- Mounting Materials (Ropes, Stakes, etc.)

If any parts are missing or damaged, please contact vidaXL customer support before proceeding with assembly.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the vidaXL Party Tent is designed to be straightforward. It is recommended that at least two adults assist with the assembly process.

1. **Prepare the Area:** Choose a flat, clear, and level outdoor area for the tent. Ensure there are no overhead obstructions or sharp objects on the ground.
2. **Unpack Components:** Carefully unpack all components and lay them out. Familiarize yourself with the different pole lengths and connectors.
3. **Assemble the Roof Frame:** Begin by connecting the shorter iron poles to form the top rectangular frame of the tent. Use the appropriate connectors to secure each joint. Ensure all connections are firm.
4. **Attach Leg Poles:** Once the roof frame is assembled, attach the longer leg poles to each corner and along the sides of the roof frame. Ensure the adjustable sections of the leg poles are at their lowest setting initially.



Detail image of a tent frame connection point, showing how the iron poles are joined to form the structure.


5. **Drape the Canopy:** Carefully drape the polyethylene canopy over the assembled frame. Ensure the canopy is centered and aligned with the frame.

6. **Secure the Canopy:** Attach the canopy to the frame using the provided ties or fasteners. Ensure it is taut and evenly distributed to prevent water pooling.
7. **Adjust Height (Optional):** If desired, adjust the height of the tent by extending the adjustable leg poles. Ensure all legs are extended to the same height for stability.



Close-up view of the adjustable leg mechanism of the tent frame, showing multiple height settings for customization.

8. **Anchor the Tent:** Securely anchor the tent to the ground using the provided ropes and stakes. Attach ropes to the tent frame at designated points and stake them firmly into the ground at an angle away from the tent. This is crucial for stability, especially in windy conditions.

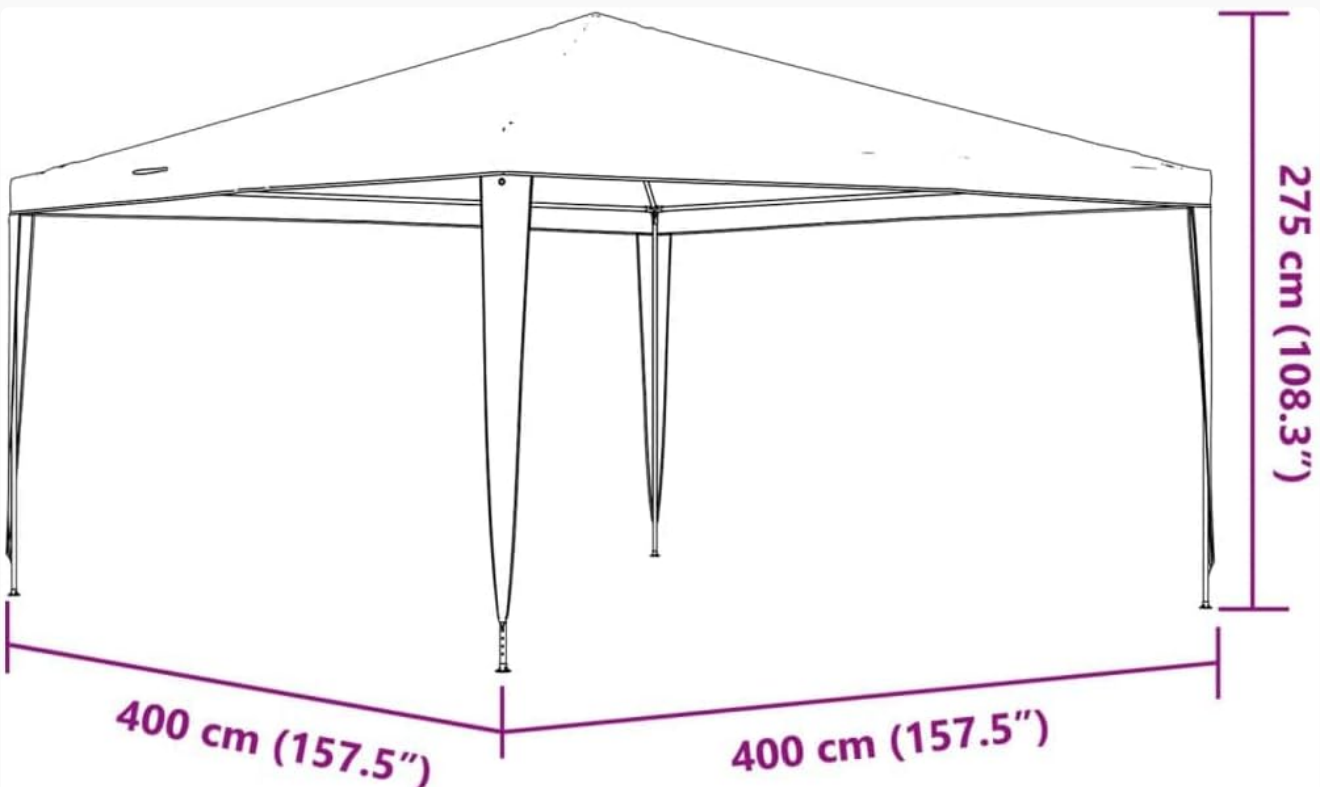

Technical diagram illustrating the dimensions of the vidaXL White Party Tent, showing a width and length of 157.5 inches (400 cm) and a height of 108.3 inches (275 cm).

5. OPERATING INSTRUCTIONS / USAGE

The vidaXL White Party Tent is designed for temporary outdoor use to provide shade and shelter for various events.

- **Intended Use:** Ideal for garden parties, family gatherings, outdoor markets, and other temporary outdoor events.
- **Weather Protection:** The polyethylene canopy offers UV protection and is water-resistant against light rain. For prolonged or heavy rainfall, it is highly recommended to treat the canopy with a waterproof spray to enhance its water repellency.
- **Ventilation:** Ensure adequate ventilation, especially if using the tent in warm weather, to prevent heat buildup.
- **Stability:** Always ensure the tent is properly anchored to the ground. Do not use the tent in strong winds or severe weather conditions.



The vidaXL White Party Tent set up in a garden, providing shade and shelter for an outdoor gathering with a picnic table and benches underneath.

6. MAINTENANCE

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning:** Clean the canopy and frame with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as they can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Waterproofing:** To maintain or enhance water resistance, especially for heavy rainfall, periodically apply a suitable waterproof spray to the polyethylene canopy.
- **Inspection:** Regularly inspect the frame for any signs of rust, bending, or damage. Check the canopy for tears or excessive wear. Replace damaged components as necessary.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the canopy is completely dry before folding to prevent mildew.

7. TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Tent is unstable or wobbly:**
 - Ensure all frame connections are fully engaged and secure.
 - Verify that the tent is set up on a flat, level surface.
 - Confirm that all ropes and stakes are properly utilized and firmly anchored into the ground.
- **Water pooling on the canopy:**
 - Ensure the canopy is stretched taut and evenly across the frame.
 - Check if the tent's height is uniform across all legs. Adjust if necessary.
 - Consider applying a waterproof spray to the canopy to improve water runoff.
- **Difficulty with assembly:**
 - Refer back to the assembly instructions (Section 4) and diagrams.
 - Ensure you have all components listed in Section 3.
 - It is recommended to have at least two adults for assembly.

8. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | vidaXL |
| Model Number | 48498 |
| Color | White |
| Material (Canopy) | Polyethylene (PE) |
| Material (Frame) | Iron |
| Product Dimensions (L x W x H) | 13.1' x 13.1' x 9' (157.5"L x 157.5"W x 108.3"H) |
| Item Weight | 16.68 pounds (7.58 kg) |
| Water Resistance Level | Water Resistant |
| UV Protection | Yes |

| | |
|-------------------|-----|
| Assembly Required | Yes |
|-------------------|-----|

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the vidaXL store on Amazon or their official website.