

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RC-913R Replacement Remote Control User Manual

ECONTROLLY RC-913R

RC-913R Replacement Remote Control User Manual

Brand: ECONTROLLY

1. OVERVIEW

The ECONTROLLY RC-913R is a replacement infrared remote control designed for specific Integra AV Receiver models. It is pre-programmed and ready to use without additional setup, offering a straightforward solution for controlling your audio-video receiver.



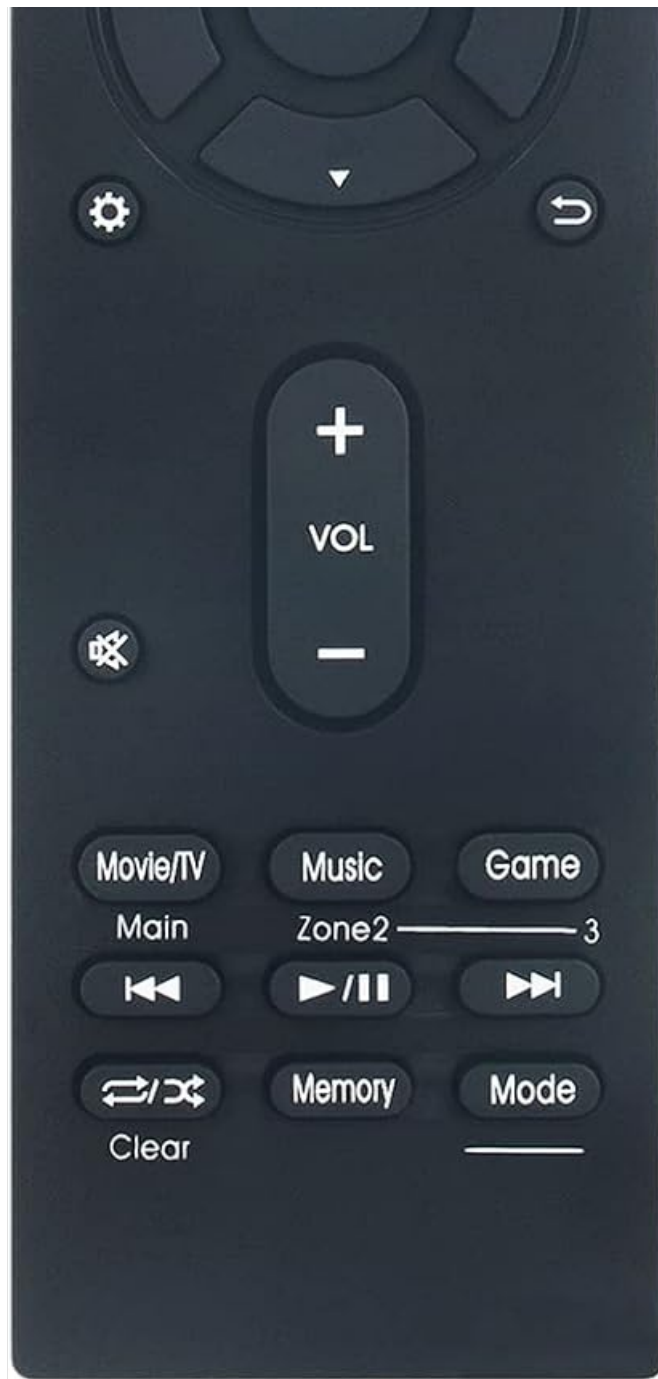


Figure 1: Front view of the RC-913R Remote Control.

2. COMPATIBLE MODELS

This remote control is specifically designed to work with the following Integra AV Receiver models:

- DRX-5
- DRX-5.2
- DRX-4
- DRX-3.2
- DRX-R1.1
- DRC-R1.1

3. SETUP

3.1 Battery Installation

The RC-913R remote control requires two (2) AAA ALKALINE batteries for operation. Please follow these steps for battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries for optimal performance and to prevent potential damage.



Figure 2: Angled view of the RC-913R, showing the general form factor.

4. OPERATING INSTRUCTIONS

The RC-913R is an infrared remote control, meaning it operates by sending infrared light signals to your Integra AV Receiver. Ensure there is a clear line of sight between the remote control and the receiver's infrared sensor for proper operation. No programming is required; simply insert batteries and begin use.

4.1 Basic Functions

The remote control features dedicated buttons for various functions of your Integra AV Receiver. Below are some common button functionalities:

- **Power Button** (⏻): Turns the receiver on or off.
- **Input Selectors** (e.g., **BD/DVD**, **CBL/SAT**, **Game**, **STRMBox**, **PC**, **AUX**, **CD**, **TV**, **Tuner**, **NET**, **Phono**): Selects the desired audio/video input source.
- **Volume Up/Down** (**VOL + / -**): Adjusts the master volume level.
- **Mute** (⏻): Mutes or unmutes the audio output.
- **Navigation Buttons** (**Up**, **Down**, **Left**, **Right**, **Enter**): Used to navigate menus and confirm selections on your receiver's display.
- **Quick Menu** (**Q**): Accesses quick settings or context-sensitive menus.
- **Return** (↩): Goes back to the previous menu or screen.
- **Dimmer**: Adjusts the brightness of the receiver's display.
- **Playback Controls** (**Play/Pause**, **Skip Forward**, **Skip Backward**): Controls media playback for compatible sources.
- **Zone 2**: Controls functions for a secondary audio zone, if supported by your receiver.



Figure 3: Button layout of the RC-913R Remote Control.

5. MAINTENANCE

Proper care and maintenance will extend the life of your remote control:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water; do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical shocks and drops, as this can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your RC-913R remote control, consider the following troubleshooting steps:

- **Remote Not Responding:** Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA ALKALINE batteries.
- **No Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your Integra AV Receiver. Point the remote directly at the receiver.
- **Weak Signal:** If the remote only works at close range, the batteries may be low. Replace them.
- **Receiver Issues:** Confirm that your Integra AV Receiver is powered on and functioning correctly. Try operating the receiver using its front panel controls.
- **Compatibility:** Double-check that your receiver model is listed under the compatible models in Section 2.

7. SPECIFICATIONS

Feature	Specification
Model	RC-913R
Compatibility	Integra AV Receiver models: DRX-5, DRX-5.2, DRX-4, DRX-3.2, DRX-R1.1, DRC-R1.1
Technology	Infrared (IR)
Programming Required	No (Pre-programmed)
Power Source	2 x AAA ALKALINE Batteries (not included)
Product Dimensions	7.09 x 1.97 x 0.59 inches (18 x 5 x 1.5 cm)
Item Weight	2.79 ounces (79 grams)
Color	Black
Max Number of Supported Devices	1

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY RC-913R remote control, please contact the manufacturer or seller directly through your purchase platform. Please refer to your purchase documentation for

specific warranty information, as it may vary.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question