

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY N9278UD Replacement Remote Control User Manual for Emerson TV DVD Combo

ECONTROLLY N9278UD

ECONTROLLY N9278UD Replacement Remote Control User Manual

For Emerson TV DVD Combo Models: EWC27T3, EWC19T5, EWC19T3, EWC19T4, EWC19T2

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the ECONTROLLY N9278UD replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of specific Emerson TV DVD Combo models, offering convenient control over your television and DVD player functions.

2. PRODUCT FEATURES

- **Pre-programmed:** No programming or pairing is required. The remote is ready to use directly out of the package.
- **Infrared Technology:** Operates using standard infrared signals.
- **Easy Operation:** Designed for intuitive use with clearly labeled buttons.

3. COMPATIBLE MODELS

The ECONTROLLY N9278UD remote control is compatible with the following Emerson TV DVD Combo models:

- EWC27T3
- EWC19T5
- EWC19T3
- EWC19T4
- EWC19T2

4. SETUP: BATTERY INSTALLATION

Before using the remote control, you must install batteries. Batteries are not included with this product.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the

diagrams inside the compartment.

4. Close the battery compartment cover securely.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries for optimal performance and to prevent potential damage.



Figure 1: Angled view of the ECONTROLLY N9278UD remote control. The battery compartment is located on the back, not visible in this view.

5. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Emerson TV DVD Combo unit.





Figure 2: Front view of the ECONTROLLY N9278UD remote control, showing all buttons and their labels.

Basic Functions:

- **POWER:** Turns the TV DVD Combo unit on or off.
- **SELECT:** Switches between TV and DVD modes.
- **Number Buttons (0-9, +10, +100):** Directly input channel numbers or DVD track numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **MUTE:** Mutes or unmutes the audio.
- **Playback Controls (PLAY, PAUSE, STOP, REW, FF, SKIP):**Control DVD playback functions.
- **ENTER / Directional Arrows:** Navigate menus and confirm selections.
- **DISC MENU:** Accesses the DVD disc menu.
- **SETUP:** Accesses the system setup menu.

For specific functions not listed, refer to the original user manual of your Emerson TV DVD Combo unit, as button labels on this replacement remote correspond to the original remote's functions.

6. TROUBLESHOOTING

If the remote control is not functioning as expected, consider the following:

- **Remote Not Responding:**
 - Ensure there is a clear line of sight between the remote control and the TV DVD Combo unit's infrared receiver. Obstructions can block the signal.
 - Check the batteries. Replace them with fresh AAA ALKALINE batteries if they are low or depleted.
 - Verify that the batteries are inserted with the correct polarity (+/-).
- **Specific Buttons Not Working:**
 - This remote is pre-programmed. If a specific button does not work, ensure your Emerson TV DVD Combo model supports that function.

7. SPECIFICATIONS

Feature	Detail
Model Number	N9278UD
Product Dimensions	7.09 x 1.77 x 0.59 inches
Item Weight	1.94 ounces
Batteries Required	2 x AAA ALKALINE (not included)
Compatible Devices	Emerson TV DVD Combo units
Special Feature	Pre-programmed

8. WARRANTY AND SUPPORT

For any questions or assistance regarding your ECONTROLLY N9278UD replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact information.

© 2023 ECONTROLLY. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BFHK24FH>

More documents and user manuals: <https://manuals.plus/>