Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- MalTec /
- Maltec WT-3400KW Ultrasonic Humidifier, Ionizer, and Aroma Diffuser User Manual

MalTec WT-3400KW

Maltec WT-3400KW Ultrasonic Humidifier, Ionizer, and Aroma Diffuser User Manual

Model: WT-3400KW

1. Introduction

Thank you for choosing the Maltec WT-3400KW Ultrasonic Humidifier, Ionizer, and Aroma Diffuser. This device is designed to improve indoor air quality by maintaining optimal humidity levels, purifying the air through ionization, and enhancing your environment with aromatherapy. Please read this manual thoroughly before operating the device to ensure safe and efficient use.

Maintaining indoor humidity between 40% and 60% is beneficial for health and comfort, especially during heating seasons when air can become excessively dry. Dry air can lead to dry mucous membranes and increased susceptibility to respiratory issues.



Image 1.1: The humidifier can help alleviate discomfort caused by dry air.

2. SAFETY INSTRUCTIONS

- Always place the humidifier on a firm, flat, and waterproof surface.
- Do not place the device near heat sources or in direct sunlight.
- Keep the device out of reach of children and pets.
- Do not immerse the base unit in water or other liquids.
- Unplug the device before filling, cleaning, or moving it.
- Use only clean, cool tap water. Distilled or demineralized water is recommended to prevent mineral buildup.
- Do not add essential oils directly into the water tank. Use the designated aroma tray.
- Do not block the mist outlet or air inlet.
- If the device emits unusual sounds, smells, or smoke, unplug it immediately and contact support.
- Ensure the power cord is not damaged or pinched.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- Maltec WT-3400KW Humidifier Unit (Base and Water Tank)
- Remote Control
- Cleaning Brush
- Water Filter (pre-installed or separate)
- User Manual



Image 3.1: Overview of the Maltec WT-3400KW humidifier and its included accessories.



Image 3.2: The humidifier and its packaging, showing included items.

4. SETUP

- 1. **Unpack:** Carefully remove all components from the packaging.
- 2. **Placement:** Place the humidifier on a flat, stable, and water-resistant surface at least 15 cm away from walls and furniture. Avoid placing it on carpets or near electronic devices.
- 3. Fill Water Tank:
 - Remove the water tank from the base.
 - Unscrew the tank cap at the bottom of the tank.
 - Fill the tank with clean, cool tap water. Do not exceed the maximum fill line.
 - · Securely screw the tank cap back on.
 - Place the filled water tank back onto the base unit, ensuring it is seated correctly.
- 4. **Add Essential Oils (Optional):** Locate the aroma tray, usually a small drawer or compartment on the side or back of the base unit. Add a few drops of your preferred essential oil onto the aroma pad. Do not add oils directly into the water tank.

5. **Connect Power:** Plug the power cord into a suitable electrical outlet (220-240V / 50-60Hz).

5. OPERATING INSTRUCTIONS

The Maltec WT-3400KW can be operated via its touch control panel or the included remote control.



Image 5.1: The touch control panel and remote control for operating the humidifier.

5.1 Power On/Off

Press the ON/OFF button on the touch panel or remote control to turn the device on or off. The LED display will illuminate when the device is on.

5.2 Mist Control

• Press the **SPEED** button (or mist icon) to cycle through three mist output levels: Low, Medium, and High. The current level will be indicated on the display.

5.3 Hygrostat (Humidity Control)

- Press the HUMIDITY button to set your desired humidity level, ranging from 45% to 90% Relative
 Humidity (RH) in 5% increments. The device will automatically adjust mist output to maintain the set
 humidity.
- The display will show the current humidity level.



Image 5.2: Setting the desired humidity level using the remote control.

5.4 Ionizer Function

• Press the **PURIFY** button (or ionizer icon) to activate the ionizer. This function releases negative ions into the air, which can help neutralize positive ions from electronic devices and reduce airborne particles like allergens and dust mites.

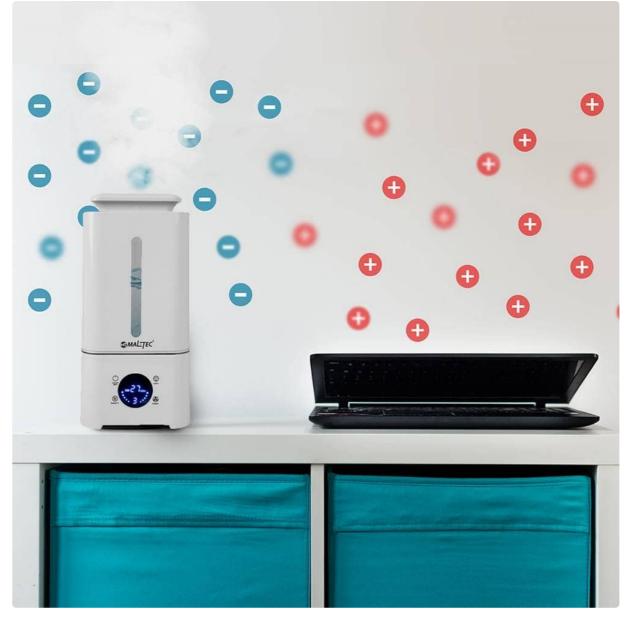


Image 5.3: The ionizer function helps purify the air by releasing negative ions.

5.5 Aromatherapy

• Ensure essential oils have been added to the aroma tray as described in the Setup section. The aromatherapy function operates automatically when the humidifier is running.

5.6 Night Light Function

• Press the **LIGHT** button to turn the night light on or off. This feature provides a soft illumination, suitable for nighttime use.



Image 5.4: The humidifier operating with its night light feature.

5.7 Timer Function

• Press the **TIMER** button to set the operating time. You can set the timer from 1 to 8 hours. The device will automatically turn off once the set time has elapsed.

5.8 Sleep Mode

 Press the SLEEP button to activate sleep mode. In this mode, the display lights dim, and the device operates quietly for undisturbed rest.

5.9 Automatic Shut-off

• The device features an automatic shut-off function when the water tank is empty, indicated by a warning light or sound. This prevents damage to the unit.

6. MAINTENANCE

Regular cleaning is essential to prevent mineral buildup and ensure optimal performance and hygiene.

6.1 Daily Maintenance

- · Empty and rinse the water tank daily.
- Wipe the inside of the water tank with a clean cloth.

6.2 Weekly Cleaning

- Unplug the device before cleaning.
- Clean the Water Tank: Remove the tank and clean it with a soft brush and mild detergent. Rinse thoroughly to remove any residue.
- Clean the Ultrasonic Membrane: Use the provided cleaning brush or a soft cloth to gently wipe the ultrasonic membrane located in the base unit. Do not use abrasive cleaners or sharp objects. If mineral deposits are present, soak a cotton swab in white vinegar and gently wipe the membrane.
- Clean the Base Unit: Wipe the surface of the base unit with a damp cloth. Do not allow water to enter the air outlet or other openings.
- Clean the Water Filter: The water filter is reusable. Rinse it under running water to remove any dirt or mineral buildup. Ensure it is dry before reinserting.
- Clean the Aroma Tray: Remove the aroma pad and wash it with mild soap and water. Allow it to dry completely before reuse.

6.3 Storage

- If the humidifier will not be used for an extended period, clean all components thoroughly and ensure they are completely dry.
- Store the device in a cool, dry place, away from direct sunlight.

7. TROUBLESHOOTING

If you encounter any issues with your Maltec WT-3400KW, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No mist output	No water in tank; Tank not properly seated; Ultrasonic membrane dirty; Power not connected	Refill water tank; Re-seat tank correctly; Clean ultrasonic membrane; Check power connection
Unusual odor	New unit odor; Stagnant water; Dirty tank/base	Run for a few hours; Empty and clean tank/base; Use fresh water
White dust around unit	Hard water mineral deposits	Use distilled or demineralized water; Clean unit regularly
Remote control not working	Battery depleted; Obstruction between remote and unit	Replace battery; Ensure clear line of sight
Water leakage	Tank cap not secured; Tank damaged; Overfilled tank	Tighten tank cap; Inspect tank for damage; Do not overfill

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Parameter	Value
Model	WT-3400KW
Power	28 W
Power Supply	220-240 V / 50-60 Hz
Tank Capacity	3.4 Liters
Recommended Room Size	25 to 35 m²
Noise Level	<36 dB
Timer Settings	1-8 hours
Hygrostat Range	45 - 90% RH (in 5% increments)
Humidification Capacity	300 ml/h
Mist Control Levels	3 (Low, Medium, High)
Cable Length	110 cm
Product Dimensions (D x W x H)	15.6 x 15.5 x 31.5 cm
Weight	0.9 kg (product), 1.2 kg (item)
Features	Remote Control, Ionizer, Hygrostat, Water Filter, Air Purifier, Cool Mist, Aromatherapy, Night Light, Touch Screen, Auto-Off (empty tank)

Image 8.1: Dimensions of the Maltec WT-3400KW humidifier.

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and claim procedures.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Maltec customer support. Contact information can typically be found on the product packaging, the manufacturer's official website, or your purchase receipt.

Related Documents - WT-3400KW



Maltec Air Fryer 1800W-9L: User Manual & Operation Guide

Comprehensive user manual for the Maltec Air Fryer 1800W-9L, covering safety instructions, operation, settings, troubleshooting, and maintenance for optimal cooking results.





Koc Elektryczny Grzewczy CozyHeat150W Regulacja Instrukcja obsługi

Maltec CozyHeat150W Electric Heating Blanket: User Manual and Safety Guide

Comprehensive user manual for the Maltec CozyHeat150W electric heating blanket, covering features, operation, safety instructions, cleaning, and disposal. Learn how to use your heated throw for optimal comfort and safety.



Maltec Electric Bathroom Radiator BH200W-WH/BL - User Manual & Specifications

Comprehensive user manual and specifications for the Maltec BH200W-WH/BL electric bathroom radiator, covering operation, settings, safety, and disposal.



MalTec Food Dryer DryExpert450W Instruction Manual

Get the most out of your MalTec DryExpert450W food dehydrator with this comprehensive instruction manual. Learn about safe operation, pre-treatment of various foods, cleaning, maintenance, and troubleshooting.



MalTec GAS-4500Wt-BT/ST Gas Heater Instruction Manual

This manual provides instructions for the MalTec GAS-4500Wt-BT and GAS-4500Wt-ST gas heaters. It covers safety precautions, installation, operation, maintenance, and troubleshooting for outdoor use.



Maltec MasterWash2200W Wet and Dry Vacuum Cleaner User Manual

Comprehensive user manual for the Maltec MasterWash2200W wet and dry vacuum cleaner. This guide provides detailed instructions on safety precautions, product features, installation steps, operation procedures, maintenance, and troubleshooting tips.

Documents - MalTec - WT-3400KW





MalTec Nawilżacz ultradźwiękowy WT-3400KW +OLEJKI Instrukcja Obsługi

[pdf]

MalTec Nawilżacz ultradźwiękowy WT 3400KW OLEJKI 2022 09 10 — Rekomendacje Najpierw sprawdź czy nie ma żadnych uszkodzeń i natychmiast zgłoś je sprzedającemu Upewnij się że napięcie jest takie samo jak na maltec pl index dispatch attachments getfile attachment id 51 |||

MalTec Nawilacz ultradwikowy **WT-3400KW** OLEJKI Instrukcja Obslugi Przeczytaj uwanie instrukcj przed uyciem. Szanowny Kliencie, dzikujemy za wybr naszych produktw. Charakterystyka techniczna: Napicie: 220-240V-/60Hz 110-240V-/50-60Hz Moc: 25W Pojemno: 3.2L Zastosowanie: 25 do 35 metrw kwadratow...

lang:pl score:40 filesize: 898.84 K page_count: 22 document date: 2022-04-27