

Ejoyous Ejoyous4u015tkofg135

Ejoyous Mechanical Combination Keyless Entry Door Lock

Model: Ejoyous4u015tkofg135

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Ejoyous Mechanical Combination Keyless Entry Door Lock. Please read these instructions carefully before installation and use to ensure proper function and security.

PRODUCT FEATURES

- **High Security:** Supports 1 to 11 non-repeating digit password combinations.
- **Keyless Convenience:** Eliminates the need for physical keys or cards.
- **Mechanical Operation:** No power supply or batteries required.
- **Flexible Code Entry:** Password digits can be entered in any order.
- **Durable Construction:** Made from high-quality zinc alloy with chrome-plated and electroplated finish for resistance against damage.
- **Wide Application:** Suitable for various door types including sliding doors, kitchen doors, balcony doors, office doors, workshops, interior doors, rental properties, and composite doors.



Image: Keypad illustrating 1-11 digit password capability and out-of-order entry.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Front Panel (Keypad side)
- Rear Panel (Interior side with latch mechanism)
- Screw Pack (Various screws for installation)
- Installation Accessories
- 2 x Rubber Pads
- Instruction Manual (Detailed installation guide)



Image: All included components of the lock system.

PRODUCT DIMENSIONS

The lock is designed for doors with a thickness of approximately 10-60mm (0.4-2.4 inches). Refer to the diagram below for detailed measurements:

Height: 141mm (5.55in)

Width (top): 40mm (1.57in)

Width (bottom): 60mm (2.36in)

Keypad side width: 43mm (1.69in)

Latch depth: 23mm (0.90in)

Product Dimension



Image: Detailed product dimensions.

SETUP AND INSTALLATION

Installation requires basic tools and adherence to the detailed instructions provided in the included manual. Ensure your door thickness is within the compatible range of 10-60mm (0.4-2.4 inches).

1. **Prepare the Door:** If replacing an existing lock, remove it. For new installations, mark and drill holes according to the template in the included instruction manual. Ensure precise alignment for proper function.
2. **Install Latch Mechanism:** Insert the latch into the door edge.
3. **Attach Rubber Pads:** Place the rubber pads on the door surface where the front and rear panels will be mounted. These help protect the door and provide a snug fit.
4. **Mount Front Panel:** Position the front panel (keypad side) on the exterior of the door, aligning it with the drilled holes and latch mechanism.
5. **Mount Rear Panel:** Position the rear panel on the interior of the door, connecting it to the front panel and latch.

Secure with the provided screws from the screw pack.

6. **Test Operation:** Before closing the door, test the lock's mechanism to ensure smooth operation and correct code entry.

For detailed, step-by-step instructions and diagrams, please refer to the separate instruction manual included in your package.

Suitable for Various Doors



Image: Examples of the lock installed on different door types.

OPERATING INSTRUCTIONS

Setting/Changing the Password


The process for setting or changing the password involves internal pins on the lock mechanism. Refer to the specific instructions in your included manual for detailed steps on how to configure your 1-11 digit non-repeating code.

Unlocking the Door

1. Enter your programmed password by pressing the corresponding buttons on the keypad. The order of pressing the digits does not matter (e.g., if the code is '123Y', '123Y', '1Y23', 'Y321' will all work).
2. Turn the knob to retract the deadbolt.
3. Open the door.

Reset Function

If an incorrect password is entered, or if you wish to clear a partial entry, press the 'C' key. This will reset the keypad, allowing you to re-enter the correct password.

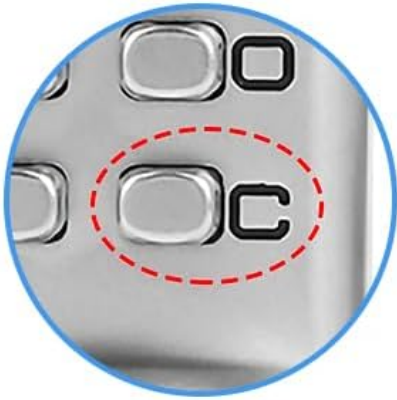

Reset Function

When the password is entered incorrectly, please press the C key first, and then enter the correct password to unlock



No Power Required

Mechanical coded lock, does not require power supply



Image: Keypad showing the 'C' reset button and confirming no power requirement.

MAINTENANCE

To ensure the longevity and optimal performance of your Ejoyous Mechanical Combination Lock, follow these maintenance guidelines:

- **Cleaning:** Wipe the lock's exterior with a soft, damp cloth. Avoid abrasive cleaners, solvents, or harsh chemicals, as

these can damage the chrome-plated and electroplated finish.

- **Lubrication:** Periodically apply a small amount of graphite lubricant to the internal moving parts of the latch mechanism to ensure smooth operation. Do not use oil-based lubricants, as they can attract dust and grime.
- **Screw Tightness:** Periodically check all mounting screws and tighten them if necessary to prevent loosening over time.
- **Environmental Protection:** While the lock is designed to be durable, extreme weather conditions can affect its performance. Consider additional protection for outdoor installations in harsh environments.

TROUBLESHOOTING

If you encounter issues with your lock, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Lock does not open after entering code.	• Ensure the correct code is entered. • Press the 'C' key to clear any previous incorrect entries, then re-enter the code. • Verify that the knob is turned fully after entering the code.
Knob feels stiff or difficult to turn.	• The latch mechanism may require lubrication (see Maintenance section). • Check for any obstructions in the door frame or latch bolt path. • Ensure the lock is installed correctly and not binding due to misalignment.
Lock feels loose on the door.	• Tighten all mounting screws. • Ensure rubber pads are correctly positioned.
Lock opens without entering the full code (e.g., by wiggling the knob).	• This indicates a potential installation issue or a defect. Ensure the lock is securely installed and all components are correctly aligned. If the issue persists, contact customer support.
Difficulty in setting or changing the code.	Refer to the detailed instructions in the included manual for the specific code-setting procedure. Ensure all steps are followed precisely.

SPECIFICATIONS

- **Brand:** Ejoyous
- **Model Number:** Ejoyous4u015tkofg135
- **Special Feature:** Keyless Entry
- **Lock Type:** Combination Lock, Keypad Deadbolt
- **Material:** Zinc Alloy
- **Recommended Uses:** Security for various doors (sliding, kitchen, balcony, office, workshop, interior, rental, composite)
- **Door Thickness Compatibility:** Approx. 10-60mm (0.4-2.4 inches)
- **Controller Type:** Mechanical knob, Push Button

- **Control Method:** Touch
- **Style:** Modern
- **Shape:** Rectangular

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Ejoyous customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question