

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual for Boston Acoustics Soundbar Tvee 10, Tvee 26

ECONTROLLY Replacement Remote Control

ECONTROLLY Replacement Remote Control User Manual

For Boston Acoustics Soundbar Models Tvee 10, Tvee 26

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ECONTROLLY replacement remote control. This remote is specifically designed to be compatible with Boston Acoustics Soundbar models Tvee 10 and Tvee 26, including Tvee10 and Tvee26 variants.

The ECONTROLLY remote control is an infrared (IR) device and comes pre-programmed, requiring no additional setup or coding for the specified soundbar models. Simply insert batteries, and it is ready for use.

2. PRODUCT OVERVIEW

The ECONTROLLY replacement remote control offers a straightforward interface for managing your Boston Acoustics Soundbar. Its design focuses on ease of use, providing direct access to essential functions such as power, input selection, volume control, and mute.





Image 1: Front view of the ECONTROLLY Replacement Remote Control. It features a dark gray body with light gray circular buttons for Standby, Source, Input, Volume Up, Volume Down, and Mute.

3. SETUP

To begin using your ECONTROLLY replacement remote control, follow these simple steps:

1. **Battery Installation:** Locate the battery compartment on the back of the remote control. Slide the cover open.

2. **Insert Batteries:** Insert one (1) AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. **Close Compartment:** Slide the battery compartment cover back into place until it clicks securely.

Your remote control is now ready for operation. No programming is required.

4. OPERATING INSTRUCTIONS

The ECONTROLLY remote control provides intuitive buttons for controlling your Boston Acoustics Soundbar. Ensure a clear line of sight between the remote control and the soundbar's infrared receiver for optimal performance.

- **STANDBY Button** : Press this button to turn the soundbar on or off (standby mode).
- **SOURCE Button** : This button, typically labeled with a music note and TV icon, cycles through available audio input sources on your soundbar (e.g., Optical, Analog, Bluetooth).
- **INPUT Button** : Similar to the Source button, this button allows you to select the desired audio input for your soundbar.
- **VOLUME UP Button** : Press to increase the soundbar's volume level.
- **VOLUME DOWN Button** : Press to decrease the soundbar's volume level.
- **MUTE Button** : Press to temporarily silence the soundbar's audio output. Press again to restore sound.

5. MAINTENANCE

Proper care ensures the longevity and reliable performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace with fresh AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting tips:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the soundbar's infrared receiver. Obstructions can block the signal.
 - Confirm that the remote is pointed directly at the soundbar.
- **Limited Functionality:**
 - Verify that your soundbar model is one of the compatible models (Boston Acoustics Tvee 10, Tvee 26). This remote is not universally compatible with all Boston Acoustics soundbars.

If problems persist after trying these steps, please refer to the Support Information section.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.35 x 1.57 x 0.2 inches
Item Weight	0.459 ounces
Batteries Required	1 AAA battery (not included)
Special Feature	Pre-Programmed
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Boston Acoustics Soundbar Tvee 10, Tvee 26

8. WARRANTY INFORMATION

This ECONTROLLY replacement remote control is typically covered by a manufacturer's warranty. For specific details regarding warranty duration and terms, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

9. SUPPORT INFORMATION

For any questions, technical assistance, or troubleshooting beyond the scope of this manual, please contact the ECONTROLLY customer support team or the seller from whom you purchased the product. Contact information can usually be found on the product packaging or the seller's online storefront.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BFJ9P1YB>

More documents and user manuals: <https://manuals.plus/>