

HEYNEMO 26 Quart Roaster Oven

HEYNEMO 26 Quart Electric Roaster Oven User Manual

Model: 26 Quart Roaster Oven

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your HEYNEMO 26 Quart Electric Roaster Oven. Please read all instructions thoroughly before first use and retain this manual for future reference.



Image: The HEYNEMO 26 Quart Electric Roaster Oven, featuring a white exterior, black handles, and a front-mounted control knob

for temperature settings.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the roaster oven.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

PRODUCT COMPONENTS

Your HEYNEMO 26 Quart Electric Roaster Oven includes the following parts:

- Roaster Oven Base
- Removable Roasting Pan
- Removable Roasting Rack
- Self-Basting Lid

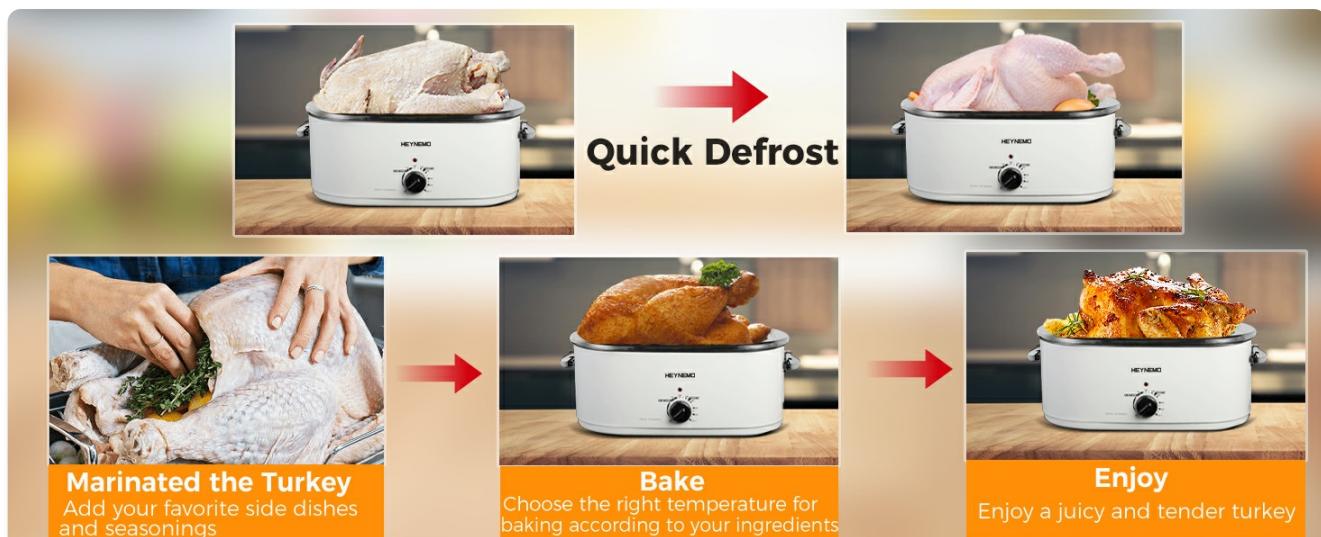


Image: An illustration showing the separate components of the roaster oven: the outer base, the removable inner roasting pan, and

the liftable roasting rack.

SETUP AND FIRST USE

- Unpack:** Carefully remove all packaging materials, labels, and inserts from the roaster oven.
- Clean:** Wash the removable roasting pan, roasting rack, and lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the roaster oven base with a damp cloth. Do not immerse the base in water.
- Assemble:** Place the clean roasting pan into the roaster oven base, then insert the roasting rack into the pan.
- Initial Burn-Off:** Before cooking food, operate the roaster oven empty for approximately 30 minutes at 450°F (232°C). This will burn off any manufacturing residues. Some smoke and odor are normal during this process. Ensure adequate ventilation. Allow the unit to cool completely afterward.

OPERATING INSTRUCTIONS

The HEYNEMO Electric Roaster Oven features a simple single-knob control for various cooking functions.

Image: A visual representation of how heat is circulated and locked inside the roaster oven for efficient cooking.

Temperature Control Knob

The control knob allows you to select the desired function and temperature:

- OFF:** Turns the appliance off.
- KEEP WARM (150°F):** Maintains food at a serving temperature. Ideal for keeping dishes warm after cooking.
- DEFROST (250°F):** Thaws frozen ingredients efficiently while helping to preserve flavor and nutrients.
- ROAST/HEAT (250°F - 450°F):** Use this range for roasting, baking, and heating various foods. Adjust the temperature according to your recipe.

Cooking Process

- Place the food item, such as a turkey or other meats, onto the roasting rack within the removable pan.
- Cover the roaster oven with the self-basting lid.
- Plug the power cord into a standard electrical outlet.
- Turn the control knob to your desired temperature setting (e.g., 450°F for roasting). The indicator light will illuminate.
- The roaster will begin heating. The indicator light will turn off once the set temperature is reached and cycle on/off during operation to maintain temperature.
- Monitor cooking progress through the viewing window on the lid, if applicable, or by carefully lifting the lid.
- Once cooking is complete, turn the knob to "OFF" and unplug the appliance.

Removable Pan & Liftable Rack



Image: A visual guide demonstrating the adjustable temperature settings for defrosting, roasting, and keeping food warm.

Self-Basting Lid Feature

The built-in coated lid design promotes water circulation within the roaster, which helps to keep meats juicy and tender during the cooking process, reducing the need for manual basting.

Image: The self-basting lid with condensation droplets, illustrating how it circulates moisture to keep food tender.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your roaster oven.

1. **Always unplug** the roaster oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The roasting pan, roasting rack, and lid can be washed in warm, soapy water. Rinse thoroughly and dry completely. These parts are generally not dishwasher safe unless specified otherwise by the manufacturer.
3. **Roaster Base:** Wipe the exterior of the roaster oven base with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the roaster oven base in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing. Store the roaster oven in a cool, dry place.

Image: A person demonstrating the ease of cleaning the removable roasting pan under running water.

TROUBLESHOOTING

Review the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on or heat.	Not plugged in; power outlet malfunction; control knob not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Turn the control knob to a desired temperature setting.

Problem	Possible Cause	Solution
Food is cooking unevenly.	Lid not properly sealed; food item too large; incorrect temperature setting.	Ensure the lid is seated correctly. For very large items, consider rotating halfway through cooking. Verify the temperature setting matches your recipe.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal during the initial burn-off. Ensure good ventilation. If it persists after initial use, discontinue use and contact support.
Lid appears warped or steam escapes.	Normal expansion/contraction; minor manufacturing variation.	Ensure the lid is placed correctly. If steam escape is excessive or affects cooking, contact customer support.

SPECIFICATIONS

Brand: HEYNEMO

Model Name: 26 Quart Roaster Oven

Capacity: 26 Quarts

Color: White

Product Dimensions: 25"D x 16"W x 12"H

Control Type: Knob

Power Source: Electric

Voltage: 120V

Wattage: 1450W

Material: Stainless Steel (exterior finish)

Item Weight: 15 pounds

UPC: 724901950669

WARRANTY AND SUPPORT

Your HEYNEMO 26 Quart Electric Roaster Oven comes with a**ONE YEAR WARRANTY** from the date of purchase.

This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any questions regarding your product, please contact HEYNEMO customer support. Please have your model name and purchase information ready when contacting support.

For more information, you may visit the HEYNEMO store:[HEYNEMO Store on Amazon](#)