

[Manuals.plus](#) /

› [Bissell](#) /

› Bissell CleanView Rewind Upright Bagless Vacuum with Automatic Cord Rewind & Active Wand, 3534 Black/Teal

Bissell 3534

Bissell CleanView Rewind Upright Bagless Vacuum - Model 3534

User Instruction Manual

INTRODUCTION

The BISSELL CleanView Rewind Upright Bagless Vacuum, Model 3534, is designed for efficient multi-surface cleaning. Its lightweight design allows for easy maneuverability, while features like OnePass Technology and Scatter-Free Technology ensure thorough cleaning on both carpets and hard surfaces. The vacuum also includes an Active Extension Wand and TurboBrush Tool for reaching difficult areas, and an Easy Empty Dirt Tank for convenient disposal. With washable filters and a multi-level filtration system, this vacuum is built for sustained performance.

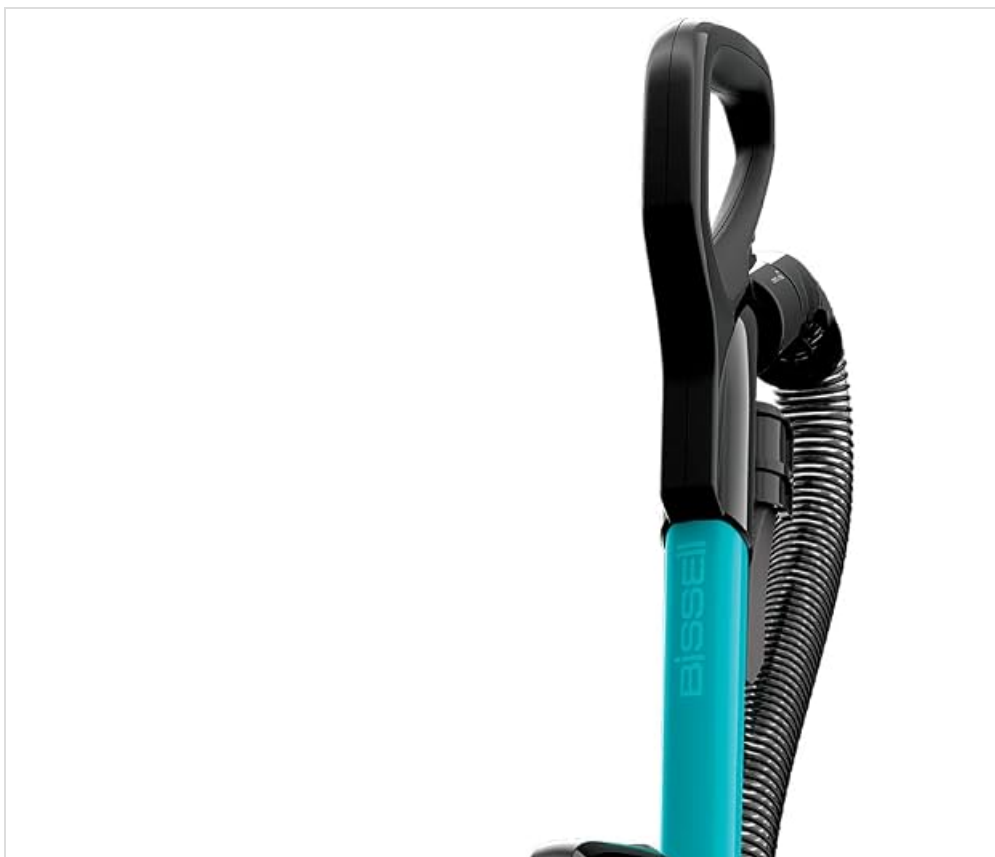




Figure 1: Bissell CleanView Rewind Upright Bagless Vacuum, Black/Teal.

SAFETY INFORMATION

Please read all instructions before using your BISSELL CleanView Rewind vacuum. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- Always connect to a properly grounded outlet.
- Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Use extra care when cleaning on stairs.
- Unplug before connecting or disconnecting the TurboBrush Tool.

SETUP

Your BISSELL CleanView Rewind vacuum comes with several components that need to be assembled before first use. Assembly is straightforward and typically requires no tools.

1. **Handle Assembly:** Insert the upper handle into the vacuum body until it clicks securely into place.
2. **Hose Connection:** Connect the flexible hose to the hose inlet on the back of the vacuum. Ensure both ends are firmly attached.
3. **Tool Attachment:** Attach the Active Extension Wand and TurboBrush Tool to their designated storage clips on the vacuum for easy access during cleaning.



Figure 2: Specialized tools for various cleaning tasks.

OPERATING INSTRUCTIONS

The CleanView Rewind is designed for versatile cleaning across different floor types and hard-to-reach areas.

Powering On and Off

- Plug the power cord into a suitable electrical outlet.
- To turn the vacuum ON, step on the red power pedal located near the base of the vacuum.
- To turn the vacuum OFF, step on the red power pedal again.

Automatic Cord Rewind

For convenient storage, the vacuum features an automatic cord rewind system.

- Once cleaning is complete, unplug the vacuum from the wall outlet.
- Gently press the cord rewind button located on the side of the vacuum. The cord will automatically retract into the

unit.



Automatic Cord Rewind

Wrap the cord with the press of a button for quick and easy storage.

Figure 3: Automatic cord rewind for easy storage.

Floor Type Adjustment

Adjust the vacuum's height setting to optimize cleaning performance for different floor types.

- **Bare Floor (Setting I):** For hard surfaces like tile, hardwood, or laminate.
- **Low Carpet (Setting II):** For low-pile carpets and area rugs.
- **High Carpet (Setting III):** For medium to high-pile carpets.



Figure 4: Height adjustment dial for various floor types.

OnePass Technology & Scatter-Free Cleaning

Experience efficient cleaning with minimal effort.

- **OnePass Technology:** Designed to clean carpets on the first pass, removing most surface debris.
- **Scatter-Free Technology:** Effectively captures debris on hard floors with less scatter, ensuring a cleaner sweep.



Figure 5: Vacuum demonstrating OnePass Technology on carpet.

Active Extension Wand

Utilize the Active Extension Wand to reach high or tight spaces.

- Press the Active Wand Release button on the handle to detach the wand.
- Attach desired tools (e.g., TurboBrush Tool, crevice tool) to the end of the wand.
- The wand extends up to 10 feet, making it ideal for cleaning ceilings, corners, and under furniture.



Active Extension Wand

Reaches up to 10 feet, so cleaning hard-to-reach areas is quick and easy.

Figure 6: User utilizing the Active Extension Wand to clean high areas.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your vacuum.

Easy Empty Dirt Tank

Empty the dirt tank regularly to maintain suction power.

- Press the "Empty" button on the dirt tank handle to detach it from the vacuum.
- Hold the tank over a trash bin and press the release button on the bottom to open the lid and empty debris.
- Close the lid firmly and reattach the dirt tank to the vacuum until it clicks into place.



XL Dirt Bin

Less time emptying, more time cleaning.

Figure 7: Easy Empty Dirt Tank being emptied into a trash bin.

Washable Filters

The multi-level filtration system includes washable filters for sustained performance.

- Remove the dirt tank and locate the washable filter inside.
- Rinse the filter under running water until clean.
- Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum.

TROUBLESHOOTING

If your vacuum is not performing as expected, consult the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum cleaner won't turn on	Power cord not firmly plugged in.	Check electrical plug.
Vacuum cleaner won't pick up dirt	Dirt tank full or improperly installed.	Empty dirt tank; ensure it is properly seated and latched.
Reduced suction power	Filters are dirty or clogged.	Clean or replace filters as needed.
Brush doesn't rotate	Brush roll is jammed or belt is broken.	Clear brush roll of debris; contact customer support for belt replacement.

SPECIFICATIONS

Brand: Bissell
Model Name: CleanView
Item Model Number: 3534
Color: Black/Teal
Form Factor: Upright
Special Feature: Lightweight
Filter Type: HEPA Filter
Capacity: 2 Liters
Wattage: 864 watts
Hose Length: 2.4 Meters
Item Weight: 13.5 pounds
Product Dimensions: 14.25"L x 15"W x 44"H
Control Method: Touch
Is Cordless?: No

WARRANTY & SUPPORT

For warranty information, technical support, or to order replacement parts, please visit the official Bissell website or contact their customer service line. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.bissell.com

Customer Service: Refer to your product packaging or the Bissell website for the most current contact information.