

Singsation SPKAW10SG

Singsation Freestyle Karaoke Machine User Manual

Model: SPKAW10SG

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Singsation Freestyle Karaoke Machine. Please read it thoroughly before use to ensure proper functionality and to maximize your enjoyment.

1.1 Package Contents

- Singsation Freestyle Bluetooth Karaoke Speaker
- 2 Wireless Microphones
- 2 USB Charging Cables

1.2 Key Features

- Wireless Karaoke System with rechargeable speaker and microphones
- Up to 6 hours of playtime on a full charge
- Bluetooth 5.0 connectivity for streaming from smartphones or tablets
- Multiple music input options: Bluetooth, AUX in, USB, or Micro SD Card
- Dual wireless microphones for duets, operating independently
- Multi-color LED light globe for visual effects
- Integrated sound effects (cheers, air horn) and adjustable echo effect



Image 1.1: The Singstation Freestyle Karaoke Machine, featuring the main speaker unit, two wireless microphones, and a central disco light globe.

2. SETUP

2.1 Initial Charging

Before first use, fully charge the karaoke speaker and both wireless microphones. Connect the provided USB charging cables to the respective charging ports on the speaker and microphones, then connect the other end to a standard USB power adapter (not included).

- The speaker's charging indicator will show charging status.
- Microphone indicators will illuminate during charging and turn off when fully charged.

2.2 Powering On/Off

- To power on the speaker, press and hold the Power button until the indicator light illuminates.
- To power on each microphone, slide the power switch on the microphone handle to the 'ON' position.
- To power off, repeat the steps for both the speaker and microphones.

3. OPERATING INSTRUCTIONS

3.1 Connecting Audio Sources

The Singsation Freestyle offers four ways to play your music:



Image 3.1: Visual representation of the four available music input methods for the karaoke machine.

3.1.1 Bluetooth Pairing

1. Ensure the karaoke speaker is powered on.
2. Activate Bluetooth on your smartphone or tablet.
3. Search for 'Singsation Freestyle' in your device's Bluetooth settings.
4. Select to pair. A confirmation sound will indicate a successful connection.

3.1.2 AUX Input

Connect an external audio device using a 3.5mm audio cable (not included) to the AUX input port on the

speaker.

3.1.3 USB Input

Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically begin playing the music.

3.1.4 Micro SD Card Input

Insert a Micro SD card containing MP3 audio files into the Micro SD card slot. The speaker will automatically begin playing the music.

3.2 Using the Microphones



Image 3.2: The two wireless microphones included with the Singsation Freestyle Karaoke Machine.

- Ensure microphones are powered on. They will automatically connect to the speaker.
- Adjust microphone volume using the dedicated 'Volume' knob on the speaker.
- The microphones operate independently, allowing for duets without interference.

3.3 Sound Effects and Light Effects



Image 3.3: Illustration of the Light FX, Sound FX, and Echo FX controls on the Singsation Freestyle unit.

- **Echo FX:** Use the 'Echo' knob to adjust the echo effect on your voice for a dynamic performance.
- **Sound FX:** Press the dedicated Sound FX buttons to activate cheers or air horn sound effects.
- **Light FX:** The multi-color LED light globe automatically activates when the speaker is on, providing a light show.

4. MAINTENANCE

4.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure all ports are free of dust and debris.

4.2 Storage

Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

4.3 Battery Care

To prolong battery life, fully charge the speaker and microphones before long periods of storage. Recharge at least once every three months if not in regular use.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

Issue	Solution
No power	Ensure the unit is fully charged. Check the power button.
No sound from speaker	Check volume levels on both the speaker and your connected device. Ensure the correct input mode is selected.
Microphones not working	Ensure microphones are powered on and fully charged. Check microphone volume knob on the speaker.
Bluetooth connection issues	Ensure the speaker is in pairing mode. Turn off and on Bluetooth on your device. Try unpairing and re-pairing.
USB/SD card not playing	Ensure files are in MP3 format. Check that the USB drive/SD card is inserted correctly and is not corrupted.

6. SPECIFICATIONS

6.1 Technical Specifications



Image 6.1: Physical dimensions of the Singsation Freestyle Karaoke Machine.

- **Model Number:** SPKAW10SG
- **Item Weight:** 4.89 pounds
- **Product Dimensions:** 7.15 x 4.45 x 9.84 inches
- **Bluetooth Version:** 5.0
- **Power Source:** Battery Powered
- **Voltage:** 12 Volts (DC)
- **Speaker Count:** 1
- **Connector Type:** 3.5 mm Jack (AUX)
- **Compatible Devices:** Smartphone, Tablet
- **Special Feature:** Rechargeable

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Please refer to the warranty card included with your product for detailed warranty terms and conditions.
Keep your proof of purchase for any warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please visit the official Singsation website or contact their customer support directly. Contact information can typically be found on the product packaging or the brand's official website.

© 2024 Singstation. All rights reserved.

Related Documents - SPKAW10SG

SINGSATION[™] AURORA ALL-IN-ONE KARAOKE SYSTEM	
QUICK START GUIDE	<u>Singsation Aurora All-In-One Karaoke System Quick Start Guide</u>
Instructions en français 7	Get started quickly with the Singsation Aurora All-In-One Karaoke System (SPKA28). This guide covers unpacking, charging, Bluetooth pairing, music playback, microphone use, TWS mode, light show, and other audio sources for your karaoke experience.
Instructions en español 10	

