

ECONTROLLY CT-877

ECONTROLLY CT-877/CT-885 Replacement Remote Control User Manual

For Toshiba TV Models

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY CT-877/CT-885 replacement remote control. This remote is designed to be compatible with various Toshiba TV models, offering a direct replacement for your original remote.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct placement for two AAA

batteries.

2. Initial Use

This replacement remote control does not require any programming. Once the batteries are correctly installed, it is ready for immediate use with compatible Toshiba TV models.

OPERATING INSTRUCTIONS

The ECONTROLLY CT-877/CT-885 remote control provides full functionality for your Toshiba TV. Point the remote directly at the TV's infrared sensor for optimal performance.





Image: Front view of the ECONTROLLY CT-877 remote control, displaying its button layout.

Key Functions:

- **POWER:** Turns the TV on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU/ENTER:** Accesses the TV's main menu and confirms selections.
- **Directional Arrows:** Navigate through menus and options.
- **EXIT:** Exits the current menu or screen.
- **PLAY, PAUSE, STOP, REW, FF, SKIP/SEARCH:** Control playback functions for connected media devices (e.g., VCR, DVD).

Compatible Toshiba TV Models:

This remote control is compatible with, but not limited to, the following Toshiba TV models:

- 26DF46, 26DF46C
- 19AV505U
- 20HLV17
- 26HF66, 26HF85, 26HF56, 26HF15, 26HF85C
- 27D46, 27DF46
- 30DF56, 30HF66, 30HF85, 30HF85C
- 32D46, 32DF46
- 34HF85, 34HF85C

- 19LV612U

MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or abrasive materials, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - This remote is a direct replacement and should function without programming. If specific buttons do not work, verify compatibility with your exact TV model.
 - Clean the remote's surface to ensure no debris is interfering with button presses.

SPECIFICATIONS

- **Model Number:** CT-877
- **Brand:** ECONTROLLY
- **Product Dimensions:** 7 x 0.65 x 2 inches
- **Item Weight:** 1 ounce
- **Power Source:** 2 x AAA batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 18 (referring to the range of compatible Toshiba TV models)
- **Special Feature:** Ergonomic design

SUPPORT AND WARRANTY

For further assistance or inquiries regarding your ECONTROLLY remote control, please contact the manufacturer, ECONTROLLY Factory. Specific warranty information is not provided in this manual; please refer to your purchase documentation or the manufacturer's website for details.

