

ECONTROLLY AKB74915384

User Manual for ECONTROLLY Replacement Remote Control

Model: AKB74915384

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB74915384 Replacement Remote Control. This remote is designed to be a direct replacement for various LG TV models, including those originally using AKB76039803, 43LH5700, 2SM5KE, 43SM5KE, 49SM5KE, 55SM5KE, 43SH7E, 49SH7E, 55SH7E, 32SM5E, 43SM5E, 49SM5E, 55SM5E, AKB73975763, 43UL3JEP, 43UH5NEP, 49UH5NEP, 55UH5NEP, and 65UH5NEP. It offers a simple, plug-and-play solution without the need for complex programming.

2. PRODUCT OVERVIEW

The ECONTROLLY AKB74915384 remote control is a standard infrared (IR) remote, featuring all essential buttons for TV operation. Its ergonomic design ensures comfortable handling.





Figure 2.1: Front view of the remote control. This image displays the layout of all buttons, including power, number pad, channel, volume, navigation, and media controls.



Figure 2.2: Angled view of the remote control. This perspective shows the slim profile and comfortable grip of the device.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.





Figure 3.1: Back view of the remote control showing the battery compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.





Figure 3.2: Battery compartment with batteries inserted. Note the correct polarity.

4. Slide the battery cover back into place until it clicks securely.

Important: No programming is required. Once batteries are installed, the remote is ready for use with compatible LG TV models.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original LG remote it replaces. Point the remote directly at your LG TV's infrared receiver for optimal performance.

4.1 Key Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Number Pad (0-9)**: Direct channel selection.
- **Volume Up/Down** (▲ / ▼): Adjusts the volume level.
- **Channel Up/Down** (▲ / ▼): Changes TV channels.
- **Mute** (⏻): Mutes or unmutes the TV audio.
- **Input/Source (ARC/AUTO)**: Selects input sources (HDMI, AV, etc.).
- **Menu/Settings** (⚙️): Accesses the TV's main menu or settings.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK/Enter Button**: Confirms selections.
- **Back/Return** (↶): Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.
- **Energy Saving**: Activates or deactivates energy-saving modes.
- **3D**: Activates or deactivates 3D mode (if supported by TV).
- **PSM (Picture Sound Mode)**: Cycles through picture and sound modes.
- **W.BAL (White Balance)**: Adjusts white balance settings.
- **S.MENU (Smart Menu)**: Accesses smart TV features or quick menus.
- **TILE**: Displays a tile view of inputs or apps.
- **BRIGHTNESS (PAGE)**: Adjusts brightness or navigates pages.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Use a soft, dry cloth to clean the remote. For stubborn dirt, slightly dampen the cloth with water or a mild,

non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.
- **Liquid Exposure:** Keep the remote away from liquids. If it gets wet, remove batteries immediately and allow it to dry completely before reinserting them.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV.	Replace batteries. Remove any objects blocking the line of sight. Ensure remote is pointed directly at the TV's IR receiver.
Certain buttons do not function.	Button stuck or damaged; TV model incompatibility for specific advanced functions.	Check if the button is physically stuck. While this remote is broadly compatible, some very specific advanced functions might vary slightly depending on the exact LG TV model. Ensure your TV model is listed as compatible.
Remote works for some TVs but not mine.	TV model is not compatible.	Verify your LG TV model number against the list of compatible models provided in the product description (e.g., 43LH5700, 2SM5KE, etc.).

7. SPECIFICATIONS

- **Model Number:** AKB74915384
- **Brand:** ECONTROLLY
- **Compatible Devices:** LG Televisions (various models including AKB76039803, 43LH5700, 2SM5KE, 43SM5KE, 49SM5KE, 55SM5KE, 43SH7E, 49SH7E, 55SH7E, 32SM5E, 43SM5E, 49SM5E, 55SM5E, AKB73975763, 43UL3JEP, 43UH5NEP, 49UH5NEP, 55UH5NEP, 65UH5NEP)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 0.65 x 2 inches
- **Item Weight:** 2 ounces
- **Color:** Black
- **Special Feature:** Ergonomic design, No programming required
- **Max Number of Supported Devices:** 18 (refers to the range of LG TV models it can replace)

8. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. For any issues not covered in the troubleshooting section, please refer to the seller's return policy or contact ECONTROLLY customer support through the retailer where the product was purchased.

Please retain your proof of purchase for any warranty claims or support inquiries.

© 2023 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question