

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Fame-Line Kitchen Base Cabinet Instruction Manual, Bordeaux High Gloss/Golden Oak, 60 cm

Vicco Fame-Line 60 cm Base Cabinet

Vicco Fame-Line Kitchen Base Cabinet Instruction Manual

Model: 2097 - Bordeaux High Gloss/Golden Oak, 60 cm

INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe operation, and proper maintenance of your Vicco Fame-Line kitchen base cabinet. Designed for durability and modern aesthetics, this cabinet features high-quality materials and components to enhance your kitchen space. Please read all instructions carefully before beginning assembly or use.

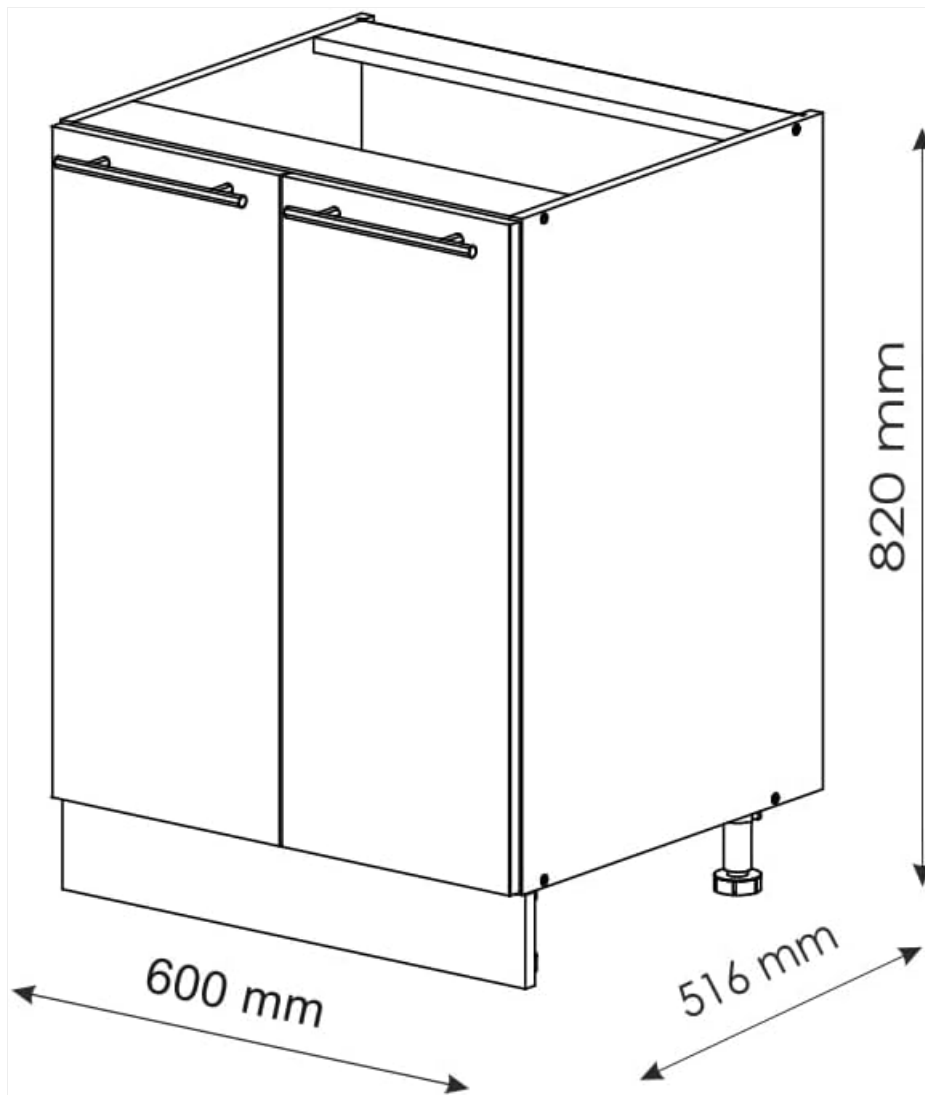


Image: An example of a complete kitchen setup utilizing Vicco Fame-Line cabinets, showcasing the Bordeaux high gloss and golden oak finishes.

SETUP AND ASSEMBLY

Your Vicco Fame-Line kitchen base cabinet is delivered as a flat-pack kit and requires assembly. Ensure all components are present before starting. Refer to the included assembly instructions for detailed, step-by-step diagrams.

1. Unpacking and Component Check

- Carefully unpack all parts from the packaging.
- Verify that all components listed in the parts list are present and undamaged.
- Keep small parts, such as screws and fittings, in a separate container to prevent loss.

2. Assembly Overview

The Fame-Line system is designed for straightforward assembly. Key features include:



Image: Key features of the Fame-Line series, highlighting quality components for easy assembly and use.

3. Step-by-Step Assembly (General Guidance)

1. **Prepare the Base:** Attach the adjustable feet to the bottom panel of the cabinet. These feet allow for leveling the cabinet on uneven floors.



Image: Adjustable feet for leveling the base cabinet.

2. **Construct the Frame:** Assemble the side panels, back panel, and top/bottom panels using the provided hardware (dowels, screws, cam locks). Ensure all connections are secure.
3. **Install Shelves:** Insert shelf supports into the pre-drilled holes at your desired height and place the shelf.



Image: Interior view of the base cabinet with an adjustable shelf.

4. **Attach Doors:** Mount the soft-close hinges to the cabinet frame and then attach the doors. Adjust hinges as needed for proper alignment and smooth operation.

5. **Install Handles:** Secure the metal handles to the cabinet doors.
6. **Final Placement:** Position the cabinet in its desired location. Use the adjustable feet to level the cabinet, ensuring stability and proper door alignment.

Important: Always follow the specific assembly diagrams included with your product for precise instructions.

OPERATING INSTRUCTIONS

The Vicco Fame-Line kitchen base cabinet is designed for easy and reliable use.

Doors and Hinges

- The cabinet features soft-close hinges for quiet and gentle closing of the doors.
- To open, gently pull the handle. To close, push the door until the soft-close mechanism engages.
- Avoid forcing the doors open or closed, as this can damage the hinges.

Storage

- Distribute weight evenly on shelves to prevent warping or instability.
- Do not exceed the maximum weight capacity of 25 kg for the cabinet.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your cabinet.

Cleaning

- Wipe surfaces with a soft, damp cloth.
- For stubborn marks, use a mild, non-abrasive cleaning agent.
- Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the high-gloss finish and melamine coating.
- Dry surfaces immediately after cleaning to prevent moisture damage.

General Care

- Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods.
- Protect surfaces from scratches by using placemats or coasters if placing items on top.

TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common solutions.

Doors are not aligned or do not close properly:

- Check if the cabinet is level. Adjust the feet at the bottom to ensure stability and proper alignment.
- Inspect the hinges. They may need adjustment. Most hinges have screws for vertical, horizontal, and depth adjustments. Refer to the hinge manufacturer's instructions or general furniture assembly guides for hinge adjustment.
- Ensure all assembly screws are tightened.

Cabinet feels wobbly:

- Verify that the cabinet is placed on a flat, level surface.
- Adjust the cabinet feet to stabilize the unit.
- Check all assembly connections and tighten any loose screws.

Damage during delivery:

- If any parts arrived damaged, do not proceed with assembly. Contact customer support immediately with details and photographic evidence of the damage.

SPECIFICATIONS

Brand	Vicco
Model Name	Fame-Line
Model Number	2097
Color	Bordeaux High Gloss / Golden Oak
Product Dimensions (D x W x H)	51.6 cm x 60 cm x 82 cm
Item Weight	19.7 kg
Maximum Weight Capacity	25 kg
Material	Engineered Wood (16mm particle board with melamine resin coating, MDF fronts)
Features	Adjustable Height (via feet), Soft-Close Hinges, Metal Handles
Door Style	Swing Door



Image: Dimensional diagram of the 60 cm base cabinet.

WARRANTY INFORMATION

Specific warranty details for the Vicco Fame-Line kitchen base cabinet are not provided in the product information. Please refer to your purchase documentation or contact the seller directly for warranty terms and conditions.

SUPPORT

For further assistance, missing parts, or inquiries regarding your Vicco Fame-Line kitchen base cabinet, please contact the seller or manufacturer directly.

- **Manufacturer:** Oskar-Store
- **Seller:** ok-living ([Seller Profile](#))
- **Brand Store:** [Visit the Vicco Brand Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question