

[Manuals.plus](#) /

> [Zuccie](#) /

> Zuccie 4.8QT Electric Stand Mixer Instruction Manual (Model SM-1509)

Zuccie SM-1509

Zuccie 4.8QT Electric Stand Mixer Instruction Manual (Model SM-1509)

Your comprehensive guide to operating and maintaining your Zuccie Stand Mixer.

INTRODUCTION

Thank you for choosing the Zuccie 4.8QT Electric Stand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Zuccie Stand Mixer is designed for various kitchen tasks, including mixing, kneading, and whipping, with its powerful 380W motor and 8+P speed settings. Its planetary mixing action ensures thorough ingredient incorporation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the mixer.
- To protect against risk of electrical shock, do not immerse the mixer base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the appliance is switched OFF and unplugged from the power supply before changing accessories or

approaching parts that move in use.

- This appliance has overheat protection. If the motor overheats, it will automatically shut off. Allow it to cool down before resuming use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Zuccie Stand Mixer:

1. Mixer Head (with motor and attachment port)
2. Tilt Lock Lever
3. Speed Control Knob (8 speeds + Pulse)
4. 4.8QT Stainless Steel Mixing Bowl
5. Dough Hook (Teflon coated aluminum)
6. Flat Beater (Teflon coated aluminum)
7. Wire Whisk (Food-grade stainless steel)
8. Splash Guard with Feeding Port
9. Silicone Spatula
10. Egg Separator
11. Anti-Slip Suction Feet



Image: Zuccie 4.8QT Electric Stand Mixer in black, shown with its stainless steel bowl, dough hook, flat beater, and wire whisk. A silicone spatula and egg separator are also visible. The mixer features a tilt-head design and a speed control knob.

Tilt-head Stand Mixer Features

Provide more possibilities for kitchen creation



Image: A detailed diagram highlighting the key features of the Zuccie Stand Mixer, including the 304 Stainless Steel Bowl, Splash Guard, Whisk, Beater, Dough Hook, Silicone Spatula, Egg Separator, Tilt Lock, 8 Speed Control, and Anti-Slip Feet.

SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Cleaning:** Before first use, wash the mixing bowl, dough hook, flat beater, wire whisk, splash guard, silicone spatula, and egg separator in warm, soapy water. Rinse thoroughly and dry. Wipe the mixer base with a damp cloth. Do not immerse the mixer base in water.
- 3. Placement:** Place the mixer on a clean, dry, and stable surface. Ensure the anti-slip suction feet are securely attached to the countertop to prevent movement during operation.
- 4. Attaching the Bowl:**
 - Lift the mixer head by pushing the tilt lock lever.
 - Place the mixing bowl onto the base, aligning the grooves, and turn clockwise until it locks securely.

- Lower the mixer head until it clicks into place.

5. Attaching Accessories:

- Ensure the mixer is unplugged and the head is tilted up.
- Insert the desired attachment (dough hook, flat beater, or wire whisk) into the attachment port. Push upwards and turn counter-clockwise until it locks into place.
- To remove, push upwards and turn clockwise.

6. **Splash Guard:** Attach the splash guard to the mixer head before lowering it, ensuring it covers the bowl opening. The feeding port allows for adding ingredients during mixing.

Super Powerful Motor

Pure Copper Motor, 360° Planetary Mixing
Action for Thorough Mixing



Image: The Zuccie Stand Mixer demonstrating its tilt-head design for easy installation and detachment of the bowl and attachments. Insets show the feeding port on the splash guard and the strong suction cups on the base for stability.

OPERATING INSTRUCTIONS

1. **Preparation:** Ensure the mixer is properly assembled with the desired attachment and mixing bowl. Add your ingredients to the mixing bowl.
2. **Power On:** Plug the mixer into a standard 120V electrical outlet.
3. **Select Speed:** Turn the speed control knob to the desired setting (1-8).
 - **Speeds 1-5 (Dough Hook):** Ideal for kneading dough for bread, pizza, or spaghetti.
 - **Speeds 2-6 (Flat Beater):** Suitable for mixing salads, cookies, mashed potatoes, and crepes.
 - **Speeds 6-8 (Wire Whisk):** Best for quickly whipping cream, egg whites, cake batter, and sauces.
 - **Pulse (P):** Use for quick bursts of power or for rapid incorporation of ingredients.
4. **Mixing:** The mixer will begin operating at the selected speed. You can add ingredients through the splash guard's feeding port during operation.
5. **Stopping:** To stop the mixer, turn the speed control knob to the "0" (OFF) position. Unplug the mixer from the outlet.
6. **Removing Ingredients:** Lift the mixer head using the tilt lock lever. Remove the attachment by pushing upwards and turning clockwise. Carefully remove the mixing bowl.

Tilt-head Design

It makes bowl and attachments easy to install and detach



Image: A close-up of the Zuccie Stand Mixer's speed control knob, illustrating the 8 speed settings and the Pulse function. It also indicates recommended speed ranges for the dough hook (1-5), flat beater (2-6), and whisk (6-8).



Image: A visual guide showing the dough hook, flat beater, and wire whisk attachments, along with examples of their uses and recommended speed levels. The dough hook is shown with bread dough, the flat beater with salad, and the whisk with whipped cream.

Your browser does not support the video tag.






Video: This video demonstrates the Zuccie Stand Mixer in operation, showcasing the attachment of different tools (dough hook, flat beater, whisk) and their use for various tasks like mixing salad, whipping egg whites, and kneading dough. It highlights the ease of use and versatility of the mixer.

CARE AND MAINTENANCE

- **Cleaning the Mixer Base:** Always unplug the mixer before cleaning. Wipe the exterior of the mixer base with a soft, damp cloth. Do not use abrasive cleaners or immerse the base in water.
- **Cleaning Attachments and Bowl:** The stainless steel mixing bowl, dough hook, flat beater, wire whisk, splash

guard, silicone spatula, and egg separator are dishwasher safe for convenient cleaning. Alternatively, wash them in warm, soapy water, rinse, and dry thoroughly.

- **Storage:** Store the mixer and its accessories in a clean, dry place. Ensure all parts are dry before storing.

	<h3>Dough Hook</h3>	
	<h3>Beater</h3>	
	<h3>Whisk</h3>	

Dough Hook

Teflon Coated Aluminum



Level 1-5

Knead the Dough For Bread, Pizza, Spaghetti



Beater

Dishwasher Safe



Level 2-6

Mixing Salad, Cookie, Mashed Potatoes, Crepes



Whisk

Food Grade Stainless Steel



Level 6-8

Quickly whipping Cream, Egg whites, Cake, Sauces



Image: A dishwasher interior with various kitchen items, including mixer attachments, illustrating that all accessories of the Zuccie Stand Mixer are dishwasher safe for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; overheat protection activated.	Ensure the mixer is securely plugged into a working outlet. If overheated, unplug and allow to cool for 30 minutes before restarting.

Problem	Possible Cause	Solution
Attachments are difficult to install/remove.	Incorrect alignment; debris in the attachment port.	Ensure the mixer head is fully tilted up. Align the attachment correctly and twist firmly. Clean the attachment port if necessary.
Mixer vibrates excessively or moves on the counter.	Unstable surface; suction cups not engaged; too much load.	Place the mixer on a flat, dry, and stable surface. Ensure suction cups are clean and pressed firmly onto the countertop. Reduce the amount of ingredients if exceeding capacity.
Loud noise during operation.	Normal operation noise; heavy load; internal issue.	Some noise is normal. If unusually loud or grinding, reduce load. If problem persists, contact customer support.

SPECIFICATIONS

Brand: Zuccie

Model Name: Stand Mixer

Item Model Number: SM-1509

Color: Black

Motor Power: 380W

Voltage: 120V

Capacity: 4.8 Quarts

Speed Settings: 8 + Pulse

Product Dimensions: 15.03"D x 10.5"W x 13.3"H

Item Weight: 9.13 pounds

Noise Level: 70 Decibels

Special Features: Adjustable Speed Control, Overheat Protection, Removable Bowl, Tilt Head

WARRANTY AND SUPPORT

Zuccie provides a full two-year quality guarantee for this stand mixer. We are committed to customer satisfaction and offer friendly lifelong support.

If you encounter any questions or issues during use, please contact our customer service team for assistance. Refer to your purchase documentation for specific contact details or visit the official Zuccie website.

