



Manuals.plus /

› **Sherilyn** /

› Kids Play Tent with Padded Mat, Large Play House Kids Tents for Girls and Boys, Toddler Castle Toys Bed Tents Playhouse Indoor, Neutral

Sherilyn S-18

Sherilyn Kids Play Tent Instruction Manual

Model: S-18

Brand: Sherilyn

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years. Adult supervision is required at all times. Ensure all components are securely assembled before allowing children to play. Regularly inspect the tent for any damage or loose parts.

PRODUCT OVERVIEW

The Sherilyn Kids Play Tent is a large, neutral-colored playhouse designed for indoor use, providing a fun and imaginative space for children. It features a durable fabric construction, a comfortable padded mat, and a charming fairy tale castle design. This play tent is suitable for toddlers and children aged 18 months and up, accommodating multiple children simultaneously.

- **Padded Mat:** Includes a thick, comfortable mat for enhanced play experience.
- **Spacious Interior:** Large enough to accommodate several children or additional accessories.
- **Fairy Tale Design:** Features a charming castle aesthetic suitable for various play scenarios.
- **Durable & Easy to Clean:** Made from robust, machine-washable fabric.
- **Simple Assembly:** Designed for quick and straightforward setup.



Figure 1: Fully assembled Sherilyn Kids Play Tent.

SETUP AND ASSEMBLY

The Sherilyn Kids Play Tent is designed for easy and quick assembly, requiring no special tools. Follow the steps below to set up your play tent.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all PVC pipes, connectors, fabric tent cover, and the padded mat are present.
2. **Assemble Frame:** Connect the PVC pipes according to the provided diagram (refer to the product packaging or included instructions for detailed visual guide). The pipes are designed to click together securely.
3. **Drape Fabric Cover:** Once the frame is assembled, carefully drape the fabric tent cover over the frame, ensuring it aligns correctly with the roof and walls.
4. **Secure Fabric:** Fasten any ties or Velcro straps on the fabric cover to the frame to ensure a snug and stable fit.
5. **Place Padded Mat:** Lay the padded mat inside the tent on the floor.
6. **Adjust Curtains:** The tent features sheer curtains on the main entrance and windows. These can be tied back or left to

hang freely.

Your browser does not support the video tag.

Video 1: Demonstration of the play tent's features and ease of setup.

OPERATING INSTRUCTIONS

The Sherilyn Kids Play Tent provides a versatile space for various activities.

- **Imaginative Play:** Encourage children to use the tent as a castle, house, fort, or any other imaginative setting.
- **Reading Nook:** The padded mat makes it an ideal cozy spot for reading books.
- **Social Play:** The spacious interior allows multiple children to play together, fostering social interaction.
- **Ventilation:** The tent features breathable windows to ensure air circulation during play.



Figure 2: Breathable windows for air circulation.

MAINTENANCE

To ensure the longevity and cleanliness of your Sherilyn Kids Play Tent, follow these maintenance guidelines:

- **Fabric Cleaning:** The tent's fabric is durable and machine washable. For minor spills, wipe down with a damp cloth. For deeper cleaning, remove the fabric cover from the frame and machine wash on a gentle cycle with cold water. Air dry or tumble dry on low heat.
- **Padded Mat Cleaning:** The padded mat is also machine washable. Wash separately on a gentle cycle with cold water and air dry.
- **Frame Care:** Wipe down the PVC pipes with a damp cloth as needed. Ensure all connections remain secure.
- **Storage:** When not in use, the tent can be easily disassembled and stored in its original packaging or a suitable storage bag to protect it from dust and damage.



Figure 3: The padded mat is machine washable for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your Sherilyn Kids Play Tent, please refer to the common solutions below:

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Pipes not fully connected; fabric not properly secured.	Ensure all PVC pipes are firmly clicked into their connectors. Re-check all fabric ties and Velcro straps for tightness.
Fabric appears wrinkled.	Packaging creases; improper storage.	The fabric may have creases from packaging. These will typically smooth out with use or can be gently steamed. Avoid harsh ironing.
Difficulty disassembling.	Pipes are tightly fitted.	Apply gentle, even pressure when pulling pipes apart. Do not force. If needed, twist slightly while pulling.

SPECIFICATIONS

- **Product Dimensions:** 47 x 40 x 52 inches (Length x Width x Height)
- **Item Weight:** 9.42 pounds
- **Item Model Number:** S-18
- **Manufacturer Recommended Age:** 18 months and up
- **Manufacturer:** Sherilyn

Play Tent with Mat providing plenty of space ample room for 2-3 children



Figure 4: Play Tent Dimensions.

WARRANTY AND SUPPORT

For information regarding product warranty or customer support, please refer to the contact details provided on the product packaging or visit the official Sherilyn brand website.

