

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ViLoSa](#) /
- › [ViLoSa Talking Watch User Manual](#)

### ViLoSa man-lizhi

# ViLoSa Talking Watch User Manual

Model: man-lizhi

## PRODUCT OVERVIEW

---

The ViLoSa Talking Watch is specifically designed for individuals with visual impairments and the elderly. It features a clear, loud voice announcement for time, date, and alarm settings, ensuring ease of use and accessibility. The watch combines functionality with a classic design, making it a practical and elegant timepiece.





*Image: Front view of the ViLoSa Talking Watch, showcasing its white dial with large, easy-to-read Arabic numerals and a black leather strap.*

## PACKAGE CONTENTS

---

Upon opening the package, please verify that all components are present and in good condition.

- 1 x ViLoSa Talking Watch
- 1 x English User Manual
- 1 x Packaging Box

## SETUP

---

### Initial Activation

Before first use, ensure the small plastic buckle on the crown is removed. This buckle prevents battery drain during shipping. Once removed, the watch is ready for operation.



*Image: The ViLoSa Talking Watch worn on a wrist, demonstrating its comfortable fit and clear display.*

## **OPERATING INSTRUCTIONS**

---

### **Button Functions**

The watch features two main buttons for operation: S1 and S2.



Image: A diagram illustrating the location and function of the two buttons on the side of the watch: the Voice Setting Button and the Set Analog Time/Voice Broadcast Button.

- **S1 Button:**

- Press once to announce the current time.
- Press twice (consecutively) to announce the current date (month/day/week).


- **S2 Button:**

- Used to enter setting mode for time, date, and alarm.

## Setting Time and Date

1. Press the **S2** button to enter the setting mode. The watch will announce the current setting parameter (e.g., "Set Hour").
2. While in setting mode, press the **S1** button repeatedly to adjust the value of the current parameter (e.g., hour, minute, year, month, date, alarm time).

3. Press the **S2** button again to move to the next setting parameter.
4. Continue this process until all desired settings (time, minutes, year, month, date, alarm time, alarm on/off) are configured.
5. To exit setting mode, stop pressing buttons for a few seconds, or cycle through all settings until the watch exits automatically.

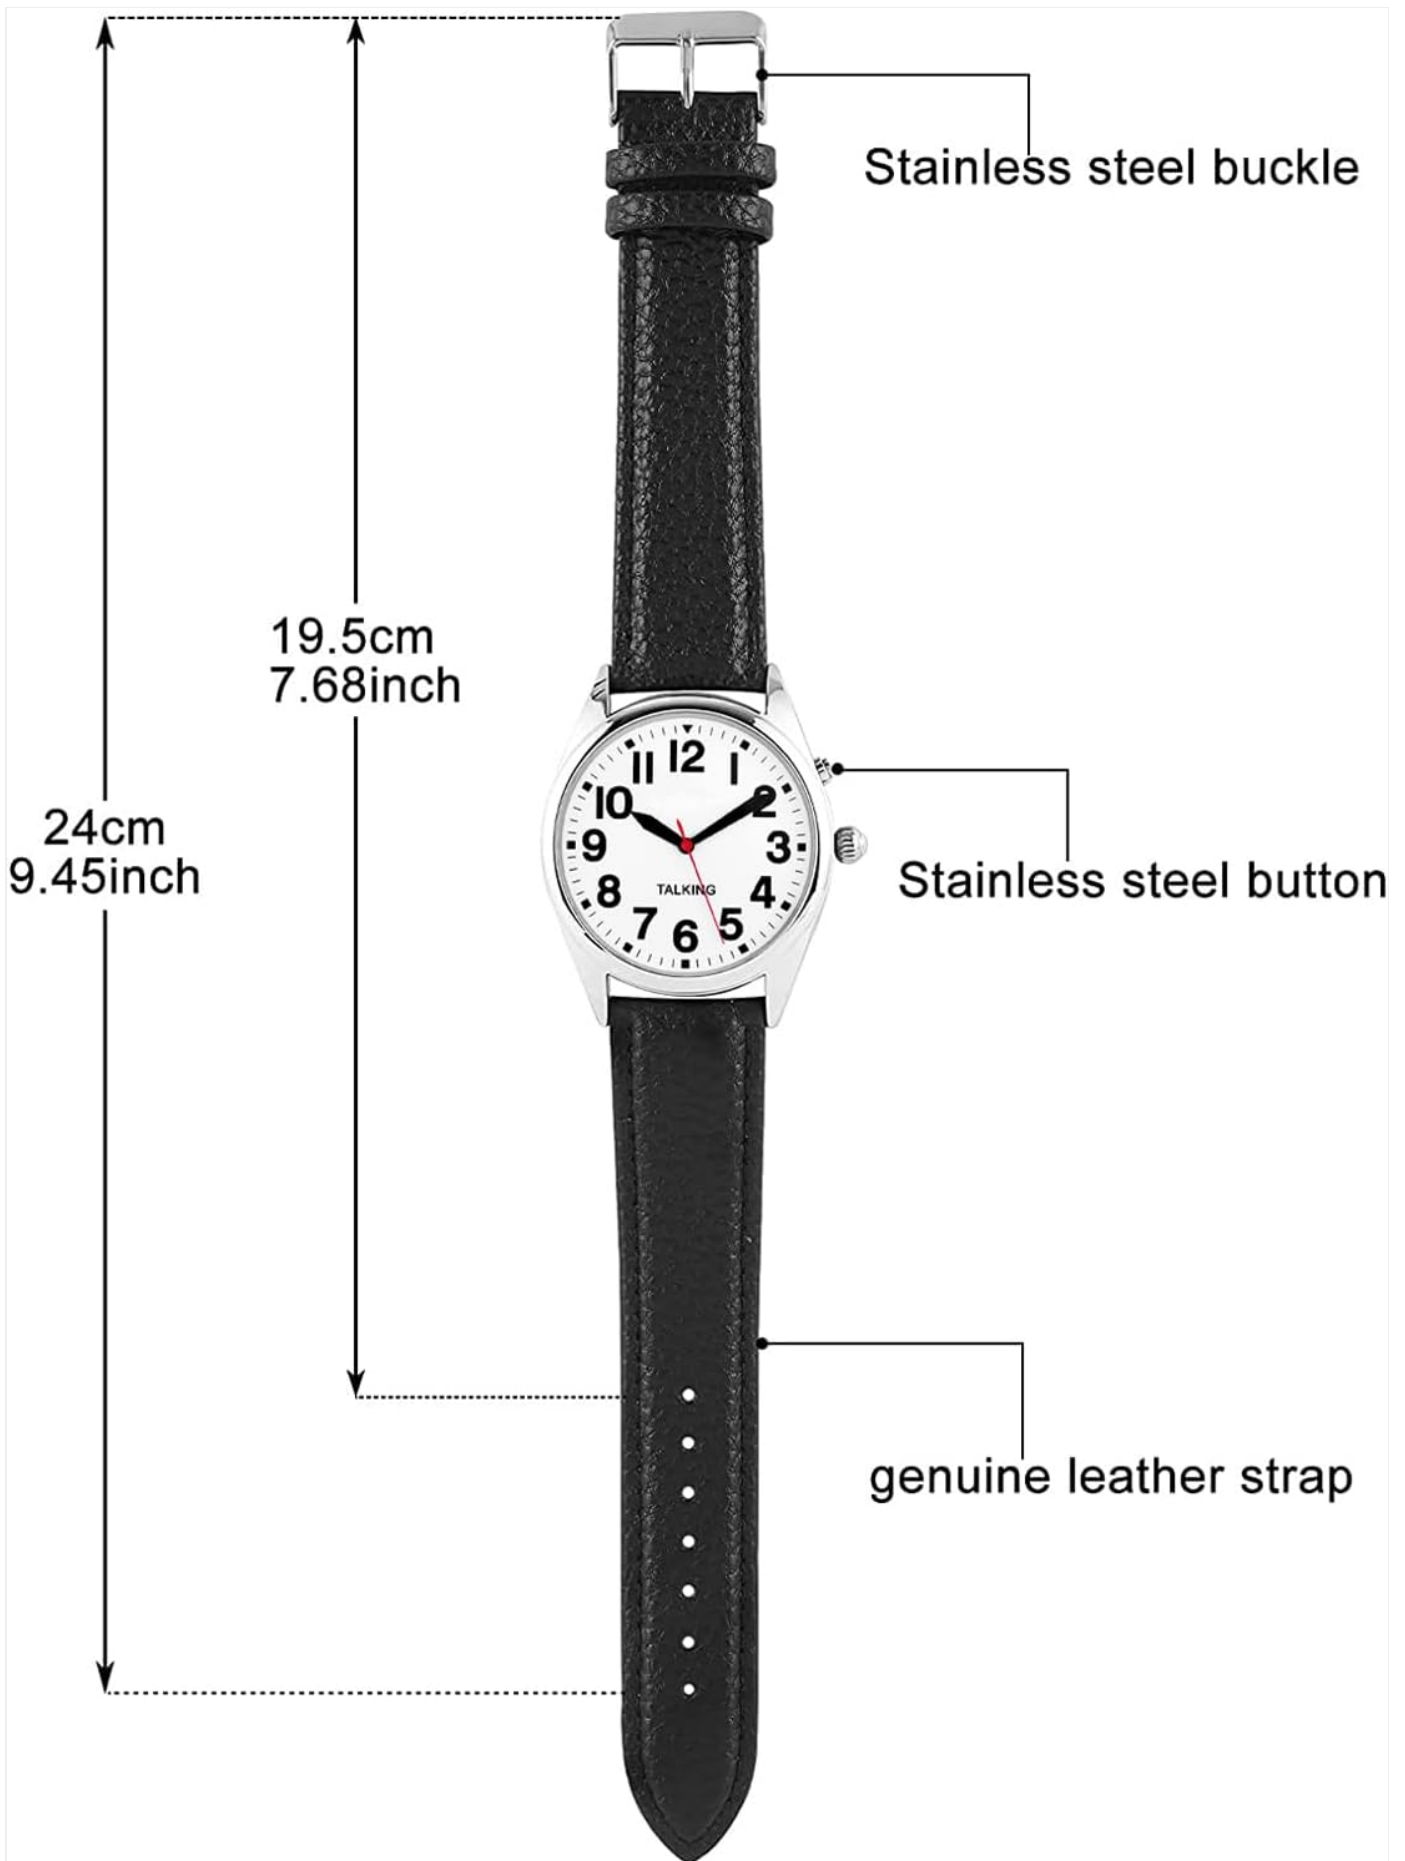

*Image: An illustration demonstrating the watch's voice announcements for time (e.g., "The Time Is 10:10 AM"), date (e.g., "The Date Is Apr. 8, Saturday"), and alarm time (e.g., "The Alarm Time Is 7:30 AM").*

## MAINTENANCE

---

## Battery Replacement

The watch requires 1 CR2032 battery. When the voice announcements become faint or the watch stops functioning, it is time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to avoid damaging the watch's internal components.

## Cleaning and Care

- Wipe the watch case and strap with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- While the watch is durable, it is not waterproof. Avoid submerging it in water or exposing it to heavy rain.

## TROUBLESHOOTING

---

- **Watch not speaking:**

- Ensure the plastic buckle on the crown has been removed.
- Check the battery. Replace if necessary.
- Verify that the voice function has not been accidentally turned off in the settings.

- **Incorrect time/date announcement:**

- Re-enter the setting mode using the S2 button and adjust the time and date as per the "Setting Time and Date" instructions.

- **Voice unclear or distorted:**

- This may indicate a low battery. Replace the CR2032 battery.

## SPECIFICATIONS

---

Feature	Detail
Movement	Japanese Quartz
Case Material	Alloy / Steel
Mirror Material	High Hardness Tempered Glass
Strap Material	Genuine Leather
Strap Length (unstretched)	16 cm (6.3 inches)
Strap Length (stretched)	26 cm (10.2 inches)
Battery Type	1 x CR2032 (required)
Model Number	man-lizhi
Product Dimensions	14.8 x 5.5 x 3.7 cm; 0.1 grams



*Image: A detailed diagram showing the dimensions of the watch, including the strap length (19.5cm / 7.68 inches from buckle to end hole, total 24cm / 9.45 inches) and the stainless steel buckle and button.*

## WARRANTY AND SUPPORT

---

The ViLoSa Talking Watch comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, troubleshooting assistance, or warranty claims, please contact ViLoSa customer service. Please have your purchase receipt and model number (man-lizhi) ready when contacting support.

ViLoSa is committed to providing 24-hour after-sales service with a 100% satisfied solution.

## ADDITIONAL INFORMATION

---

This watch is designed for both men and women, but please verify the strap length before purchasing to ensure a comfortable fit.



*Image: A collage illustrating various practical applications of the talking watch, such as wake-up reminders, appointment reminders, timing during walks, and medication reminders.*