

[Manuals.plus](#) /

› [Anthter](#) /

› Anthter 600W Professional Food Processor User Manual

Anthter Anthter 600W Food Processor

Anthter 600W Professional Food Processor User Manual

Model: Anthter 600W Food Processor

PRODUCT OVERVIEW

The Anthter 600W Professional Food Processor is a versatile kitchen appliance designed to simplify food preparation. It features a powerful 600W motor and various attachments for chopping, mixing, grating, shredding, slicing, pureeing, and making dough. Its compact design makes it an efficient solution for a wide range of culinary tasks.



Figure 1: Anthter 600W Professional Food Processor with main components.

SAFETY INSTRUCTIONS

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury.
- Ensure the lid is securely locked in place before operating the food processor.
- Do not immerse the motor base in water or any other liquid. Wipe clean with a damp cloth.
- Avoid processing extremely hot liquids or ingredients.
- Do not overload the food processor. Refer to the maximum liquid level markings on the bowl.
- Keep out of reach of children.

COMPONENTS

- **Motor Base:** Contains the 600W motor and control dial.
- **Work Bowl:** 7-cup capacity, transparent bowl for processing ingredients.
- **Lid with Feed Tube:** Securely covers the work bowl and allows for adding ingredients during operation.
- **Push Rod:** Used to guide ingredients through the feed tube.
- **Stainless Steel S-Blade:** For chopping, mincing, and pureeing. Ideal for meat and tough ingredients.
- **Plastic S-Blade (Dough Blade):** Specifically designed for kneading dough.
- **Reversible Disc:** Features one side for grating (small holes) and the other for slicing (blade face up).



Figure 2: All included components of the food processor.

SETUP AND ASSEMBLY

1. Place the motor base on a clean, dry, and stable surface.
2. Carefully place the work bowl onto the motor base, aligning the handle with the right side of the base. Rotate clockwise until it locks into place.
3. Select the appropriate blade or disc for your task:
 - For chopping, mincing, or pureeing: Place the Stainless Steel S-Blade onto the center shaft of the work bowl.
 - For kneading dough: Place the Plastic S-Blade onto the center shaft.
 - For slicing or shredding: Place the Reversible Disc onto the center shaft. Ensure the desired side (slicing or shredding) is facing upwards.
4. Place the lid onto the work bowl, aligning the tab on the lid with the slot on the work bowl handle. Rotate clockwise until it clicks securely into place.
5. Insert the push rod into the feed tube opening on the lid.
6. Ensure all components are correctly assembled and locked before plugging the unit into a power outlet.

Powerful 600W Motor

2 Speed for different food



Figure 3: Proper placement of the work bowl on the motor base.

Reversible disc , slices and shreds



Figure 4: Installing the S-blade for chopping tasks.



Figure 5: The reversible disc for slicing and shredding.

OPERATING INSTRUCTIONS

The Anthter Food Processor features a control dial with two speed settings (1 and 2) and a pulse function (P) for precise control over your processing tasks.

General Operation:

1. After assembly, add your ingredients to the work bowl. For slicing or shredding, add ingredients through the feed tube.
2. Plug the food processor into a standard electrical outlet.
3. Turn the control dial to the desired speed setting (1 or 2) or to 'P' for pulse action.
 - **Speed 1:** Lower speed for softer ingredients or lighter tasks.

- **Speed 2:** Higher speed for harder ingredients or more intensive processing.
- **Pulse (P):** Provides short bursts of power for coarse chopping, controlling texture, or starting tough ingredients. Release the dial to stop.

4. Use the push rod to guide ingredients through the feed tube when slicing or shredding. Never use your fingers.
5. Once processing is complete, turn the dial to '0' and unplug the appliance.

Specific Applications:

- **Chopping/Mincing (Stainless Steel S-Blade):** Ideal for meats, vegetables, nuts, and herbs. Use pulse for coarse chops, continuous speed for finer results.



Figure 6: Chopping meat and vegetables with the S-blade.

- **Slicing/Shredding (Reversible Disc):** Perfect for carrots, cucumbers, potatoes, and cheese. Ensure the correct side of the disc is facing up.

Dough blade A Baker Master



Figure 7: Using the wide mouth feed tube for slicing/shredding.

- **Dough Making (Plastic S-Blade):** Use for mixing and kneading various types of dough.

Stainless steel Chopping S-blades



Figure 8: The dough blade in use for preparing dough.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Anthter Food Processor.

- Always unplug the appliance before cleaning.
- **Work Bowl, Lid, Blades, and Discs:** These parts are dishwasher safe for easy cleaning. Alternatively, they can be hand washed with warm, soapy water. Use a brush for hard-to-reach areas and sharp blades. Rinse thoroughly and dry completely before storing.
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water or any other liquid.
- Store all attachments neatly to prevent damage and loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food processor does not turn on.	Not plugged in; bowl or lid not properly assembled/locked.	Ensure the power cord is securely plugged into a working outlet. Verify the work bowl and lid are correctly assembled and locked into place.
Motor runs, but ingredients are not processing.	Blade/disc not properly installed; ingredients too large or too much.	Check that the blade or disc is correctly seated on the center shaft. Cut larger ingredients into smaller pieces. Do not exceed the maximum fill line.
Loud noise or vibration during operation.	Uneven load; appliance not on a stable surface.	Distribute ingredients evenly in the bowl. Ensure the food processor is placed on a flat, stable, and dry surface.
Food stuck in feed tube.	Ingredients too large or not pushed down correctly.	Use the push rod to guide food. Cut ingredients to fit the feed tube. Never use fingers or other utensils.

SPECIFICATIONS

Feature	Detail
Brand	Anthter
Model Name	Anthter 600W Food Processor
Special Feature	Adjustable Speed Control
Product Dimensions	9.25"D x 7.48"W x 13.98"H
Color	Black
Bowl Capacity	1750 Milliliters (approx. 7 cups)
Recommended Uses	Puree, Shredder, Blend, Chop, Slice, Grate, Mix
Number of Speeds	2 (plus Pulse)
Product Care Instructions	Hand Wash (components are dishwasher safe)
Included Components	Chopping Blade, Blade Knife (S-blade, Dough blade, Reversible Disc)
Blade Material	Plastic, Stainless Steel
Power Source	AC adapter
Item Weight	6.31 pounds

WARRANTY AND SUPPORT

The Anthter 600W Professional Food Processor comes with a **3-YEAR SATISFACTION ASSURANCE**. For any questions, concerns, or support needs, please contact Anthter customer service.

Contact information can typically be found on the product packaging or the official Anthter website.

© 2023 Anthter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question