

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon Basics](#) /
- › [Amazon Basics 61-Key Electric Keyboard Piano \(Model JK-80\) Instruction Manual](#)

Amazon Basics JK-80

Amazon Basics 61-Key Electric Keyboard Piano (Model JK-80) Instruction Manual

Model: JK-80 | Brand: Amazon Basics

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the instrument.
- Keep the manual for future reference.
- Do not use this instrument near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the instrument.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this instrument during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the instrument has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the instrument, the instrument has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Amazon Basics 61-Key Electric Keyboard Piano
- Headphones
- Sheet Music Stand
- Power Adapter

- Note Stickers
- Instruction Manual



Image: The Amazon Basics 61-Key Electric Keyboard Piano shown with its complete set of accessories, including headphones, a sheet music stand, power adapter, and note stickers, all ready for assembly and use.

PRODUCT OVERVIEW

The Amazon Basics 61-Key Electric Keyboard Piano (Model JK-80) is designed for learning and practice. It features a portable design, built-in speakers, and a comprehensive set of functions to support musical development.

Perfect Learning Tool

Includes

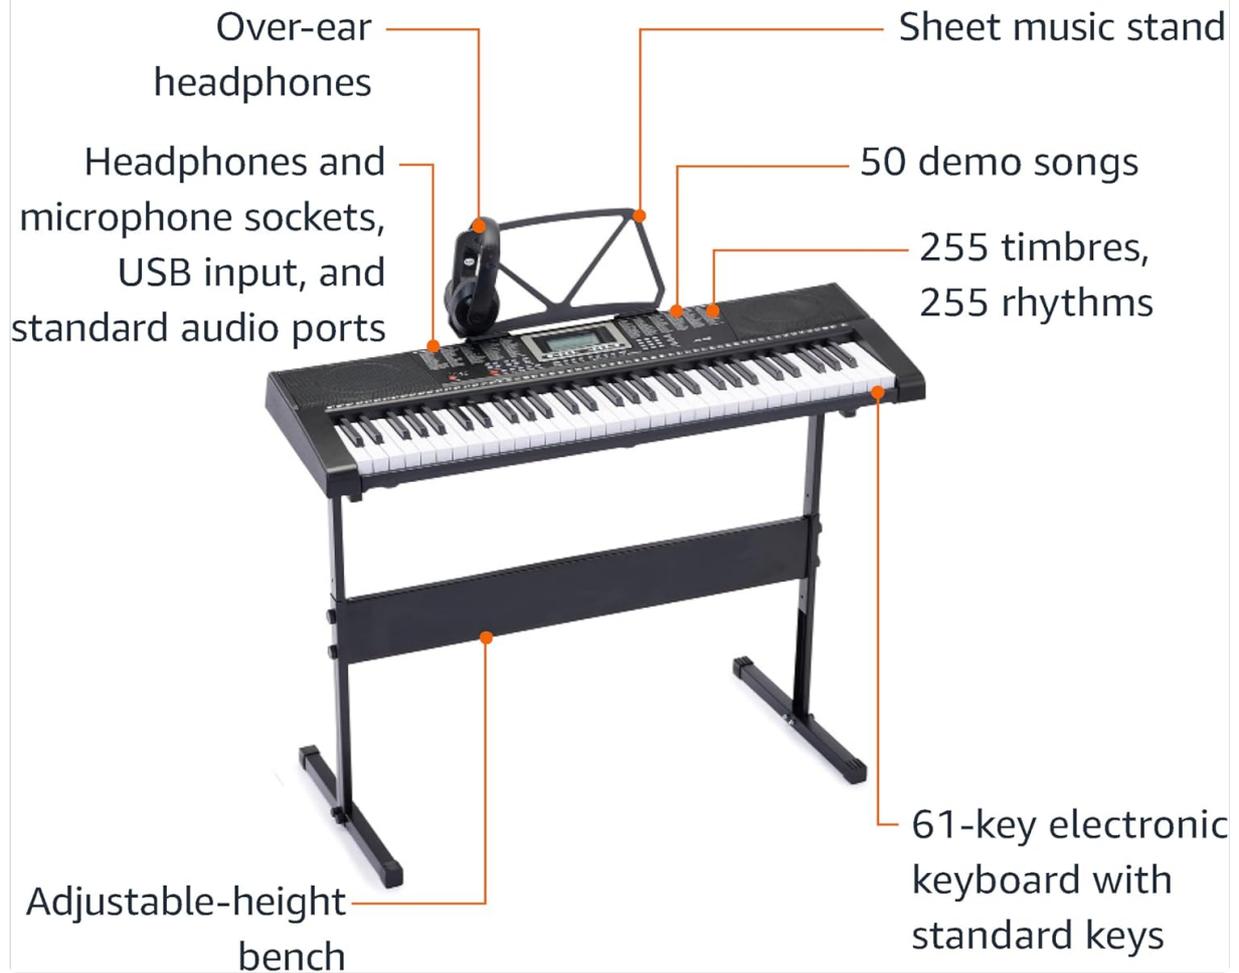


Image: A diagram illustrating the key features of the keyboard, such as the included over-ear headphones, various input/output ports, the sheet music stand, and the extensive sound library of 255 timbres, 255 rhythms, and 50 demo songs.

Key Features:

- **61 Full-Size Standard Keys:** Provides a traditional piano feel for effective learning.
- **Built-in Speakers:** Allows for immediate playback without external amplification.
- **LCD Display:** Offers clear visual feedback for settings and functions.
- **255 Timbres:** A wide selection of instrument sounds.
- **255 Rhythms:** Various accompaniment styles for practice.
- **50 Demo Songs:** Pre-loaded songs for listening and learning.
- **USB Input:** For MP3 function and song playback.
- **Headphone Jack:** Enables private practice.
- **Microphone Input:** For vocal accompaniment.

SETUP

1. Unpacking

1. Carefully remove all components from the packaging.
2. Retain packaging materials for future transport or storage.
3. Place the keyboard on a stable, flat surface or assemble the optional keyboard stand.

2. Power Connection

1. Ensure the keyboard is powered off.
2. Connect the power adapter to the DC 9V input jack on the rear of the keyboard.
3. Plug the power adapter into a standard electrical outlet.

3. Stand Assembly (Optional)

If using a separate keyboard stand, follow the stand's specific assembly instructions. Ensure the keyboard is securely placed on the stand.

4. Accessories Connection

1. **Headphones:** Plug the headphones into the 'PHONES/OUTPUT' jack for private listening. This will mute the built-in speakers.
2. **Microphone:** Connect a microphone to the 'MIC' input jack.
3. **USB Drive:** Insert a USB drive into the 'U DISK' port for MP3 playback.
4. **Sheet Music Stand:** Insert the sheet music stand into the designated slots on the top panel of the keyboard.



Image: A detailed view of the keyboard's rear panel, highlighting the various input and output ports for connecting accessories like USB drives, headphones, and microphones, as well as the power input.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button located on the left side of the control panel to turn the keyboard on or off.

2. Volume Control

Use the **MASTER VOL** buttons (Volume + / -) to adjust the overall output volume.

3. Selecting Timbres (Voices)

1. The keyboard defaults to a Grand Piano timbre upon startup.
2. To select a different timbre, press the **TIMBRE** button.
3. Use the number pad or the **+/-** buttons to enter the desired timbre number (000-254). Refer to the timbre list printed on the keyboard panel.

4. Selecting Rhythms

1. Press the **RHYTHM** button.

2. Use the number pad or the **+/-** buttons to enter the desired rhythm number (000-254). Refer to the rhythm list printed on the keyboard panel.
3. Press **START/STOP** to begin or end the rhythm playback.
4. Adjust the rhythm volume using the **ACCOM VOL** buttons.

5. Demo Songs

1. Press the **DEMO SONG** button.
2. Use the number pad or **+/-** buttons to select a demo song (00-49).
3. Press **PLAY** to start the selected demo song. Press again to stop.

6. Learning Mode

The keyboard includes built-in lessons. Consult the specific instructions for activating and utilizing the learning functions, which typically involve following on-screen prompts or illuminated keys (if available on this model).

7. USB Playback (MP3 Function)

1. Insert a USB drive containing MP3 audio files into the 'U DISK' port.
2. The keyboard should automatically detect the USB drive.
3. Use the **MP3** controls (Play/Pause, Next/Previous) to navigate and play tracks.

8. Headphone Use

When headphones are plugged into the 'PHONES/OUTPUT' jack, the internal speakers are automatically muted, allowing for silent practice.

Problem	Possible Cause	Solution
No sound	Keyboard not powered on; Volume too low; Headphones connected.	Ensure power is on; Increase MASTER VOL; Disconnect headphones if using speakers.
Distorted sound	Volume too high; Faulty connection.	Decrease MASTER VOL; Check all cable connections.
Rhythm not playing	Rhythm not selected; START/STOP not pressed.	Select a rhythm; Press START/STOP.
USB playback not working	USB drive not inserted correctly; Incompatible file format.	Ensure USB drive is fully inserted; Verify files are in MP3 format.

SPECIFICATIONS

Feature	Detail
Model Name	JK-80
Number of Keys	61
Timbres	255
Rhythms	255
Demo Songs	50
Connectivity	USB, Audio Input, Microphone Input, Headphone Output
Power Source	Corded Electric (DC 9V)
Product Dimensions	15.16"D x 36.61"W x 30.51"H (with stand)
Item Weight	12.54 pounds (5.7 kg)
Color	Black



Image: A visual representation of the keyboard's dimensions, indicating its width, depth, and adjustable height range when placed on its stand.

WARRANTY AND SUPPORT

This Amazon Basics product is covered by a limited warranty. For detailed warranty information, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official Amazon Basics support website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Amazon Basics customer service. Contact information can typically be found on the product packaging or the Amazon Basics website.

Please have your model number (JK-80) and purchase information ready when contacting support.