

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Amazon Basics](#) /
- › [Amazon Basics 61-Key Portable Digital Piano JK-80 Instruction Manual](#)

## Amazon Basics JK-80

# Amazon Basics 61-Key Portable Digital Piano

Model: JK-80

## INTRODUCTION

Thank you for purchasing the Amazon Basics 61-Key Portable Digital Piano, Model JK-80. This versatile electronic keyboard is designed for beginners and experienced musicians alike, offering a wide range of features to enhance your musical journey. This manual provides essential information for safe operation, setup, usage, maintenance, and troubleshooting.

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions thoroughly before use.
- Keep this manual for future reference.
- Do not expose the piano to water or moisture.
- Avoid placing the piano near heat sources or in direct sunlight.
- Use only the provided power adapter.
- Do not attempt to disassemble or modify the piano. Refer all servicing to qualified personnel.
- Keep out of reach of small children to prevent choking hazards from small parts.
- Ensure proper ventilation around the unit.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Amazon Basics 61-Key Portable Digital Piano (Model JK-80)
- Sheet Music Stand
- Over-ear Headphones
- Power Adapter
- Learning Stickers
- Instruction Manual (this document)

## PRODUCT OVERVIEW

The Amazon Basics 61-Key Portable Digital Piano is designed for ease of use and comprehensive learning. It features a clear LCD display, built-in speakers, and various connectivity options.



**Figure 1:** Overview of the Amazon Basics 61-Key Portable Digital Piano, highlighting the included headphones, sheet music stand, USB input, standard audio ports, 50 demo songs, 255 timbres, 255 rhythms, and the 61-key electronic keyboard with standard keys. An adjustable-height bench is also shown, though not explicitly listed as included in the feature bullets.



**Figure 2:** Key features of the digital piano, including built-in speakers, a clear LCD display, MP3 function for USB drive song playback, and keynote stickers as learning aids.

## Control Panel and Connections

Familiarize yourself with the main controls and connection ports:



Figure 3: Detailed view of the control panel, including the LCD display, power switch, master volume, tempo controls, tone and rhythm selection, demo songs, and various function buttons.



Figure 4: Close-up of one of the integrated speakers, providing clear audio output.



**Figure 5:** Rear connection ports, including USB (UDISK) for MP3 playback, Audio Input, Headphone/Output jack (3.5mm), and DC 9V power input.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Stand Assembly (if applicable):** If your package includes a stand, assemble it according to the separate stand instructions. Ensure it is stable before placing the piano on it.
3. **Sheet Music Stand:** Insert the sheet music stand into the designated slot on the top panel of the piano.
4. **Power Connection:** Connect the provided power adapter to the DC 9V input port on the rear of the piano (Figure 5). Plug the adapter into a suitable wall outlet.
5. **Headphones (Optional):** For private practice, plug the headphones into the "PHONES/OUTPUT" jack (Figure 5). This will mute the built-in speakers.
6. **Learning Stickers (Optional):** Apply the learning stickers to the keys as a visual aid for beginners.

**Note:** An assembly video might be available online. Refer to the product page for more details if needed.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off and Volume

- **Power On:** Press the **POWER** button (Figure 3) to turn on the piano. The LCD screen will illuminate.
- **Power Off:** Press the **POWER** button again to turn off the piano.
- **Volume Control:** Use the **MASTER VOL** buttons (Figure 3) to adjust the overall volume.

### 2. Tone (Sound) Selection

- The piano features 255 different tones.
- Press the **TONE** button (Figure 3).
- Use the number pad or the +/- buttons to select a desired tone number (e.g., 000 for Grand Piano). The selected tone will be displayed on the LCD.

### 3. Rhythm Selection

- The piano includes 255 rhythms.
- Press the **RHYTHM** button (Figure 3).
- Use the number pad or the +/- buttons to select a desired rhythm number.
- Press **START/STOP** to begin or end the rhythm.
- Adjust the tempo using the **TEMPO +/-** buttons.

### 4. Demo Songs

- There are 50 built-in demo songs.
- Press the **DEMO SONG** button (Figure 3).
- Use the number pad or +/- buttons to select a song.
- Press **PLAY** to start the demo song. Press again to stop.

### 5. Learning Modes

The piano offers three learning modes:

- **One-Key Mode:** Practice playing along with a song by pressing any key. The correct note will sound regardless of which key is pressed.
- **Follow Mode:** The piano waits for you to play the correct note before proceeding with the song.
- **Ensemble Mode:** Play along with the melody, while the piano provides the accompaniment.

Refer to the specific buttons on the control panel (Figure 3) for activating these modes.

### 6. MP3 Function (USB Playback)

- Insert a USB drive (UDISK) containing MP3 audio files into the USB port on the rear of the piano (Figure 5).
- The piano will automatically detect the USB drive.
- Use the MP3 control buttons (Play/Pause, Next/Previous, Volume) on the control panel (Figure 3) to manage playback.
- You can play along with your favorite tracks and add melodies or rhythms.

## MAINTENANCE

- **Cleaning:** Wipe the piano with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the piano in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping or subjecting the piano to strong impacts.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the piano and a working power outlet.
No sound	Volume too low; headphones connected; faulty speakers.	Increase master volume. Disconnect headphones if speakers are desired. If problem persists, contact support.
Keys not responding	Unit malfunction.	Try turning the piano off and on again. If the issue continues, contact customer support.
MP3 playback issues	USB drive not properly inserted; unsupported file format; corrupted files.	Ensure USB drive is fully inserted. Check if MP3 files are correctly formatted. Try a different USB drive or files.

## SPECIFICATIONS

- **Model:** JK-80
- **Keys:** 61 Standard Keys
- **Tones:** 255
- **Rhythms:** 255
- **Demo Songs:** 50
- **Learning Modes:** One-Key, Follow, Ensemble
- **Connectivity:** USB (for MP3 playback), Audio Input, 3.5mm Headphone/Output Jack, DC 9V Power Input
- **Power Source:** DC 9V Power Adapter
- **Dimensions (Piano Unit):** Approximately 93 cm (L) x 30.4 cm (W) x 9.32 cm (H)
- **Dimensions (with Stand, adjustable height):** Approximately 93 cm (L) x 38.5 cm (W) x 65.5-77.5 cm (H)
- **Weight:** Approximately 3.81 kg
- **Color:** Black



Figure 6: Product dimensions including the stand, showing length, width, and adjustable height range.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Amazon Basics website. Keep your proof of purchase for any warranty claims.

**Online Resources:** For additional support, FAQs, and product registration, please visit [www.amazon.com/basics](http://www.amazon.com/basics).