Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Weiser /
- Weiser SmartCode Keypad Deadbolt Instruction Manual

Weiser 9GED92600-002

Weiser SmartCode Keypad Deadbolt Instruction Manual

Model: 9GED92600-002 Brand: Weiser

PRODUCT OVERVIEW

The Weiser SmartCode Keypad Deadbolt provides a secure and convenient keyless entry solution for your home. This electronic deadbolt features a 10-button backlit keypad, allowing access with personalized user codes. It includes SmartKey re-key technology for enhanced security and ease of re-keying. Designed for traditional home decor, this lock offers a motorized deadbolt for quick and quiet operation.



Image: Front and back view of the Weiser SmartCode Keypad Deadbolt in Matte Black.

This deadbolt is suitable for various entry points including front doors, side doors, garage doors, and sheds, offering enhanced security and convenience without the need for traditional keys.

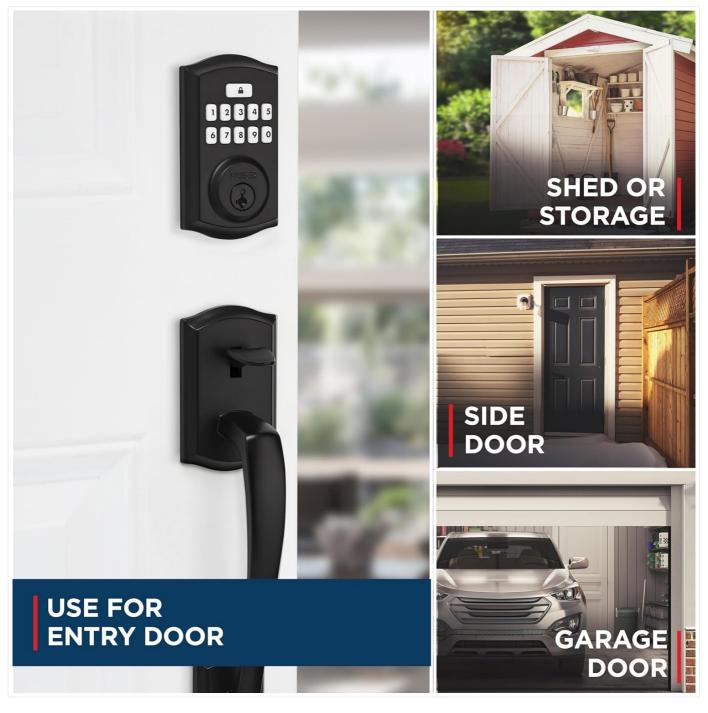


Image: The SmartCode Keypad Deadbolt shown installed on an entry door, with illustrations of its suitability for sheds, side doors, and garage doors.

WHAT'S INCLUDED

Before beginning installation, please verify that all components are present in the package:

- Exterior Deadbolt Assembly
- Interior Deadbolt Assembly
- Adjustable Latch
- Strike Plate
- Collar
- Mounting Plate
- Installation Hardware (screws, bolts)
- 2 Weiser Keys

- SmartKey Tool
- Installation Guide (this manual)



Image: A visual representation of all components included in the Weiser SmartCode Keypad Deadbolt package.

INSTALLATION

The Weiser SmartCode Keypad Deadbolt is designed for easy installation. For a seamless setup experience, it is highly recommended to use the free BILT app, which provides step-by-step interactive 3D instructions with voice and video guidance.

Door Compatibility: This deadbolt is designed to fit standard doors with a thickness of 1-3/8 inches to 1-3/4 inches (35 mm - 44 mm). It features an adjustable backset for both 2-3/8 inches (60 mm) and 2-3/4 inches (70 mm) configurations, making it ideal for most exterior and interior residential doors.

Ensure your door preparation meets these specifications before proceeding with installation.

OPERATION

Keyless Entry

The primary method of operation is keyless entry using the keypad. To unlock the door, simply enter your personalized access code on the 10-button keypad. The keypad is backlit for improved visibility in low-light conditions and remains illuminated for 30 seconds after inactivity.

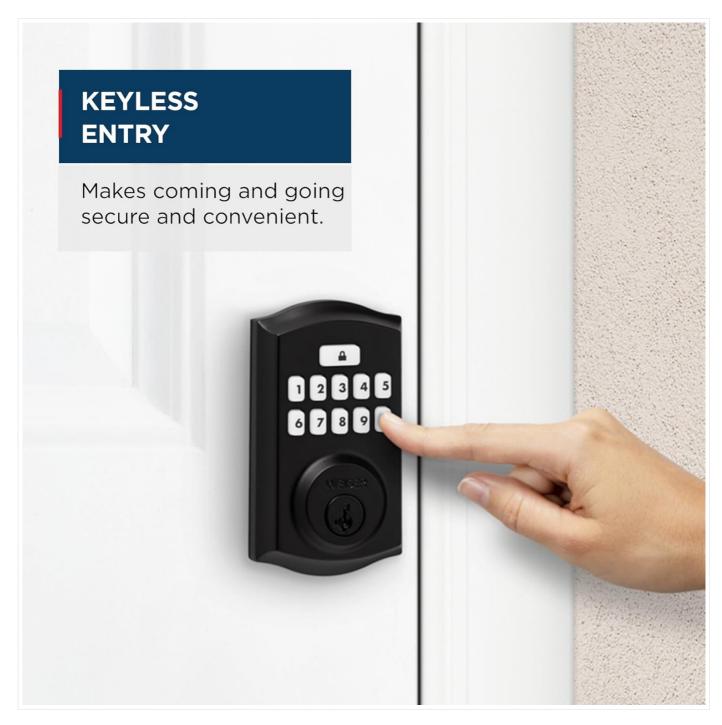


Image: A hand pressing buttons on the keypad for keyless entry, demonstrating the convenience of the system.

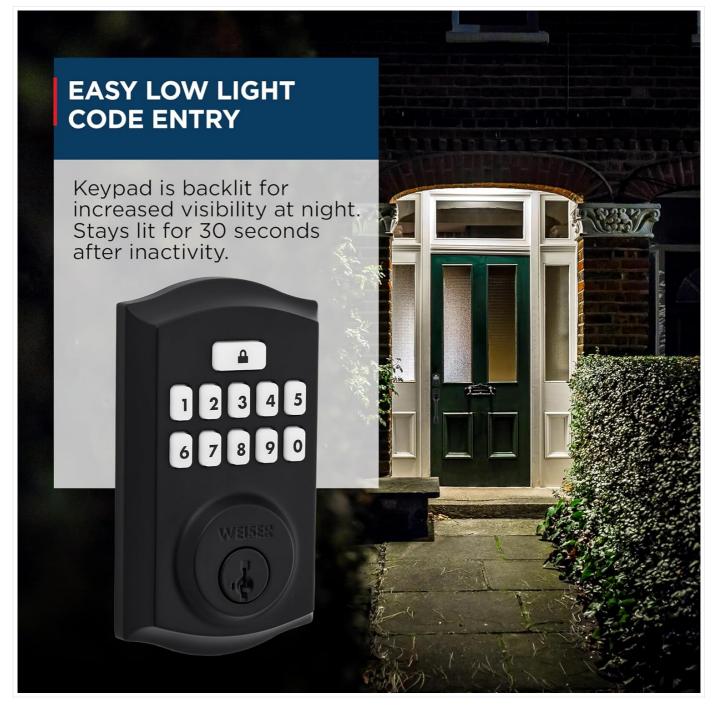


Image: The backlit keypad of the SmartCode deadbolt illuminated at night, showing its visibility in low light.

Auto-Lock Feature

The SmartCode deadbolt includes an auto-lock feature for added security. After a set period of time (configurable), the deadbolt will automatically extend and lock the door. This ensures your door is always secured, even if you forget to lock it manually.

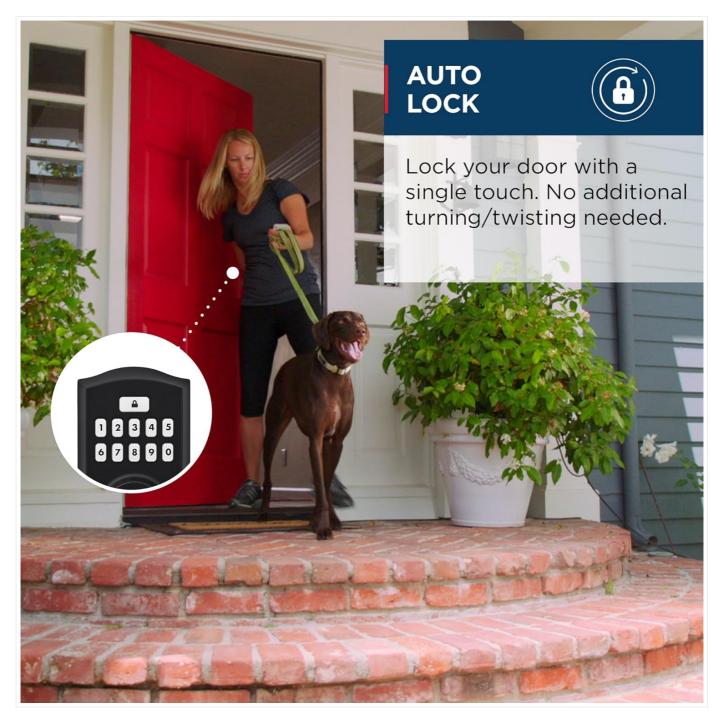


Image: A woman and her dog exiting a house, illustrating the convenience of the auto-lock feature which secures the door with a single touch, eliminating the need for manual turning or twisting.

Multiple User Access Codes

The lock supports up to 50 unique user access codes, allowing you to provide personalized entry for family members, friends, or service providers. It also features one master code option for programming and managing user codes.

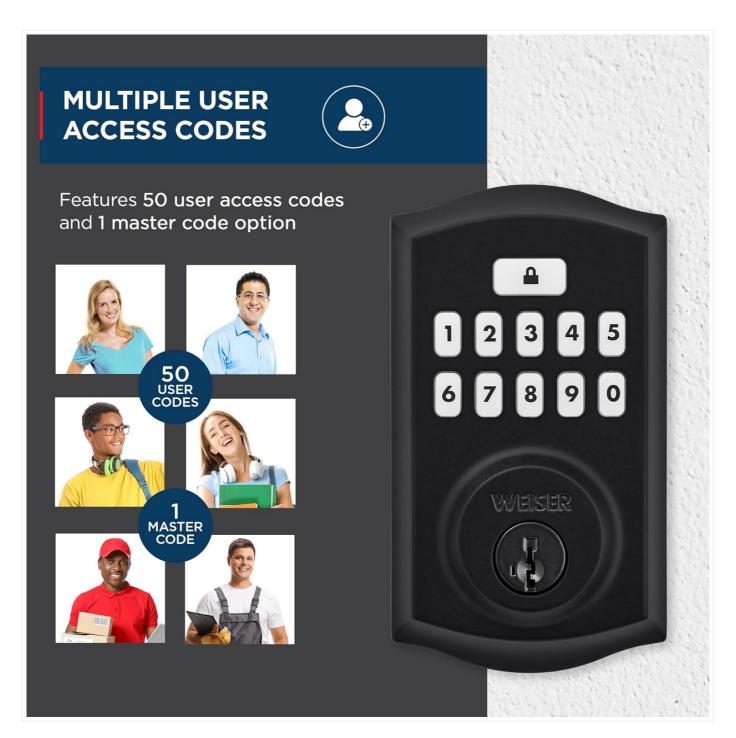


Image: The SmartCode keypad deadbolt with visual representations of various individuals, indicating the capacity for 50 user codes and 1 master code.

SmartKey Security

The Weiser SmartCode deadbolt incorporates SmartKey re-key technology. This feature allows you to re-key your lock in seconds, providing control over your keys and protecting against lost, stolen, or unauthorized keys without needing to remove the lock from your door. It offers advanced protection against common break-in techniques such as kick-in, bump, pick, drill, and saw attacks.



Image: A detailed diagram explaining SmartKey Security, showing how it protects against various break-in methods and allows for easy rekeying.

RESISTANT

RESISTANT

RESISTANT

PROOF

SAW

RESISTANT



Image: A visual guide demonstrating the SmartKey re-keying process, showing the key and the reset tool insertion point.

MAINTENANCE

To ensure optimal performance and longevity of your Weiser SmartCode Keypad Deadbolt, follow these maintenance guidelines:

- Battery Replacement: The lock operates on 4 AA batteries (not included). Replace batteries when the low battery indicator activates or if the lock becomes unresponsive. Use high-quality alkaline batteries for best performance.
- Cleaning: Clean the keypad and exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.
- **Lubrication:** Periodically lubricate the mechanical parts of the deadbolt, such as the latch and cylinder, with a silicone-based lubricant. Do not use oil-based lubricants.
- Code Management: Regularly review and update user codes as needed for security purposes. Delete codes that are no longer required.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Weiser SmartCode Keypad Deadbolt.

Problem	Possible Cause	Solution
Lock does not respond to keypad entry.	Low batteries; incorrect code entered; keypad malfunction.	Replace batteries. Ensure correct code is entered. If issue persists, perform a factory reset (refer to full installation guide).
Deadbolt does not extend or retract fully.	Misalignment of lock components; obstruction in door frame; low batteries.	Check door alignment and strike plate. Ensure no obstructions. Replace batteries. Re-install lock if necessary.
Auto-lock feature is not working.	Feature is disabled; incorrect setting.	Refer to the programming instructions to enable and configure the auto-lock feature.

Problem	Possible Cause	Solution	
Keypad backlight is not working.	Low batteries; internal issue.	Replace batteries. If the issue continues, contact customer support.	

For more detailed troubleshooting steps or issues not listed here, please consult the comprehensive installation and programming guide provided with your product or visit the official Weiser support website.

SPECIFICATIONS

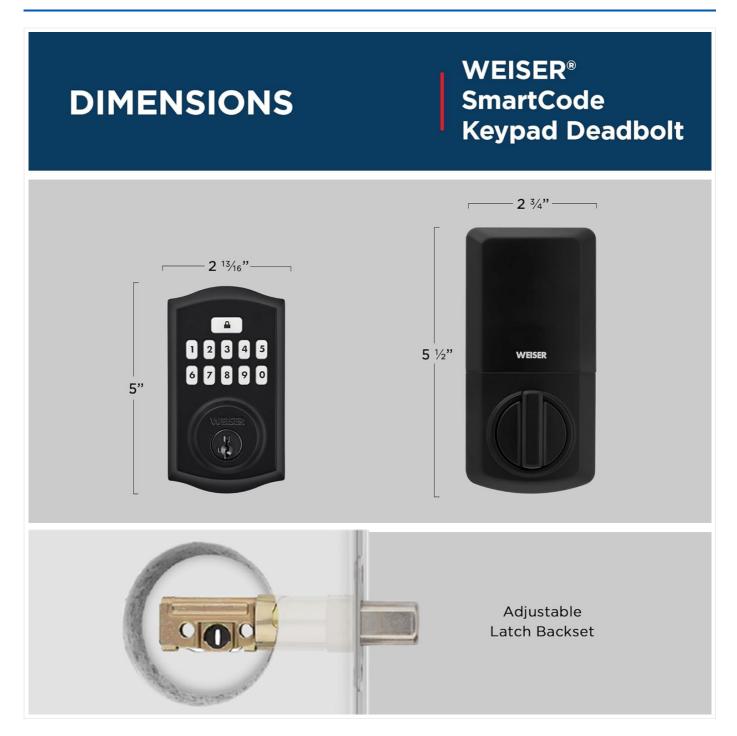


Image: Diagram showing the dimensions of the Weiser SmartCode Keypad Deadbolt, including the exterior keypad and interior unit, and the adjustable latch backset.

Feature	Detail		
Model Number	9GED92600-002		
Product Dimensions	6.99 x 2.86 x 13.97 cm (2.75 x 1.13 x 5.5 inches)		
Item Weight	454 g (1 lb)		
Color	Matte Black		
Style	Traditional		
Material	Metal		
Finish Type	Powder Coated		
Lock Type	Deadbolt, Electronic		
User Codes	Up to 50 user codes, 1 master code		
Power Source	4 AA Batteries (not included)		
Door Thickness Compatibility	1-3/8" to 1-3/4" (35mm - 44mm)		
Backset	Adjustable 2-3/8" or 2-3/4" (60mm or 70mm)		
Special Features	Weather Resistant, Anti-Bump, Auto-Lock, One-Touch Lock, Back-Lit Keypad, SmartKey Security		
ANSI Grade	Grade 2		
Country of Origin	China		

WARRANTY AND SUPPORT

Warranty: The Weiser SmartCode Keypad Deadbolt comes with a 1-year warranty. Please retain your proof of purchase for warranty claims.

Customer Support: For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Weiser customer support. You can find contact information and additional resources on the official Weiser website: www.weiserlock.com/en/support.

Additionally, the free BILT app offers interactive 3D instructions for installation and setup, which can be a valuable resource for users.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep this manual for future reference.

- Do not attempt to disassemble or modify the lock beyond what is described in this manual. This may void the warranty and compromise security.
- Ensure all screws are tightened securely during installation to prevent loosening over time.
- Protect your user codes. Do not share them with unauthorized individuals. Change codes regularly, especially after service personnel have accessed your property.

- Always test the lock's functionality after installation and any programming changes.
- Do not expose the lock to extreme temperatures or direct water spray.

© 2025 Weiser. All rights reserved.

Related Documents - 9GED92600-002

