

[Manuals.plus](#) /

› [PAXCESS](#) /

› PAXCESS 2150PSI Electric Pressure Washer User Manual

## PAXCESS Von3.2

# PAXCESS 2150PSI Electric Pressure Washer User Manual

Model: Von3.2

## INTRODUCTION

---

Thank you for choosing the PAXCESS 2150PSI Electric Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your pressure washer. Please read these instructions carefully before use and retain them for future reference.

## SAFETY INFORMATION

---

Operating a pressure washer requires adherence to safety precautions to prevent injury or damage. Always wear appropriate personal protective equipment, including eye protection. Ensure all connections are secure before starting the unit. Do not direct the spray at people, animals, or electrical equipment. Always disconnect the power supply before performing any maintenance or cleaning. Keep children and pets away from the operating area.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- PAXCESS Electric Pressure Washer Unit
- High-Pressure Hose (25 ft)
- Spray Gun with Safety Lock
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon / Soap Tank (16.9 oz)
- Power Cord (35 ft)
- Water Inlet Connector
- Nozzle Cleaning Pin

## SETUP

---

### 1. Assembly

1. **Attach the High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are hand-tightened securely.
2. **Connect the Spray Gun:** Insert the desired quick-connect nozzle into the end of the spray gun until it clicks into place.
3. **Install the Foam Cannon (Optional):** If using soap, fill the 16.9 oz foam tank with appropriate pressure washer detergent and attach it to the spray gun.

## 2. Water Connection

1. **Connect Garden Hose:** Attach a standard garden hose (not included) to the water inlet connector on the pressure washer unit. Ensure the garden hose is free of kinks and has a minimum diameter of 1/2 inch.
2. **Water Supply:** Turn on the water supply completely. Allow water to flow through the spray gun for approximately 30 seconds to purge any air from the system before connecting to power.
3. **Dual Water Intake Methods:** This unit supports direct garden hose connection or drawing water from a bucket using a siphon hose (siphon hose not included). Ensure the water source is clean and free of debris.



## Dual Water Intake Methods

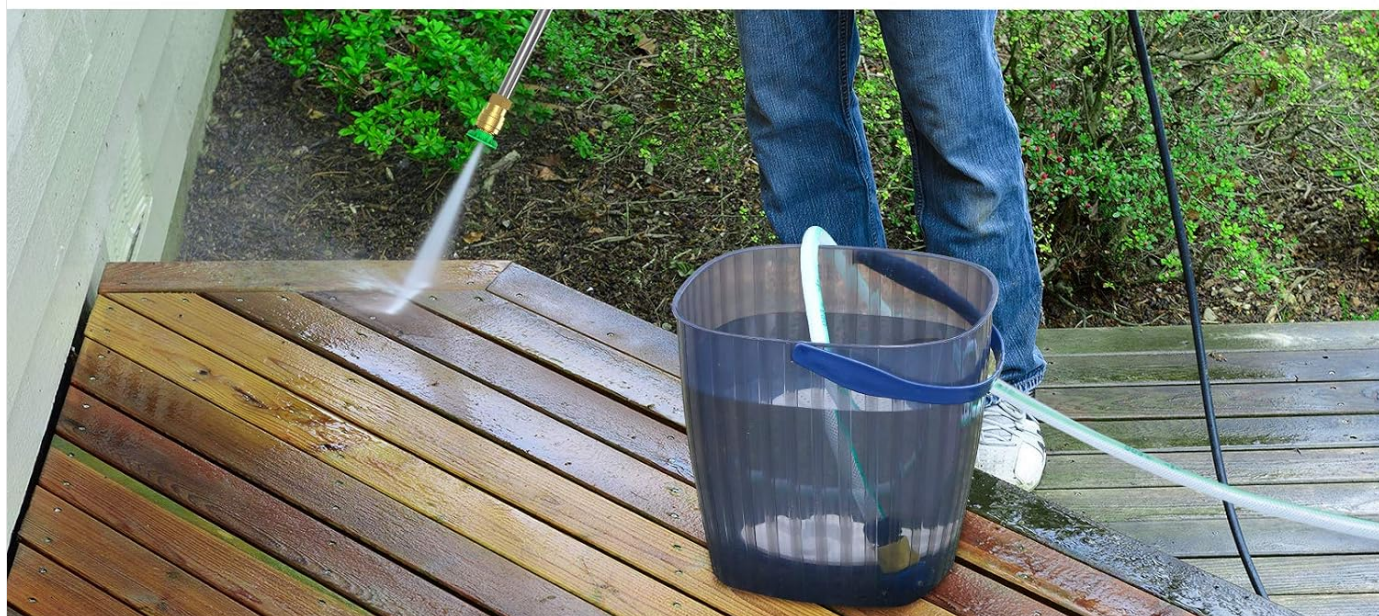


Image: Dual Water Intake Methods. The top image shows a pressure washer connected to a standard garden hose. The bottom image shows the pressure washer drawing water from a bucket, illustrating an alternative water supply method.

### 3. Power Connection

1. **Plug In:** Connect the 35 ft power cord to a grounded electrical outlet. Ensure the outlet meets the power requirements of the pressure washer.

## OPERATING INSTRUCTIONS

---

### 1. Starting the Pressure Washer

1. Ensure the water supply is fully open and the power cord is connected.
2. Turn the ON/OFF switch to the 'ON' position. The motor will start.
3. Point the spray gun at the cleaning surface, disengage the safety lock, and squeeze the trigger to begin spraying.

### 2. Using Quick-Connect Nozzles

The pressure washer includes four quick-connect nozzles, each designed for specific cleaning tasks:

- **0° (Red):** Pin-point jet for intense cleaning of small, stubborn areas. Use with extreme caution.
- **15° (Yellow):** Narrow spray for concentrated cleaning on hard surfaces.
- **25° (Green):** Medium spray for general cleaning of various surfaces.
- **40° (White):** Wide spray for gentle cleaning and rinsing.

## 4 Quick-Connect Nozzles



Image: Four Quick-Connect Nozzles. This image displays the four color-coded nozzles (red 0°, yellow 15°, green 25°, white 40°) and their corresponding spray patterns on different surfaces like wood, car wheels, concrete, and furniture.

### 3. Using the Foam Cannon

1. Fill the 16.9 oz foam tank with a pressure washer-safe detergent.
2. Attach the foam cannon to the spray gun.
3. Squeeze the trigger to apply a rich foam to the cleaning surface.
4. After applying soap, remove the foam cannon and attach a rinsing nozzle (e.g., 25° or 40°) to rinse the surface thoroughly.

### 4. Total Stop System (TSS)

The Total Stop System automatically shuts off the pump when the trigger is not engaged, saving energy and prolonging pump life. The pump restarts when the trigger is squeezed again.

# PAXCESS®

## 2150PSI Pressure Washer

**Ideal for your car,  
patio and decks cleaning!**



Image: Key Components. This image highlights the 26ft updated sturdy hose, the spray gun featuring a safety lock and Total Stop System, and the 35ft safe power cord, illustrating the main accessories for operation.

**26ft Updated  
Sturdy Hose**

**Safety Lock &  
Total Stop System**

**35ft Safe  
Power Cord**



Image: Cleaning Performance. This image shows the pressure washer in action, effectively cleaning a concrete surface, with text indicating its 2150 PSI pressure and 1.85 GPM flow rate.

### MAINTENANCE

## 1. After Each Use

- **Flush System:** Disconnect the detergent tank (if used) and run clean water through the system for a few minutes to remove any chemical residue.
- **Turn Off:** Turn off the pressure washer and the water supply.
- **Relieve Pressure:** Squeeze the spray gun trigger to release any remaining pressure in the system.
- **Disconnect:** Disconnect the garden hose and power cord.
- **Clean Nozzles:** Use the provided nozzle cleaning pin to clear any blockages in the spray tips.

## 2. Storage

- **Hose Reel:** Utilize the built-in hose reel for convenient and tangle-free storage of the high-pressure hose.
- **Power Cord:** Neatly wrap the power cord.
- **Store Accessories:** Store nozzles and the foam cannon in their designated holders on the unit.
- **Winterization:** If storing in an area where temperatures may drop below freezing, use a pump protector or antifreeze solution to prevent damage to the pump.
- **Location:** Store the pressure washer in a dry, protected area.

## TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

| Problem                | Possible Cause                                                     | Solution                                                                     |
|------------------------|--------------------------------------------------------------------|------------------------------------------------------------------------------|
| Motor does not start   | No power supply; tripped circuit breaker; faulty switch            | Check power connection; reset circuit breaker; contact support               |
| Low pressure           | Insufficient water supply; clogged nozzle; air in pump; worn seals | Ensure full water flow; clean nozzle; purge air from system; contact support |
| Water leaks            | Loose connections; damaged O-rings; cracked housing                | Tighten connections; replace O-rings; contact support                        |
| Motor stops frequently | Overheating; TSS engaging due to trigger release                   | Allow motor to cool; this is normal operation for TSS                        |

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact customer service for assistance.

## SPECIFICATIONS

| Feature          | Specification            |
|------------------|--------------------------|
| Brand            | PAXCESS                  |
| Model Number     | Von3.2                   |
| Power Source     | Electric                 |
| Maximum Pressure | 2150 PSI (Peak 3000 PSI) |

| Feature                        | Specification                |
|--------------------------------|------------------------------|
| Maximum Flow Rate              | 2.6 Gallons Per Minute (GPM) |
| Hose Length                    | 25 Feet                      |
| Power Cord Length              | 35 Feet                      |
| Foam Tank Volume               | 16.9 Fluid Ounces            |
| Item Weight                    | 8 Pounds                     |
| Product Dimensions (L x W x H) | 21" x 13" x 12"              |
| Certification                  | CE                           |

## WARRANTY AND SUPPORT

PAXCESS is committed to providing reliable products and customer satisfaction.

- **One-Year Warranty:** Your PAXCESS pressure washer is covered by a one-year warranty from the date of purchase, protecting against defects in materials and workmanship.
- **Customer Service:** For any inquiries, technical support, or warranty claims, PAXCESS offers 24-hour customer service.
- **Repair Services:** American professional repair services are available for product maintenance and repair needs.

For further assistance, please visit the official PAXCESS store or contact their customer support channels.

## Provide You With Worry-free Sales Service

**1**One-year  
Warranty**24**  
Hours24 Hours  
Customer ServiceAmerican Professional  
Repair Services

Image: Worry-free Sales Service. This graphic highlights the customer support offerings: a one-year warranty, 24-hour customer service, and access to American professional repair services.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question