

Weiser 9GED92600-005

Weiser SmartCode Keyless Entry Door Lock User Manual

Model: 9GED92600-005

1. INTRODUCTION

The Weiser SmartCode Keyless Entry Door Lock provides a secure and convenient way to manage access to your home. This electronic deadbolt features a backlit keypad for easy code entry, a motorized locking mechanism, and the ability to store multiple user codes. With SmartKey re-key technology, you can easily re-key your lock without replacing the entire unit. This manual will guide you through the installation, setup, operation, and maintenance of your new SmartCode lock.

2. SAFETY INFORMATION

Please read all instructions completely before installing and operating the lock. Failure to follow these instructions could result in damage to the product, property damage, or personal injury.

- Do not use abrasive cleaners or chemicals on the lock.
- Ensure all components are securely fastened before use.
- Keep batteries out of reach of children.
- Dispose of batteries according to local regulations.


3. WHAT'S IN THE BOX

Verify that all the following components are included in your package:

- Electronic Deadbolt (Interior/Exterior)
- Latch
- Strike Plate
- Mounting Plate

- Collar
- Hardware (Screws)
- 2 Keys
- SmartKey Tool
- Installation Manual (this document)

WHAT'S IN THE BOX

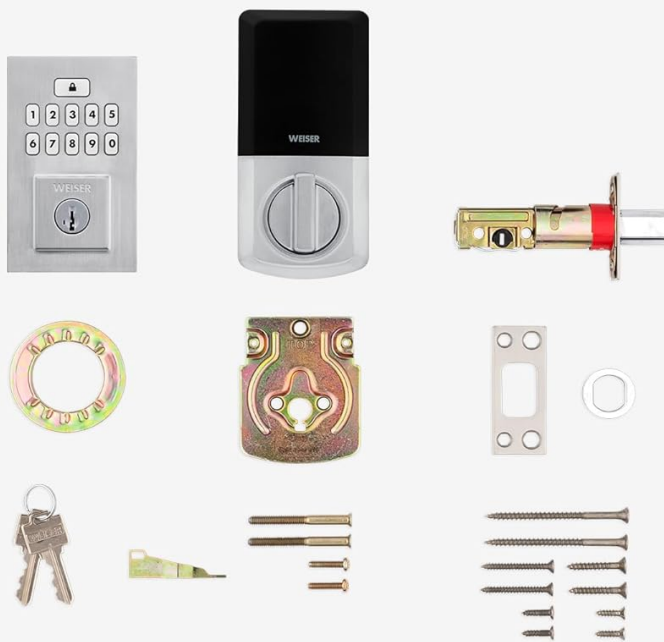

- Exterior Deadbolt
- Interior Deadbolt
- Adjustable Latch
- Strike
- Collar
- Mounting Plate
- Installation Hardware
- 2 Weiser® Keys
- SmartKey™ Tool
- Installation Guide



Image: All components included in the Weiser SmartCode Keyless Entry Door Lock package.

4. FEATURES

The Weiser SmartCode Keyless Entry Door Lock offers a range of features designed for security and convenience:

- **Modern Electronic Door Lock:** Features a fast and quiet motorized deadbolt with one-touch motorized locking. ANSI Grade 2 certified for residential security.
- **Keypad Operation:** Gain entry by simply entering your personalized access code. The keypad is backlit

for increased visibility at night and stays lit for 30 seconds after inactivity.

- **Multiple User Access Codes:** Supports up to 50 user codes and 1 master code option for flexible access management.
- **SmartKey Security:** Re-key your lock in seconds with SmartKey technology. This allows you to maintain key control and protect against lost, stolen, or unauthorized keys without removing the lock from your door.
- **Auto-Lock Function:** Automatically locks the deadbolt after a set period of inactivity, providing peace of mind.
- **Weather Resistant:** Designed to withstand various weather conditions for reliable outdoor use.



Image: The Weiser SmartCode Keyless Entry Door Lock, showing both the exterior keypad and interior deadbolt unit.

MULTIPLE USER ACCESS CODES



Features 50 user access codes
and 1 master code option



50
USER
CODES



1
MASTER
CODE



Image: The keypad of the SmartCode lock, highlighting its capacity for multiple user access codes.



SMARTKEY SECURITY™

ONE KEY FOR ALL YOUR LOCKS™

The lock you can
re-key yourself in
seconds for any
situation, including:

Easily re-key
yourself

Reset tool
goes here



WITH PROTECTION AGAINST
ADVANCED BREAK-IN TECHNIQUES



**Recently
Moved**



**Lost
Keys**



**Multiple
Doors**



**Carry
Fewer Keys**

Image: Illustration of the SmartKey Security feature, demonstrating how to re-key the lock.



Image: The auto-lock feature in action, providing convenience and security.

5. INSTALLATION

The Weiser SmartCode lock is designed for easy installation. It fits standard doors 1-3/8" to 1-3/4" thick with an adjustable backset (2-3/8" or 2-3/4").

5.1 Pre-Installation Check

- Verify your door's thickness and backset measurement.
- Ensure the door frame is properly aligned and the existing strike plate is suitable.

5.2 Installation Steps

1. Prepare the door: If replacing an existing lock, remove it. Ensure the bore hole and backset are correct.
2. Install the latch: Insert the latch into the door edge, ensuring the correct backset is selected.
3. Install the exterior keypad assembly: Feed the cable through the door and secure the keypad.
4. Install the interior assembly: Connect the cable and secure the interior unit to the mounting plate.

5. Install batteries: Insert 4 AA batteries (not included) into the battery pack.

6. Perform door handing process: This calibrates the lock to your door. Follow the specific instructions in the included installation guide.

For detailed, step-by-step interactive 3D instructions with voice and video guidance, download the free BILT app on your smartphone or tablet.

DIMENSIONS

WEISER® SmartCode Keypad Deadbolt



Image: Dimensions of the SmartCode lock components and adjustable latch backset.

6. SETUP AND PROGRAMMING

After installation, you will need to program your master code and user codes.

6.1 Programming the Master Code

The master code is used to add or delete user codes and to configure lock settings. It does not unlock the door.

1. Open the battery cover on the interior unit.

2. Press the Program button once.
3. Enter a new 4-8 digit master code.
4. Press the Lock button.

6.2 Programming User Codes

User codes are used to unlock the door. You can program up to 50 unique user codes.

1. Enter your master code.
2. Press the Lock button.
3. Press the Program button once.
4. Enter a new 4-8 digit user code.
5. Press the Lock button.

6.3 Deleting User Codes

1. Enter your master code.
2. Press the Lock button.
3. Press the Program button twice.
4. Enter the user code you wish to delete.
5. Press the Lock button.

6.4 Using SmartKey Re-key Technology

SmartKey allows you to re-key your lock to work with any other Weiser SmartKey key. This is useful if you move, lose a key, or want all your Weiser locks to use the same key.

1. Insert your currently working key fully into the cylinder.
2. Rotate the key 90 degrees clockwise to the horizontal position.
3. Insert the SmartKey tool firmly and fully into the SmartKey hole.
4. Remove the SmartKey tool.
5. Remove the original key.
6. Insert your new key fully into the cylinder.
7. Rotate the new key 90 degrees counter-clockwise to the vertical position.
8. Remove the new key. Your lock is now re-keyed.



SMARTKEY SECURITY™

ONE KEY FOR ALL YOUR LOCKS™

The lock you can
re-key yourself in
seconds for any
situation, including:

Easily re-key
yourself

Reset tool
goes here



WITH PROTECTION AGAINST
ADVANCED BREAK-IN TECHNIQUES



**Recently
Moved**



**Lost
Keys**



**Multiple
Doors**



**Carry
Fewer Keys**

Image: Detailed steps for using the SmartKey re-keying feature.

7. OPERATING THE LOCK

7.1 Locking the Door

- **From the outside:** Press the Lock button once. The deadbolt will extend automatically.
- **From the inside:** Rotate the turn piece to the vertical position.

7.2 Unlocking the Door

- **Using a User Code:** Enter your 4-8 digit user code on the keypad. The deadbolt will retract.
- **Using a Key:** Insert the key into the cylinder and turn it to unlock.
- **From the inside:** Rotate the turn piece to the horizontal position.

7.3 Auto-Lock Feature

The lock can be set to automatically re-lock after a short delay (typically 30 seconds) once it has been unlocked.

Refer to your specific installation guide for instructions on enabling or disabling this feature.

KEYLESS ENTRY

Makes coming and going
secure and convenient.



Image: Demonstrating the keyless entry function of the SmartCode lock.

EASY LOW LIGHT CODE ENTRY

Keypad is backlit for increased visibility at night. Stays lit for 30 seconds after inactivity.



Image: The backlit keypad provides easy code entry even in low light conditions.

8. MAINTENANCE

8.1 Battery Replacement

The lock operates on 4 AA batteries (not included). When the batteries are low, the lock will provide an audible and/or visual indicator. Replace all four batteries simultaneously with new, high-quality alkaline batteries.

8.2 Cleaning

Clean the lock with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.

9. TROUBLESHOOTING

If you encounter issues with your Weiser SmartCode lock, try the following steps:

- **Lock not responding:** Check battery levels and replace if necessary. Ensure batteries are inserted with correct polarity.
- **Keypad not lighting up:** Verify battery power. The keypad backlight activates upon touch.
- **Lock not locking/unlocking:** Ensure the door is properly closed and aligned. Check for any obstructions in the door frame or deadbolt path. Re-perform the door handing process if the lock was recently installed or moved.
- **Codes not working:** Double-check that the correct master code and user codes are being entered. Try reprogramming the codes.
- **Motor sounds weak:** This is an indication of low batteries. Replace them immediately.

If problems persist after attempting these solutions, please contact Weiser customer support.

10. SPECIFICATIONS

Feature	Specification
Model Number	9GED92600-005
Product Dimensions	6.99 x 2.86 x 13.97 cm
Item Weight	454 g
Color	Satin Chrome
Style	Contemporary
Finish	Brushed
Material	Metal
Lock Type	Deadbolt, Electronic
User Codes	Up to 50
Master Code	1
Door Compatibility	1-3/8" to 1-3/4" thick
Backset	Adjustable (2-3/8" or 2-3/4")
Power Source	4 AA Batteries (not included)
Special Features	Anti-Bump, Auto-Lock, Back-Lit Keypad, One-Touch Lock, Weather Resistant

11. WARRANTY AND SUPPORT

11.1 Warranty Information

The Weiser SmartCode Keyless Entry Door Lock comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, improper installation, or unauthorized modifications.





11.2 Customer Support


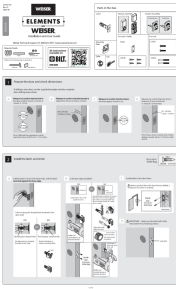
For further assistance, technical support, or warranty inquiries, please visit the official Weiser brand store or contact their customer service department.

Visit the Weiser Brand
Store

© 2025 Weiser. All rights reserved.

Related Documents - 9GED92600-005

	Weiser SmartCode Keypad Electronic Locks Quick Start Guide and Installation Instructions Comprehensive guide for installing, programming, and using Weiser SmartCode Keypad Electronic Locks, covering parts, tools, step-by-step installation, programming features, system alerts, and important safeguards.
	Weiser SmartCode Touchpad Electronic Locks Quick Start Guide Comprehensive guide to installing and programming your Weiser SmartCode Touchpad Electronic Lock, including parts list, tools, step-by-step installation, operation, system alerts, and programming instructions.
	Weiser SmartCode 5 Lever Programming and Troubleshooting Guide A comprehensive guide to programming and troubleshooting the Weiser SmartCode 5 Lever electronic lock, covering mastercode setup, user code management, and common issues.
	Weiser Powerbolt 2 Keyless Entry Door Lock Installation and User Guide Comprehensive guide for installing and using the Weiser Powerbolt 2 Matte Black Keyless Entry Door Lock/Deadbolt Lock. Includes instructions for setup, programming user codes, changing master codes, and troubleshooting.

 <p>User Manual of Product 1: Weiser SmartLock 10 Bolt Mount Keyless Entry Door Lock/Deadbolt Lock, Keypad Door Lock with Push Lock, Up to 20 User Codes, Commercial Electronic Door Handles, Electronic Door Locks for Entry Door</p>	<p>Weiser Powerbolt 2 Keyless Entry Door Lock Installation and User Guide</p> <p>Comprehensive guide for installing and using the Weiser Powerbolt 2 touchpad keyless entry door lock, including setup, programming, troubleshooting, and safety information.</p>
 <p>WEISER ELEMENTS WEISER ELECTRONIC DOOR LOCKS INSTALLATION AND USER GUIDE</p>	<p>Weiser Elements Installation and User Guide</p> <p>Comprehensive installation and user guide for the Weiser Elements electronic door lock, detailing setup, operation, and troubleshooting.</p>