

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AEG](#) /

› [AEG Serie 7000 LR7G84BW 8 kg Front-Load Washing Machine User Manual](#)

AEG LR7G84BW

AEG Serie 7000 LR7G84BW 8 kg Front-Load Washing Machine User Manual

Model: LR7G84BW

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new AEG Serie 7000 LR7G84BW 8 kg Front-Load Washing Machine. Please read these instructions carefully before installation and use, and keep them for future reference. This appliance is designed to provide superior laundry care with advanced features for freshness, efficiency, and hygiene.



AEG
SCEGLI L'ECCELLENZA AEG,
RICEVI UN ANNO*
DI DETERSIVO IN REGALO.

Acquista una lavatrice o una lavasciuga AEG
dal 15 Maggio al 31 Ottobre 2025 e goditi un anno di pods in omaggio,
per un'esperienza di lavaggio impeccabile.



*Modelli in promozione e regolamento su [aeg.it](#)

A clear front view of the AEG Serie 7000 LR7G84BW 8 kg Front-Load Washing Machine, showcasing its modern design and control panel.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your washing machine. It is recommended to have the appliance installed by a qualified technician.

Unpacking

- Remove all packaging materials, including the transport bolts at the rear of the machine. Failure to remove transport

bolts can cause severe damage during operation.

- Check for any visible damage to the appliance.

Positioning

- Place the washing machine on a firm, level floor.
- Adjust the feet to ensure the appliance is perfectly level and stable.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks.
- Position the drain hose correctly into a standpipe or sink, ensuring it is not kinked or submerged in water.
- Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various programs to achieve optimal washing results.

Control Panel Overview

The control panel features a program selector dial, a display screen, and touch buttons for temperature, spin speed, and special functions. Refer to the diagram in your printed manual for specific button locations.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Do not overload the machine. Leave enough space for clothes to tumble freely. The maximum capacity for this model is 8 kg.

Adding Detergent and Additives

- Use the detergent dispenser drawer for liquid or powder detergent, fabric softener, and pre-wash agents.
- Follow the detergent manufacturer's recommendations for dosage based on load size and water hardness.

Program Selection and Start

- Turn the program selector dial to choose the desired washing program.
- Adjust temperature and spin speed using the corresponding buttons if needed.
- Press the Start/Pause button to begin the cycle.

Special Features

Steam Refresh Program

The Steam Refresh program neutralizes odors and reduces creases on all garments, including delicates, in just 25 minutes without the need for a full wash. This helps keep your clothes fresh and tidy.



A visual comparison of a shirt, showing it wrinkled on the left (worn for a day) and smooth on the right after using the Steam Refresh program, highlighting its ability to neutralize odors and reduce creases.

MixLoad 69Min Program


The MixLoad 69Min program provides an optimal balance of time, energy efficiency, and fabric care. It is ideal for mixed loads up to 5 kg, ensuring excellent results in just 69 minutes at 30°C.



The washing machine drum is shown with a colorful mix of clothes, illustrating the MixLoad 69Min program in action, designed for efficient washing of mixed loads.

PreciseWash Technology

PreciseWash technology automatically adjusts the cycle to the weight of each load. For smaller loads, it reduces energy, time, and water consumption by up to 40%, delivering exceptional results while conserving resources.

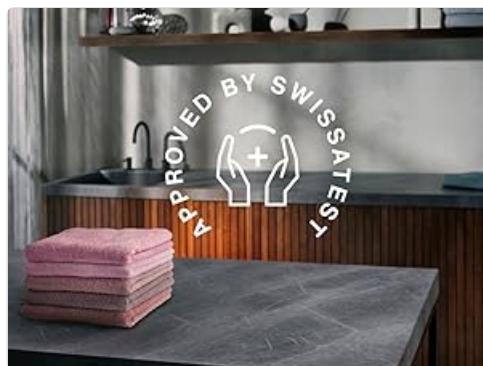

This image illustrates how the PreciseWash technology intelligently adjusts water, time, and energy consumption based on the laundry load size, from small to large, ensuring efficient washing.

Care Drum

The Care Drum features a new design that ensures even softer garments. It minimizes friction and wear on fabrics while providing outstanding washing performance, offering delicate care for your clothes.



A detailed close-up of the Care Drum's textured interior, with water droplets visible, demonstrating its design for gentle fabric treatment and reduced wear.

Hygiene Program

Certified by Swissatest, the Hygiene program removes over 99.99% of viruses and bacteria without compromising washing performance. This ensures deep cleanliness and hygiene for your laundry.



An image featuring the 'Approved by Swissatest' logo alongside neatly folded towels, signifying the Hygiene Program's certified effectiveness in removing viruses and bacteria.

MAINTENANCE

Regular maintenance helps prolong the life of your washing machine and ensures optimal performance.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser

- Remove the detergent dispenser drawer and rinse it under running water to remove any residue.
- Clean the housing of the dispenser with a brush.

Cleaning the Drain Filter

- Periodically clean the drain filter to prevent blockages. Refer to your printed manual for specific instructions on accessing and cleaning the filter.

Drum Cleaning

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean and free of odors.

TROUBLESHOOTING

Before contacting service, consult this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Water not filling	Water tap closed; inlet hose kinked; water pressure too low.	Open water tap; straighten hose; check household water pressure.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten or clear drain hose; clean drain filter.
Excessive vibration/noise	Transport bolts not removed; machine not level; uneven load.	Remove transport bolts; adjust leveling feet; redistribute laundry in the drum.
Poor washing results	Incorrect detergent dosage; wrong program selected; overloaded machine.	Adjust detergent; select appropriate program; reduce load size.

SPECIFICATIONS

Key technical specifications for the AEG Serie 7000 LR7G84BW washing machine.

Brand: AEG

Model Number: LR7G84BW

Product Dimensions: 60 x 57.5 x 85 cm (Depth x Width x Height)

Weight: 74.5 Kilograms

Capacity: 8 Kilograms

Energy Efficiency Rating: A

Special Feature: High efficiency

Access Location: Front Load

Color: White

Material: Plastic

Controls Type: Button



AEG

SCEGLI L'ECCELLENZA AEG,
RICEVI UN ANNO*
DI DETERSIVO IN REGALO.

Acquista una lavatrice o una lavasciuga AEG
dal 15 Maggio al 31 Agosto 2025 e goditi un anno di pods in omaggio,
per un'esperienza di lavaggio impeccabile.



*Modelli in promozione e regolamento su aeg.it



An AEG EcoLine washing machine and dryer are shown side-by-side in a contemporary laundry room, emphasizing the product's energy efficiency and modern aesthetic.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official AEG website. You can also contact AEG customer service for assistance with any product-related inquiries or technical support.