



Manuals.plus /

› Necchi /

› Necchi NKS35 35-Liter Electric Convection Oven User Manual

Necchi NKS35

Necchi NKS35 35-Liter Electric Convection Oven User Manual

Model: NKS35

1. INTRODUCTION

Thank you for choosing the Necchi NKS35 35-liter electric convection oven. This appliance is designed to provide efficient and versatile cooking for your kitchen. Please read this manual carefully before using the oven for the first time to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazards or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the

like, when in operation.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. PRODUCT OVERVIEW

The Necchi NKS35 is a 35-liter electric convection oven designed for versatile cooking. It features double glass doors for improved insulation and a clear view of your food, along with multiple cooking functions.

Components:

- Main Oven Unit
- Temperature Control Knob
- Function Selector Knob
- Timer Knob
- Power Indicator Light
- Double Glass Doors
- Aluminum Baking Tray
- Metal Grill Rack
- Tray Handle



Image 3.1: Necchi NKS35 Electric Convection Oven with indicated dimensions (Width: 51.5cm, Depth: 38.5cm, Height: 33.5cm).



Image 3.2: Included aluminum baking tray.



Image 3.3: Included metal grill rack.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any packaging materials, stickers, or protective films from the oven and its accessories.
3. Check for any damage during transit. If the appliance is damaged, do not use it and contact customer support.

4.2 Placement

- Place the oven on a stable, heat-resistant, and level surface.
- Ensure there is adequate ventilation around the oven (at least 10-15 cm clearance on all sides and above).
- Do not place the oven near flammable materials, curtains, or under wall cabinets.

- Ensure the power cord is not trapped or touching hot surfaces.

4.3 Before First Use

1. Wash the baking tray, grill rack, and tray handle in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the oven with a damp cloth.
3. Plug the oven into a grounded electrical outlet.
4. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (230°C) using the 'Double Grill' function. Ensure the area is well-ventilated during this process. A small amount of smoke or odor is normal during initial use.
5. Allow the oven to cool completely before its first cooking use.

5. OPERATING INSTRUCTIONS

The Necchi NKS35 oven offers various cooking functions to suit your needs.

5.1 Controls

- **Temperature Control Knob:** Adjusts the cooking temperature from ambient to 230°C.
- **Function Selector Knob:** Selects one of the 6 cooking programs.
- **Timer Knob:** Sets the cooking time up to 60 minutes. The oven will automatically turn off when the timer reaches zero.

5.2 Cooking Programs

Turn the Function Selector Knob to choose one of the following programs:

1. **Grill with Convection:** Uses the top heating elements and the convection fan for even grilling and browning.
2. **Upper Grill with Convection:** Activates the top heating elements and convection fan, ideal for dishes requiring heat from above with air circulation.
3. **Double Grill:** Engages both top and bottom heating elements for traditional baking and roasting.
4. **Rotisserie with Upper Grill:** For rotisserie cooking with heat from the top. (Note: Rotisserie function may require specific accessories not always included or may refer to a general capability if the product has a rotisserie spit).
5. **Rotisserie with Double Grill and Convection:** Combines rotisserie with both heating elements and convection for thorough and even cooking of larger items.
6. **Convection Only:** Uses only the convection fan for gentle, even cooking without direct heat, suitable for defrosting or delicate baking.

5.3 General Cooking Steps

1. Place food on the baking tray or grill rack. Use the tray handle to safely insert and remove accessories.
2. Close the double glass doors securely.
3. Select the desired cooking function using the Function Selector Knob.
4. Set the desired temperature using the Temperature Control Knob (up to 230°C).
5. Set the cooking time using the Timer Knob (up to 60 minutes). The power indicator light will illuminate.
6. When the set time elapses, the oven will automatically turn off and a bell will sound.
7. Carefully remove the cooked food using oven mitts and the tray handle.



Image 5.1: Example of a dish cooked in the oven, such as baked fish with vegetables.



Image 5.2: Example of a baked dish, such as lasagna, prepared in the oven.



Image 5.3: Example of a roasted meal, such as chicken with vegetables, cooked in the oven.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

6.1 Cleaning

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. Remove the baking tray, grill rack, and crumb tray (if applicable). Wash these accessories in warm, soapy water. Rinse and dry thoroughly.
3. Wipe the interior surfaces of the oven with a damp cloth and a mild detergent. For stubborn stains, a non-abrasive cleaner designed for ovens can be used. Avoid harsh chemicals or abrasive pads that could damage the surface.
4. Clean the exterior of the oven with a damp cloth. Do not use abrasive cleaners or scourers.
5. Never immerse the main oven unit, cord, or plug in water or any other liquid.
6. Ensure all parts are completely dry before plugging the oven back in and using it.

6.2 Storage

When not in use, ensure the oven is clean, dry, and unplugged. Store it in a cool, dry place away from direct sunlight and moisture.

7. TROUBLESHOOTING

If you encounter any issues with your Necchi NKS35 oven, please refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is properly plugged into a working outlet. Check your home's circuit breaker. Set the timer to the desired cooking duration.
Food not cooking evenly.	Incorrect rack position; overcrowding; temperature too low.	Adjust rack position for optimal heat distribution. Avoid overcrowding the oven. Increase temperature if necessary. Utilize convection function for more even cooking.
Smoke or odor during initial use.	Residual manufacturing oils.	This is normal during the first few uses. Ensure good ventilation. It should dissipate after a short period.
Timer not working.	Timer knob not properly set.	Ensure the timer knob is turned past the 'off' position and set to a specific time.

8. SPECIFICATIONS

- **Brand:** Necchi
- **Model:** NKS35
- **Capacity:** 35 Liters
- **Power:** 1500W
- **Dimensions (L x W x H):** 51.5 cm x 38.5 cm x 33.5 cm
- **Weight:** 9.12 kg
- **Temperature Range:** Up to 230°C
- **Timer:** Up to 60 minutes with bell
- **Special Features:** Convection fan, Double glass doors, 6 cooking programs, Adjustable thermostat, Internal light

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact your local Necchi distributor. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Necchi website or contact their customer service department.