

- Manuals.plus /
- › VIKICON /
- › VIKICON Unisex Hair Trimmer HT-871 Instruction Manual

VIKICON HT-871

VIKICON Unisex Hair Trimmer Instruction Manual

MODEL: HT-871

1. Introduction and Overview

Thank you for choosing the VIKICON Unisex Hair Trimmer HT-871. This cordless electric razor is designed for efficient and comfortable grooming for both men and women. It features a waterproof design for wet and dry use, adjustable length guards, an integrated LED light for precision, and removable ceramic blade heads for easy maintenance. With a 60-minute continuous shaving capability on a full charge, this trimmer is engineered to provide a smooth, nick-free, and pain-free grooming experience across various body areas.



Image: The VIKICON HT-871 trimmer in yellow, alongside its product packaging, highlighting its compact design and vibrant color.

2. Product Features

- **Cordless Operation:** Provides freedom of movement during grooming.
- **IPX7 Waterproof:** Suitable for both wet and dry use, including in the shower.
- **Adjustable Length Guards:** Includes 3mm, 6mm, and 12mm guards for customized trimming lengths.
- **Built-in LED Light:** Illuminates the grooming area for enhanced visibility and precision.
- **Removable Ceramic Blade Heads:** Designed to minimize nicks and snags, and are detachable for easy cleaning.
- **Long Battery Life:** Offers up to 60 minutes of continuous use on a full charge.
- **Ergonomic Design:** Ensures a comfortable and secure grip during use.



Image: A visual representation of the trimmer with callouts for its key features, including LED light, cordless design, waterproof capability, high power with low vibration, ergonomic grip, and adjustable guide combs.



Image: A diagram illustrating the internal design benefits of the trimmer, such as noise reduction, friction minimization, extended blade life, and efficient hair removal.

3. Setup

1. **Unboxing:** Carefully remove all components from the packaging: the VIKICON HT-871 trimmer, adjustable guide comb, USB-C charging cable, cleaning brush, and charging stand.
2. **Initial Charge:** Before first use, fully charge the trimmer. Connect the USB-C charging cable to the port at the bottom of the trimmer and plug the other end into a compatible USB power source (e.g., laptop, power bank, adapter, car charger). The LED indicator will show charging status. A full charge provides approximately 60 minutes of continuous use.
3. **Attach Guide Comb:** Select the desired length guard (3mm, 6mm, or 12mm) and securely attach it to the trimmer head. Ensure it clicks into place firmly.

WHAT'S IN IT?



Image: All components included in the VIKICON HT-871 package, laid out for clear viewing.



Image: A close-up view of the USB-C charging port, indicating where the charging cable connects.



Image: The trimmer securely positioned in its dedicated charging stand.

4. Operating Instructions

1. **Power On/Off:** Press the power button located on the front of the trimmer to turn it on or off. The LED light will illuminate when the device is active.
2. **Choosing Your Trim:**
 - For a close shave, use the trimmer without any guide comb.
 - For specific lengths, attach one of the provided guide combs (3mm, 6mm, or 12mm).
3. **Grooming Technique:** Hold the trimmer flat against the skin and move it slowly against the direction of hair growth. The built-in LED light will help you see fine hairs and ensure no spots are missed.
4. **Wet or Dry Use:** The IPX7 waterproof rating allows for comfortable use in the shower or with shaving cream/gel for a smoother experience. Ensure the charging port cover is securely closed during wet use.

**100% WATERPROOF WET
& DRY USE**



Image: A user demonstrating the trimmer's waterproof feature by using it in a shower setting.

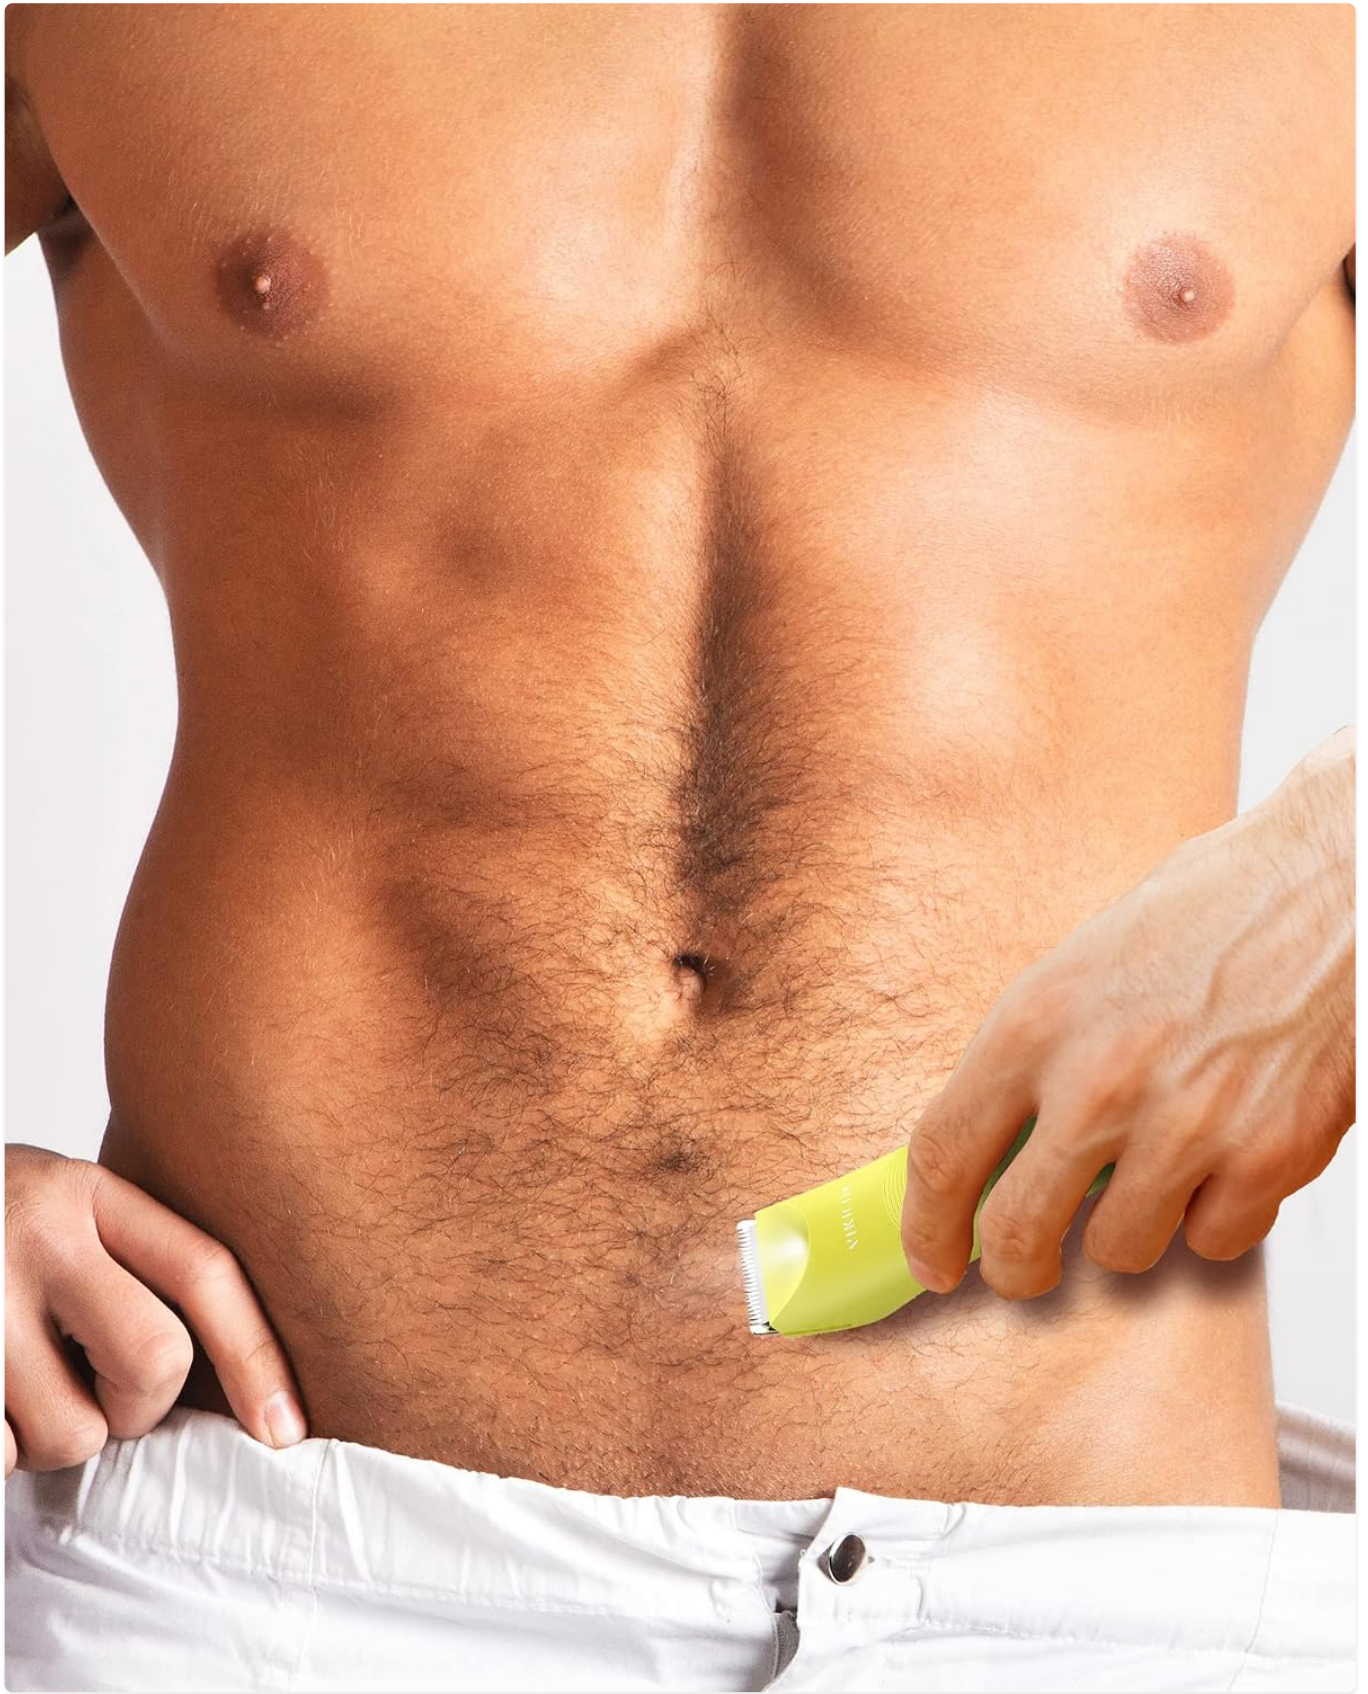


Image: A user demonstrating the trimmer's application for body hair grooming on the torso area.



Image: The trimmer's blade gently touching a kiwi, symbolizing its skin-safe and nick-free trimming capability.

5. Maintenance

1. **Cleaning the Blade Head:** After each use, detach the ceramic blade head by gently pushing it off the trimmer body. Rinse the blade head under running water to remove hair and debris.
2. **Using the Cleaning Brush:** For stubborn hair or dry cleaning, use the provided cleaning brush to clear hair from the blades and inside the trimmer head.
3. **Cleaning the Trimmer Body:** The main body of the trimmer can be rinsed under water. Ensure the charging port cover is closed. Wipe the body dry with a clean cloth.
4. **Storage:** Store the trimmer in a cool, dry place. Use the provided travel bag for protection when not in use or during travel.



Image: An exploded view showing the individual components of the trimmer's blade head, illustrating its modular design for easy cleaning.



Image: A hand rinsing the detachable blade head under running water, demonstrating the ease of cleaning.

6. Troubleshooting

Problem	Possible Cause	Solution
Trimmer not turning on.	Low battery or not charged.	Ensure the trimmer is fully charged. Check the charging cable and power source.
Trimmer pulling hair or not cutting effectively.	Blades are dull, clogged with hair, or not properly aligned.	Clean the blade head thoroughly using the brush and water. Ensure the blade head is securely attached. If issues persist, consider replacing the blade head.
Trimmer not holding a charge.	Battery degradation or charging port issue.	Ensure the charging cable is fully inserted. Try a different USB power source. If the problem continues, contact VIKICON customer support.
Adjustable guard slips during use.	Guard not securely attached or worn out.	Ensure the guard is firmly clicked into place. If it continues to slip, the guard may need replacement.

7. Specifications

Feature	Detail
Model Name	HT-871
Power Source	Battery Powered (1 Lithium Ion battery included)
Waterproof Rating	IPX7
Continuous Shaving Time	Up to 60 minutes
Adjustable Guard Lengths	3mm, 6mm, 12mm
Special Features	Dry Shave, Ergonomic Design, LED Light, Portable
Product Dimensions	5.91 x 1.57 x 1.38 inches
Weight	14.07 ounces
Manufacturer	VIKICON

8. Safety Information

Always use with caution to avoid cuts. Do not submerge in water or use while charging. Keep away from children and store safely to prevent choking hazards.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

9. Warranty and Support

VIKICON offers a **2-Year Free Replacement** for this product. For any inquiries, technical assistance, or warranty claims, please contact VIKICON customer support. Our team is available for quick replies to ensure your satisfaction. For further support, please visit the official VIKICON Store or refer to the contact information provided with your product packaging.

© 2023 VIKICON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question