

[Manuals.plus](#) /

› [GWALSNTH](#) /

› GWALSNTH 32000 in 1 Pandora Box 60S Arcade Games Console User Manual

GWALSNTH SDL13000

GWALSNTH 32000 in 1 Pandora Box 60S Arcade Games Console User Manual

Plug and Play Video Game Console with 1280x720 Display, 3D Games, and Multi-Player Support

1. PRODUCT OVERVIEW

The GWALSNTH Pandora Box 60S Arcade Games Console is a versatile plug-and-play system designed for an immersive gaming experience. It comes pre-loaded with a vast library of games and offers various features for enhanced playability.



Image 1.1: The GWALSINTH Pandora Box 60S Arcade Games Console, featuring dual joysticks and multiple buttons, connected to a monitor displaying a fighting game.

Key Features:

- **Extensive Game Library:** Includes 32000 pre-installed games, with 161 3D games, offering a wide variety of genres such as arcade, fighting, shooting, sports, and puzzle games.
- **High-Definition Display:** Supports 1280x720P VGA and HDMI high-definition video output for clear and vibrant visuals.
- **Upgraded 3D System:** Provides faster game speed and an enhanced arcade control experience.
- **Wide Compatibility:** Connects seamlessly with TVs, PCs, Xbox 360, PS3, monitors, and projectors.
- **Multi-Player Support:** Accommodates 1-4 players, allowing for shared gaming fun.
- **Convenient Functions:** Features include game search, game classification, pause, save, and resume game functions, along with customizable buttons.

2. SETUP GUIDE

2.1 What's in the Box

Before you begin, ensure all components are present in the package:



Image 2.1: All included accessories: the Pandora Box 60S Games Console, Power Adapter, HDMI Cable, VGA Cable, User Manual, and two replacement buttons.

- 1 x Pandora Box 60S Games Console
- 1 x Power Adapter
- 1 x HDMI Cable
- 1 x VGA Cable
- 1 x User Manual
- 2 x Replacement buttons

2.2 Connecting Your Console

The console is designed for easy plug-and-play setup with various display devices.

1. **Power Connection:** Connect the provided Power Adapter to the console's power input port and then plug it into a wall outlet.
2. **Video Output:** Choose either the HDMI Cable or the VGA Cable to connect the console to your desired display device (TV, PC monitor, or projector).
3. **External Controllers (Optional):** For 3 or 4 player games, connect additional USB controllers to the USB

ports on the console.



Image 2.2: Connection diagram illustrating how to connect the console via HDMI or VGA to a TV, computer monitor, or projector, and how to connect external USB controllers.

2.3 Initial Power On

Once connected, locate the power switch on the back of the console and turn it on. The console will boot up and display the main game selection interface on your connected screen.

Video 2.1: An overview of the GWALSINTH Pandora Box Arcade Games Console, demonstrating its plug-and-play functionality, connectivity options, and the quality of its interface and game emulation.

3. OPERATING INSTRUCTIONS

3.1 Navigating the Interface

The console features an intuitive interface for easy game selection and management.



Image 3.1: The Pandora Treasure 3D System interface highlighting features like 1280*720 Full HD, 3D Games, Smart Game List, Hide Games, Pause Game, Search Games, Recently List, Favorite List, and 1-4 Player support.

- Use the joysticks to navigate through the game list.
- Press the 'A' button (or equivalent) to select a game.
- Utilize the 'Search Games' function to quickly find specific titles.
- Games are categorized for easier browsing (e.g., Recent, 3D Games, Fighting, Action, Shooting, Sports, Puzzle).



Image 3.2: The game category selection screen, showing options like Recent, Search, 3D Games, 3P/4P, Fighting, Action, Shooting, Sports, and Puzzle.

3.2 Game Play and Functions

- **Starting a Game:** Select your desired game and press the appropriate button to start.
- **Pause/Save/Resume:** During gameplay, you can pause the game, save your progress, and resume later. Refer to the on-screen prompts or the user manual for specific button combinations.

- **Customizable Buttons:** The console allows for button customization to suit your playing style.

Customiered buttons

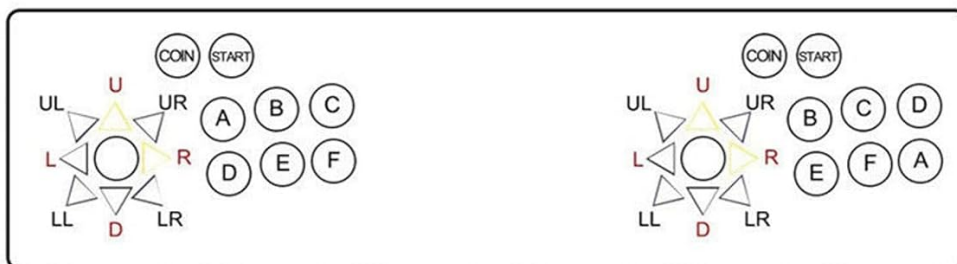
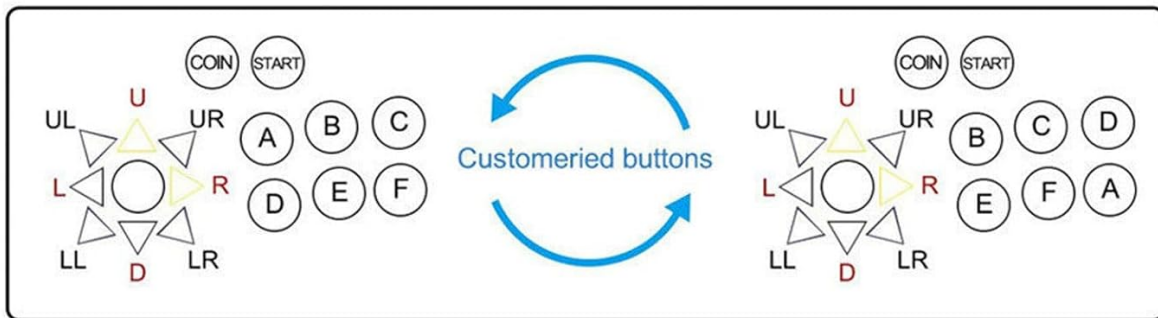


Image 3.3: A diagram illustrating how buttons can be customized on the console, showing different possible mappings for the action buttons (A, B, C, D, E, F) and joystick directions (UL, UR, L, R, LL, LR, D).

3.3 Multi-Player Gaming

The console supports up to 4 players simultaneously. For 3 or 4 players, connect additional USB controllers as described in the Setup Guide.



Image 3.4: A family enjoying multi-player gaming with the GWALSNTN console projected onto a large screen, demonstrating the console's ability to support up to 4 players.

4. MAINTENANCE

To ensure the longevity and optimal performance of your console, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the console's surface. Avoid abrasive cleaners or solvents.
- **Dust Protection:** Keep the console in a dust-free environment when not in use.
- **Protective Film:** The console may come with a protective film on its surface. You can carefully peel this off before first use for a clearer finish.



Image 4.1: A hand demonstrating the removal of the protective film from the console's surface, ensuring a pristine appearance.

5. TROUBLESHOOTING

If you encounter any issues with your GWALSNTN Pandora Box 60S Arcade Games Console, please refer to the following common solutions:

- **No Display/Black Screen:**

- Ensure the power adapter is securely connected to both the console and a working power outlet.
- Verify that the HDMI or VGA cable is firmly connected to both the console and your display device.
- Check that your display device is set to the correct input source (HDMI 1, VGA, etc.).
- Try connecting the console to a different TV or monitor to rule out display issues.

- **No Sound:**

- Check the volume settings on your TV/monitor and on the console itself.
- Ensure the HDMI cable is properly connected, as it carries both video and audio.

- **Buttons/Joysticks Unresponsive:**

- Restart the console.
- Ensure no debris is obstructing the buttons or joysticks.
- If an external controller is unresponsive, try plugging it into a different USB port or using a different controller.

- **Game Glitches or Freezing:**

- Restart the game or the console.
- Ensure the console is placed in a well-ventilated area to prevent overheating.

For further assistance or if you need a complete games list, please contact GWALSNTH customer support via Amazon message. On the product page, click on 'GWALSNTH' (usually on the right side) and then 'Ask a question'.

6. PRODUCT SPECIFICATIONS

Detailed technical specifications for the GWALSNTH Pandora Box 60S Arcade Games Console:



Image 6.1: The console is powered by a professional game chip featuring an 8-Core CPU and 32GB RAM for smooth performance.

Feature	Specification
Platform	Xbox (Compatibility)
Controller Type	Joystick, Button Control
Screen Size (Reference)	32 Inches (for connected display)

Power Source	Corded Electric
Hardware Interface	VGA, HDMI
Display Type	Digital
Material	Metal
Memory Storage Capacity	32 GB
Form Factor	Full Size
UPC	706352814202
Product Dimensions	8.66 x 2.56 x 25.2 inches
Item Weight	8.58 pounds
Country of Origin	China
Item Model Number	SDL13000
Manufacturer Recommended Age	5 years and up
Manufacturer	GWLASNTH

7. WARRANTY AND CUSTOMER SUPPORT

GWLASNTH is committed to providing high-quality products and excellent customer service. For any questions, concerns, or warranty inquiries regarding your Pandora Box 60S Arcade Games Console, please reach out to our support team.

Contacting Support:

The most efficient way to contact us is through the Amazon messaging system. On the product page, locate and click on the 'GWLASNTH' seller name, then select 'Ask a question' to send us a direct message. Our team will respond promptly to assist you.