

PERFASCIN RC-G008

PERFASCIN RC-G008 Universal Remote Control Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the PERFASCIN RC-G008 Universal Infrared Remote Control. Designed for broad compatibility, this remote operates various television brands including LG, Samsung, Sony, Panasonic, Philips, Sharp, Toshiba, Hitachi, Vizio, TCL, JVC, and Hisense. It requires no programming or pairing, offering a straightforward solution for TV control.

2. PRODUCT OVERVIEW

The PERFASCIN RC-G008 is a replacement infrared remote control featuring a standard layout for easy navigation and control of your television. Its ergonomic design ensures comfortable handling.





Image 1: Front view of the PERFASCIN RC-G008 Universal Remote Control. This image displays the full button layout, including power, input, channel, volume, navigation, and dedicated buttons for various TV brands and functions like Netflix and Smart TV.

Key features include:

- Universal compatibility with multiple TV brands.
- No programming or pairing required.
- Infrared (IR) technology for reliable communication with your TV.
- Dedicated buttons for common functions and specific TV brands.

3. SETUP

Setting up your PERFASCIN RC-G008 remote control is a simple process.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No additional programming or pairing steps are necessary.

4. OPERATING INSTRUCTIONS

The PERFASCIN RC-G008 remote control functions similarly to your original TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

4.1 Basic Functions

- **Power Button:** Press to turn your TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Volume Up/Down:** Adjusts the television's volume level.
- **Channel Up/Down:** Changes the television channel.
- **Number Buttons (0-9):** Directly select channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.

4.2 Smart TV and Special Functions

The remote includes buttons for common smart TV features and specific brand functions:

- **Smart Button:** Accesses your TV's smart hub or main menu.
- **Netflix Button:** Provides direct access to the Netflix application.
- **CC (Closed Caption) Button:** Toggles closed captions on or off.
- **Menu/Apps Buttons:** Accesses TV menus or application lists.
- **Color Buttons (A, B, C, D):** These buttons typically correspond to specific functions within TV menus or interactive applications, as indicated on your TV screen.

5. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your PERFASCIN RC-G008 remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only certain advanced functions (e.g., Smart TV features) are not working, verify that your TV model supports these functions with a universal remote.
- **Remote Controls Other Devices:**
 - The RC-G008 is designed for televisions. If it is inadvertently controlling other IR-enabled devices, ensure those devices are not in the direct line of sight of the remote or are powered off if not in use.

7. SPECIFICATIONS

Feature	Detail
Model Number	PF-RC-G008-CSN3-YK
Product Dimensions	6 x 5 x 0.55 inches
Item Weight	1.4 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Television (LG, Samsung, Sony, Panasonic, Philips, Sharp, Toshiba, Hitachi, Vizio, TCL, JVC, Hisense)
Special Features	Ergonomic, No Programming Required, Universal
Color	Black

8. SUPPORT

For any questions or further assistance regarding your PERFASCIN RC-G008 Universal Remote Control, please contact PERFASCIN customer support. Refer to your purchase documentation or the retailer's website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question