

Tower T17102

Tower T17102 Vortex Vizion Dual Compartment Air Fryer Oven User Manual

Model: T17102 | Brand: Tower

INTRODUCTION

Welcome to the user manual for your Tower T17102 Vortex Vizion Dual Compartment Air Fryer Oven. This appliance is designed to provide efficient and versatile cooking with its innovative features. The Vortex technology ensures rapid air circulation for faster cooking and healthier results, requiring little to no oil. With its dual compartments, you can cook different foods simultaneously, making meal preparation convenient and efficient.

Please read this manual thoroughly before first use to ensure safe and optimal operation of your air fryer.

PRODUCT OVERVIEW








The Tower T17102 Vortex Vizion Dual Compartment Air Fryer Oven, featuring a digital touch panel and 11L capacity.

The Tower Vortex Vizion Dual Compartment Air Fryer Oven is equipped with two large 5.5L individual ovens, offering ultimate cooking versatility. Its digital touch panel provides easy control over various functions and pre-sets.

Key Features:

- **VORTX Air Frying Technology:** Rapidly circulates hot air for up to 30% faster cooking and a crispy texture with little to no oil.
- **5 Ways to Cook:** Versatile functions including Air Fry, Roast, Bake, Grill, and Dehydrate.
- **Pre-set Meal Time Classics:** 10 one-touch pre-sets for common dishes.
- **Duo Compartment Technology:** Two independent cooking zones for simultaneous preparation of different foods.
- **Vizion Viewing Window:** Allows monitoring of cooking progress without opening the drawers.

T17102 VIZION 11L DUAL SIDED AIR FRYER OVEN

-  5 Innovate cooking methods
-  Duo-Compartment technology
-  10 Pre-set meal time classics
-  Vortx™ technology 99% less fat
-  Save up to 70% on energy



An overview of the Tower T17102's main features, including 5 cooking methods, dual compartments, 10 pre-sets, Vortx technology, and energy saving.



Illustration of the five versatile cooking methods available with the air fryer: Air Fry, Grill, Roast, Bake, and Dehydrate.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wipe down the exterior of the air fryer with a soft, damp cloth. Wash the removable baskets and crisper trays with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface. Ensure there is at least a 150mm (6 inches) gap between the air fryer, walls, and any overhead cupboards to allow for proper ventilation. Do not place directly against a wall or near heat sources like gas hobs.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **First Run (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (392°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure good ventilation during this process.

Your browser does not support the video tag.

This video provides a brief overview of the Tower T17102 Air Fryer, demonstrating its appearance and key features.

OPERATING INSTRUCTIONS

Digital Touch Panel:

The air fryer features an intuitive digital touch panel for easy operation. The panel allows you to select cooking modes, adjust temperature and time, and utilize special functions like 'Sync Finish' and 'Match Cook'.



The digital control panel showing various pre-set icons for different food types and the Vizion viewing window feature.

Cooking Modes and Pre-sets:

Choose from 5 primary cooking methods: Air Fry, Roast, Bake, Grill, and Dehydrate. Additionally, 10 pre-set options are available for common dishes such as fries, toast, cake, vegetables, chicken, wings, steak, fish, and shrimp. Simply select the desired pre-set, and the air fryer will automatically set the optimal temperature and time, which can be adjusted manually if needed.

Duo Compartment Technology:


The two independent 5.5L compartments allow you to cook different items simultaneously. Each compartment can be set to a different temperature and time.




Demonstration of the dual compartments and the 'Sync Finish' function, allowing different foods to finish cooking at the same time.

Sync Finish and Match Cook:

- **Sync Finish:** This feature allows you to cook two different foods with different cooking times and temperatures, ensuring they both finish at the exact same time.
- **Match Cook:** Use this function to quickly set both compartments to the same time and temperature, ideal for cooking larger portions of the same food.

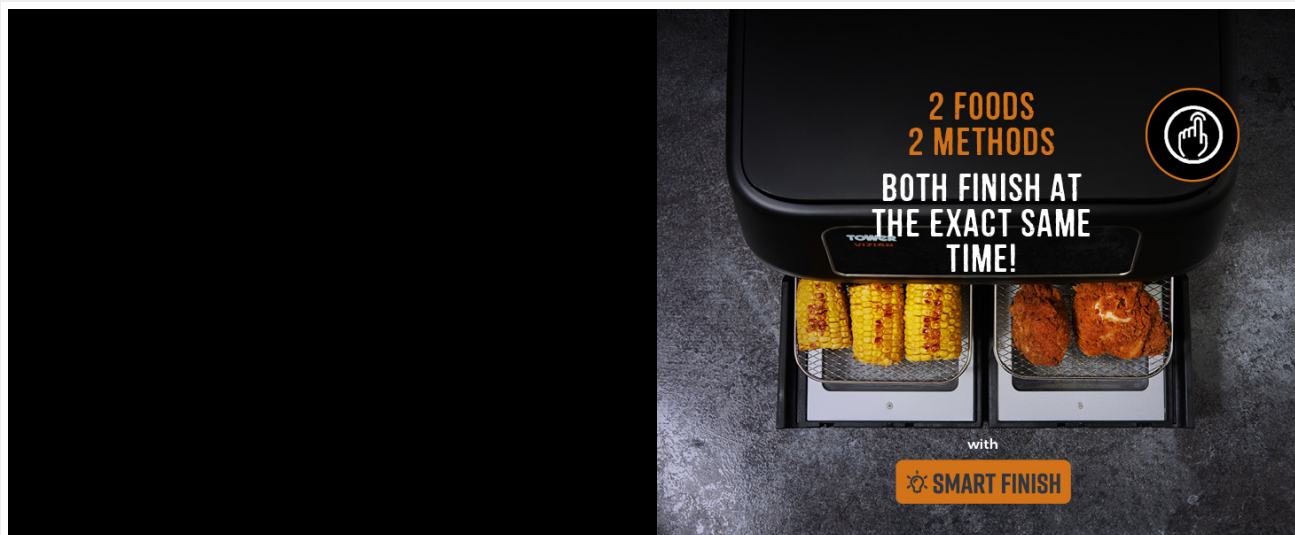

Visual explanation of the 'Smart Finish' feature, ensuring simultaneous completion of different dishes.

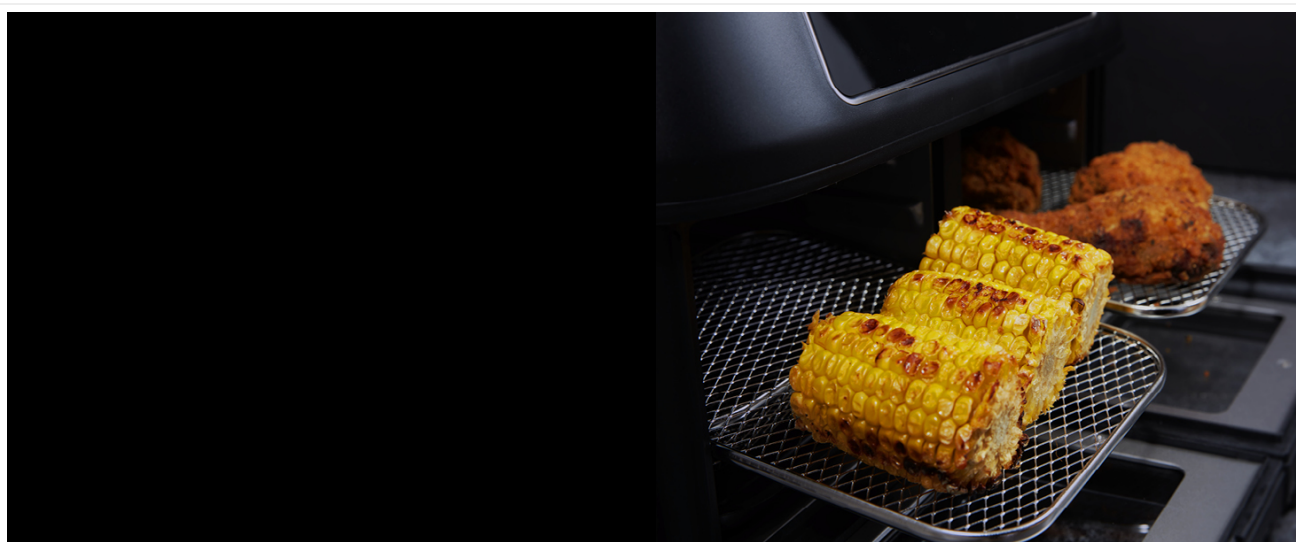

Example of different foods, corn on the cob and chicken, being cooked in the separate air fryer baskets.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Tower Air Fryer. Always ensure the appliance is unplugged and completely cooled before cleaning.

Exterior Cleaning:

Wipe the exterior of the air fryer with a soft, damp cloth. Avoid using abrasive cleaners or scouring pads, as these can damage the finish. Never submerge the main unit in water or any other liquid.

Interior and Basket Cleaning:

The removable baskets and crisper trays are non-stick and can be washed with warm, soapy water. For stubborn food residue, fill the baskets with warm soapy water and let them soak for approximately 30 minutes before wiping clean. Ensure all parts are completely dry before reassembling and storing the air fryer.

Your browser does not support the video tag.

This video provides detailed instructions on the aftercare and cleaning of your Tower Dual Basket Air Fryer to maintain its performance and reliability.



A visual of removing a basket from the air fryer, illustrating the ease of access for cleaning.

STORAGE

When not in use, ensure the air fryer is completely cool and clean. Store it in a dry, clean, and safe place, away from direct heat sources or excessive moisture. If leaving it on a countertop, ensure it is not near any gas hobs or other heat-emitting appliances.

TROUBLESHOOTING

If you encounter any issues with your Tower Air Fryer, please refer to the following common troubleshooting tips:

- **Appliance not turning on:** Check if the power cord is securely plugged into a working electrical outlet. Ensure the baskets are correctly inserted and fully closed.
- **Food not cooking evenly:** Ensure not to overfill the baskets. Shake or flip food halfway through cooking for even results. Check that the temperature and time settings are appropriate for the food being cooked.
- **White smoke from appliance:** This can be caused by grease residue from previous use. Clean the baskets and heating element thoroughly. Ensure no accessories are touching the heating element.
- **Unusual odor during first use:** This is normal for new appliances and will dissipate after a few uses. Ensure good ventilation.

For more detailed troubleshooting, please consult the full instruction manual or contact Tower customer support.

SPECIFICATIONS

Attribute	Detail
-----------	--------

Brand	Tower
Model Number	T17102
Colour	Black
Product Dimensions	31.6 x 40.5 x 32.4 cm
Capacity	11 litres
Power / Wattage	2400 watts
Voltage	240 Volts
Material	Plastic
Auto Shutoff	Yes
Special Features	Dual Zone Features, Temperature Control, Programmable
Item Weight	7.19 kg

WARRANTY AND SUPPORT

Your Tower T17102 Vortex Vizion Dual Compartment Air Fryer Oven comes with a standard 1-year manufacturer's guarantee. An optional 2-year extension is available upon product registration online, providing a total of 3 years of coverage.

**Trusted
Tower® Quality**



***Standard 1 year manufacturer's guarantee
and a 2 year extension, subject to product
registration online**

The Tower 3-Year Guarantee ensures peace of mind for your appliance.

For warranty claims, technical support, or further assistance, please visit the official Tower website or contact their customer service department. Ensure you have your model number (T17102) and proof of purchase readily available.

© 2024 Tower. All rights reserved. Information in this manual is subject to change without notice.



[\[pdf\]](#) User Manual Troubleshooting Guide Specifications Dimension Guide Accessories

Download User Manual Vortex 11 Litre Dual Cavity Air Fryer with Vizion Windows and Smart Finish Fryers Tower Housewares T17102 IM towerrkwholesalelimited 10371 static myshopblocks af46cea9fe44ba6ec3abb249c1843689 |||

MODEL: **T17102** 11 LITRE 2400W DUAL COMPARTMENT AIR FRYER OVEN
USER MANUAL 1 TABLE OF CONTENTS THIS BOX CONTAINS SPECIFICATIONS
IMPORTANT SAFETY INFORMATION General safety Plug and cord Wiring safety
GETTING TO KNOW YOUR AIR FRYER OVEN Control panel and display Structure
of your appliance BEFOR...


lang:en score:27 filesize: 1.94 M page_count: 28 document date: 2022-11-11

Troubleshooting - 2400W DUAL COMPARTMENT AIR FRYER OVEN		
PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not power on.	The appliance has not plugged in. The power switch on the back has not been pressed. The temperature and timer controls have not been set correctly.	Check the appliance is plugged in and the power switch is pressed. Press the ON/OFF/PAUSE key. Check the temperature and timer controls are set correctly. Do not overfill the racks.
The cooking results are not as expected.	There is too much food in the racks. The racks are not correctly placed inside the air fryer. The racks are not correctly placed inside the air fryer.	Do not overfill the racks. Check the racks are correctly placed inside the air fryer. Check the racks are correctly placed inside the air fryer.
Food is not cooking evenly.	Food is not evenly distributed in the racks. The racks are not correctly placed inside the air fryer.	Check the racks are correctly placed inside the air fryer. Check the racks are correctly placed inside the air fryer.
The racks are not cooking evenly.	The racks are not evenly distributed in the racks. The racks are not correctly placed inside the air fryer.	Check the racks are correctly placed inside the air fryer. Check the racks are correctly placed inside the air fryer.
The racks are not cooking evenly.	The racks are not evenly distributed in the racks. The racks are not correctly placed inside the air fryer.	Check the racks are correctly placed inside the air fryer. Check the racks are correctly placed inside the air fryer.

[\[pdf\]](#) Troubleshooting Guide Guide

Troubleshooting Guide Tower T17102 Vortex Vizion Dual Compartment Air Fryer Oven with Digital Touch Panel 11L Black Amazon.co.uk Home Kitchen 71Bf1TAn39L m media amazon images | |||

 Troubleshooting - 2400W DUAL COMPARTMENT AIR FRYER OVEN ...
lang:en score:21 filesize: 139.09 K page_count: 1 document date: 2023-08-09

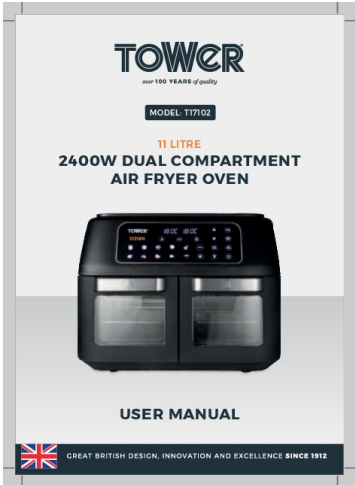


[\[pdf\]](#) User Manual Troubleshooting Guide Specifications Dimension Guide Accessories

2400W DUAL COMPARTMENT AIR FRYER OVEN USER MANUAL A1nt68bk5cL m media amazon images | |||

MODEL: **T17102** 11 LITRE 2400W DUAL COMPARTMENT AIR FRYER OVEN
USER MANUAL 1 TABLE OF CONTENTS THIS BOX CONTAINS SPECIFICATIONS
IMPORTANT SAFETY INFORMATION General safety Plug and cord Wiring safety
GETTING TO KNOW YOUR AIR FRYER OVEN Control panel and display Structure
of your appliance BEFOR...

 lang:en score:18 filesize: 1.73 M page_count: 28 document date: 2022-11-08

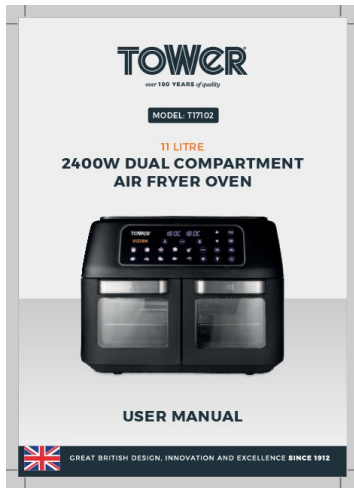

[\[pdf\]](#) User Manual Troubleshooting Guide Specifications Dimension Guide

Accessories

2400W DUAL COMPARTMENT AIR FRYER OVEN USER MANUAL 3340979 IM scottsltd uk BC File

Attachments |||

MODEL: **T17102** 11 LITRE 2400W DUAL COMPARTMENT AIR FRYER OVEN
USER MANUAL 1 TABLE OF CONTENTS THIS BOX CONTAINS SPECIFICATIONS
IMPORTANT SAFETY INFORMATION General safety Plug and cord Wiring safety
GETTING TO KNOW YOUR AIR FRYER OVEN Control panel and display Structure
of your appliance BEFOR...

lang:en score:18 filesize: 21.72 M page_count: 28 document date: 2022-12-19