

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Queenmew](#) /

› **ULPEAK Queenmew Bark Control Device for Dogs: Sonic Deterrent Instruction Manual**

### Queenmew B0BFX73C4T

## ULPEAK Queenmew Bark Control Device for Dogs

Sonic Deterrent Instruction Manual

### INTRODUCTION

The ULPEAK Queenmew Bark Control Device is designed to help manage excessive dog barking by emitting a safe and harmless sonic sound. This device automatically detects dog barks and responds with an ultrasonic tone that is inaudible to humans but effective for dogs. It is suitable for both indoor and outdoor use.

### PRODUCT OVERVIEW

Familiarize yourself with the components of your bark control device:



Image: Labeled diagram of the ULPEAK Queenmew Bark Control Device, highlighting its various parts.

1. **Hung Hole:** For mounting or hanging the device.
2. **Ultrasonic Speaker (Left):** Emits sonic deterrent.
3. **LED Light:** Indicates device status.
4. **Ultrasonic Speaker (Right):** Emits sonic deterrent.
5. **Mode Selection:** Adjusts monitoring distance.
6. **Microphone:** Detects dog barking.
7. **Frequency Switch:** Adjusts the ultrasonic frequency.
8. **Charging Interface (Micro USB DC 5V):** For connecting the USB charging cable.
9. **Sensitivity Switch:** Adjusts the device's sensitivity to barking.

## SETUP

### Charging the Device

Before initial use, fully charge the device. Connect the provided USB cable to the charging interface (8) on the device and to a laptop, PC, or a charger (output current not exceeding 2A). A full charge takes approximately 5 hours and supports up to 30 days of regular use or 60 days in standby mode.

# USB Charging

- 5 hours full charge
- 30 days standby



USB Socket



USB Plug



Power Bank



Laptop Computer



Image: The bark control device being charged via USB, illustrating compatible power sources.

## Placement

Hang or mount the bark control device on a tree, wall, or fence post. Ensure the device is positioned facing the dog and within its effective range. The recommended maximum height for placement is 1.5 meters (approximately 5 feet). The device is IPX4 waterproof, making it suitable for outdoor conditions.

An effective and safe way to train your dog to prevent unnecessary barking

Home

Dog house



Courtyard



Outdoor



Image: The bark control device depicted in different environments, highlighting its suitability for various indoor and outdoor locations.

## OPERATING INSTRUCTIONS

### Powering On and Mode Selection

To power on the device, set the mode selection knob (5) to Level 1, 2, or 3. The blue LED light (3) will flash, indicating the device is active.

# 3 Modes of Monitoring Distance



Image: The device's mode selection dial, showing the three distance settings for bark detection.

- **Mode 1 (Short Distance Monitoring):** Up to 15 feet (approximately 4.5 meters).
- **Mode 2 (Medium Distance Monitoring):** Up to 30 feet (approximately 9 meters).
- **Mode 3 (Long Distance Monitoring):** Up to 50 feet (approximately 15 meters).

The maximum detection range for the device is 10 meters (approximately 33 feet). If the dog is beyond this range, the device may not activate.

## Indicator Lights

- **Blue Light Flashing:** Device is powered on.
- **Blue Light Flashing Every 6 Seconds:** Device is in standby mode.
- **Red Light Stays On for 3 Seconds:** Device has detected barking and is actively working.
- **Red Light Flashing:** Low power. The device needs to be charged or it will cease operation.

## Adjusting Frequency and Sensitivity

The device features adjustable frequency (7) and sensitivity (9) settings to cater to different dog sizes, breeds, and temperaments. Experiment with these settings to find the most effective configuration for your dog.

# Suitable For All Size Dogs

3 Different Sensitivity Levels



**Suitable for dogs from 6 months to 8 years old**

Image: The device shown with a variety of dog breeds, emphasizing its adaptability to different dog sizes and the availability of sensitivity levels.

## Important Note:

Dogs can develop resistance to the same sonic sound over time. To maintain effectiveness, it is recommended to change the frequency or mode every 7 to 10 days.

## MAINTENANCE

- Battery Check:** Check the battery power monthly. If the red light flashes, indicating low power, charge the device promptly.
- Cleaning:** Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the speakers and microphone are free from obstructions.

## IMPORTANT CONSIDERATIONS AND WARNINGS

- Dog's Hearing:** The device relies on sonic sound. If a dog has hearing problems, the device may not work as intended. Deaf dogs will not react to this device.
- Age Range:** This device is intended for dogs aged 6 months to 8 years.
- Multiple Dogs:** Using one device against two or more barking dogs simultaneously is not recommended.

for optimal effectiveness.

- **Aggressive Dogs:** The device is not recommended for use with aggressive dogs.
- **Sound Resistance:** To prevent dogs from becoming accustomed to the sound, change the mode or frequency every 7 to 10 days.
- **Individual Response:** Every dog's behavior and tolerance are unique. Responses to correction methods can vary.



## Use Ultrasonic Sound to Stop Dog Barking

- Safe for human and dogs
- Stop your barking dog
- Stop your neighbors's barking dog
- Train puppies not to bark

Image: A visual representation of the device's intended use, emphasizing its safety and effectiveness in a home environment.

## TROUBLESHOOTING

- **Device Not Activating:**
  - Check battery level; charge if the red light is flashing.
  - Ensure the dog is within the selected monitoring distance (15, 30, or 50 feet).
  - Verify the device is placed facing the dog and the microphone is unobstructed.
- **Device Not Effective:**
  - Adjust the frequency and sensitivity settings.
  - Change the mode (1, 2, or 3) every 7-10 days to prevent the dog from becoming accustomed to the

sound.

- Confirm the dog's age is within the recommended range (6 months to 8 years).
- Consider if the dog has any hearing impairments.

## SPECIFICATIONS

<b>Brand</b>	Queenmew
<b>Model</b>	B0BFX73C4T
<b>Color</b>	White
<b>Package Dimensions</b>	13 x 9 x 8 cm
<b>Item Weight</b>	250 grams
<b>Water Resistance</b>	IPX4
<b>Battery Life (Regular Use)</b>	Up to 30 days
<b>Battery Life (Standby)</b>	Up to 60 days
<b>Charging Time</b>	5 hours

## PACKAGE CONTENTS

Upon opening your package, you should find the following items:



### Packing List:

1 \* Wrist Strap      1 \* USB Cable      1 \* Receiver  
1 \* Warm-tip Cards      1 \* User Manual

Image: The complete package contents of the bark control device.

- 1 x ULPEAK Queenmew Bark Control Device
- 1 x USB Charging Cable

- 1 x Wrist Strap
- 1 x User Manual
- 1 x Warm-tip Cards

## **WARRANTY AND SUPPORT**

---

For any product-related inquiries, technical support, or warranty information, please refer to the contact details provided on the product packaging or the seller's information page where the product was purchased. Keep your purchase receipt for warranty claims.

Documents - Queenmew – B0BFX73C4T

no relevant documents