

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic TX-65LXW834 65-inch 4K HDR UHD LED Smart TV User Manual](#)

## Panasonic TX-65LXW834

# Panasonic TX-65LXW834 65-inch 4K HDR UHD LED Smart TV

User Manual

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your Panasonic TX-65LXW834 65-inch 4K HDR UHD LED Smart TV. Please read these instructions thoroughly before operating the television and retain them for future reference.

The Panasonic TX-65LXW834 is a 4K Android TV designed for high performance and comprehensive comfort. It features an HDR Cinema Display for brilliant colors and optimal brightness, powered by an HCX Processor for precise image quality. Enjoy immersive audio with Dolby Atmos and Surround Sound, and access a wide range of entertainment through its Smart TV capabilities, including popular streaming services and a voice assistant.

## SETUP

### 1. Unpacking and Inspection

- Carefully remove the TV from its packaging.
- Check for any damage during transit. If damage is found, do not proceed with setup and contact your retailer.
- Ensure all accessories are present: remote control, stand, and user manual.

### 2. Stand Assembly

Attach the included stand to the television following the instructions provided in the separate stand assembly guide. Ensure all screws are securely fastened to prevent the TV from tipping.



Image: Front view of the Panasonic TX-65LXW834 65-inch TV with its stand. The television is black with a slim bezel and two feet supporting it from below.

### 3. Connecting Peripherals

- **Power:** Connect the power cord to the TV and then to a wall outlet.
- **HDMI Devices:** Use HDMI cables to connect external devices such as Blu-ray players, game consoles, or set-top boxes to the HDMI ports on the TV.
- **USB Devices:** Connect USB storage devices to the USB ports for media playback.
- **Network:** Connect an Ethernet cable to the LAN port for a wired internet connection, or use the built-in Wi-Fi for wireless connectivity.

### 4. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard. Follow the on-screen prompts to configure:

- Language selection.
- Network connection (Wi-Fi or Ethernet).
- Channel scanning (for broadcast TV).
- Google account setup (for Android TV features).

## OPERATING THE TV

---

### 1. Remote Control Overview

The included remote control allows you to navigate the TV's functions. Key buttons include:

- **Power:** Turns the TV on or off.

- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Input:** Selects the input source (HDMI 1, HDMI 2, USB, etc.).
- **Home:** Accesses the Android TV home screen.
- **Voice Assistant:** Activates the built-in voice assistant for commands and searches.
- **Navigation Pad:** Used to move through menus and select options.

## 2. Smart TV Features (Android TV)

Your TV runs on Android TV, providing access to a vast array of applications and services. From the Home screen, you can:

- Browse and install apps from the Google Play Store.
- Access pre-installed streaming services like Netflix, Apple TV, Disney Plus, and Google TV.
- Use the built-in Chromecast to cast content from your mobile devices.

## 3. Picture and Sound Enhancements

- **HDR Cinema Display:** Experience a wide range of natural colors with optimal brightness and contrast.
- **HCX Processor:** This processor ensures incredibly precise image quality, enhancing details and color accuracy.
- **Dolby Atmos & Surround Sound:** Immerse yourself in rich, multi-dimensional audio for movies, music, and games.

## 4. Game Mode

For an optimized gaming experience, activate Game Mode. This setting reduces input lag, providing a more responsive and fluid gameplay experience.



Image: A person watching a soccer game on the Panasonic TX-65LXW834 TV, illustrating the viewing experience.

## MAINTENANCE

### 1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and TV body. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner.
- Do not use abrasive cleaners, waxes, or solvents as they can damage the finish.

### 2. Software Updates

To ensure optimal performance and access to the latest features, regularly check for and install software updates. Your Android TV may prompt you for updates automatically, or you can manually check through the TV's settings menu (Settings > About > System update).

### 3. Cable Management

Ensure all cables connected to the TV are neatly organized and not kinked or pinched. This helps prevent damage to the cables and ensures reliable connections.

## TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely connected to both the TV and the wall outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check HDMI cable connections for external devices.
No sound	Check the volume level and ensure the TV is not muted. Verify audio cable connections for external sound systems.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Network connection issues	Restart your router and modem. Check Wi-Fi settings on the TV or ensure the Ethernet cable is properly connected.
Software freezes or crashes	Restart the TV by unplugging it from the power outlet for a few minutes, then plugging it back in. Ensure the TV's software is up to date.

If the problem persists after trying these solutions, please contact Panasonic customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	TX-65LXW834
Brand	Panasonic
Screen Size	65 Inches
Display Technology	LED
Resolution	4K (Ultra HD)
Operating System	Android TV
Processor	HCX Processor
Audio Technology	Dolby Atmos, Surround Sound
Connectivity	Bluetooth, Ethernet, HDMI, USB, WLAN
HDMI Ports	Multiple (specific number not detailed, but 'HDMI' and 'HDMI WLAN' are listed)

Feature	Detail
USB Ports	2
Supported Internet Services	Apple TV, Disney Plus, Google TV, Netflix
Included Components	Remote control, support (stand), user manual
Color	Black

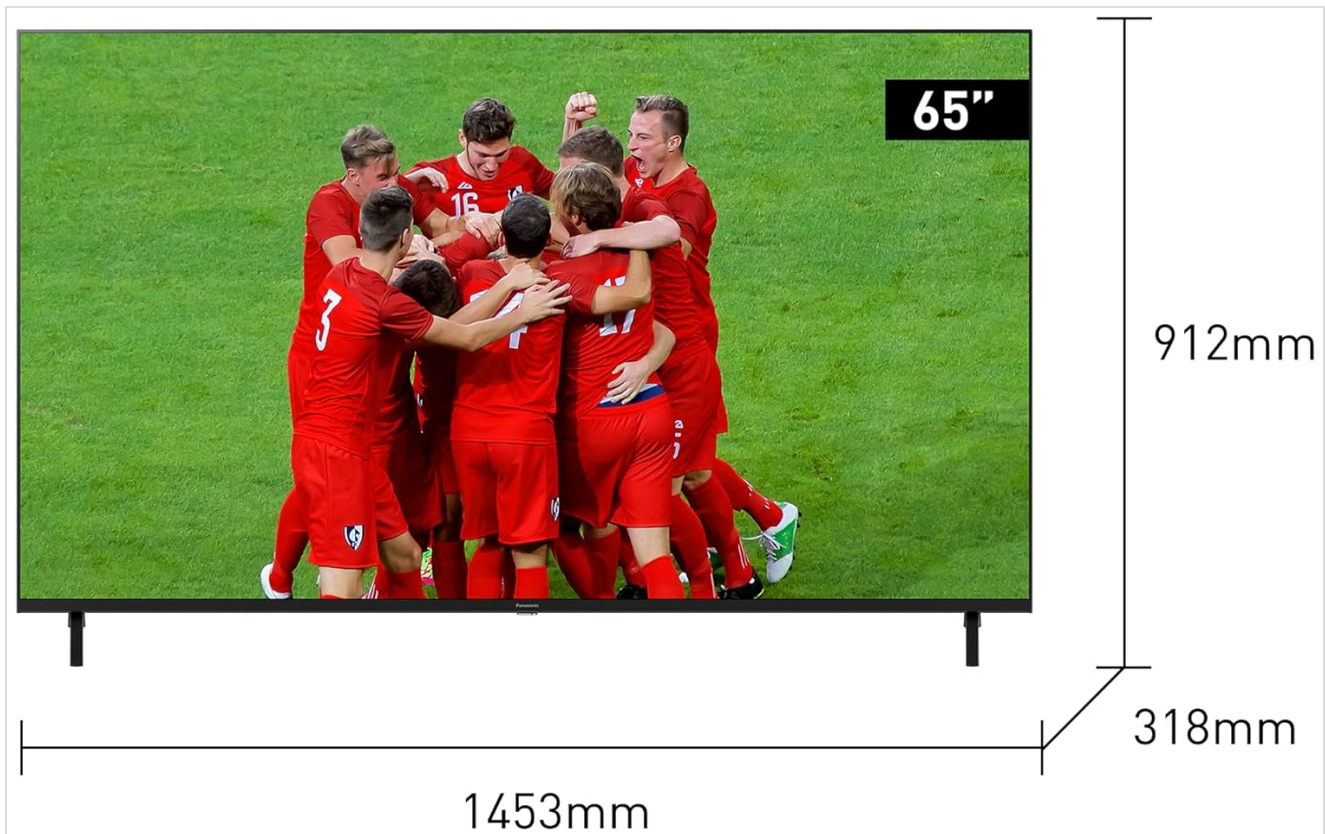


Image: Diagram showing the dimensions of the Panasonic TX-65LXW834 65-inch TV, with measurements for width, height, and depth.

## WARRANTY AND SUPPORT

### Warranty Information

Your Panasonic TX-65LXW834 television is covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Panasonic website for detailed terms and conditions, including warranty period and coverage.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Panasonic customer support. You can find contact information on the official Panasonic website or in the documentation provided with your TV.

For spare parts availability and software update guarantees, please note that specific information was not available at the time of this manual's publication. Please check the official Panasonic support channels for the most current details.

